
 

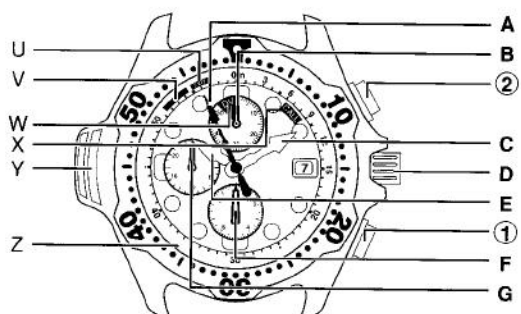

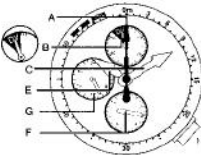



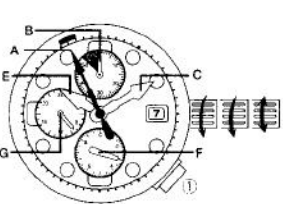




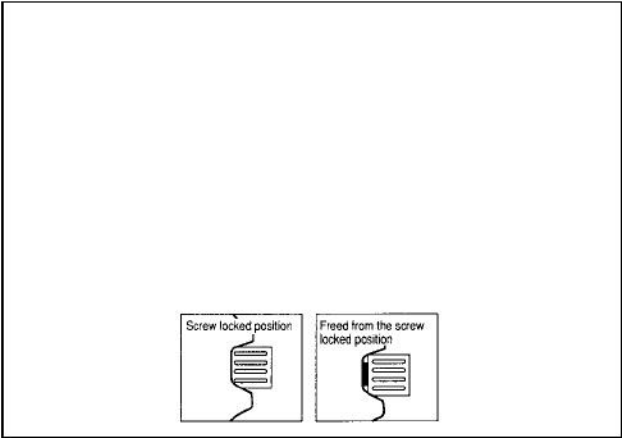




Name	Time Mode	Diving Mode	Chronograph Mode
A : Function hand	Points to EXIT	Indicates depth	Chronograph second hand
B : Mode hand	Points to 0	Points to DV	Chronograph minute hand
C : Minute hand	Always displays minutes		
D : Crown	Used to set time and date		
E : Hour hand	Always displays hours		
F : Second hand	Displays seconds		Chronograph 1/20 second hand
G : 24-hour time hand	Always displays 24-hour time in conjunction with the hour hand		
① Button ①	Used to switch modes, etc.		
② Button ②	Used to call Maximum depth and for chronograph measurements, etc.		

  
U : EXIT...The function hand points to EXIT in the Time Mode.
V : Over Zone Mark...The function hand points to this mark (at the 53 minute position) at depths over than 50 meters(125ft).
W : DV...“DV” means “diving”. The mode hand points to DV when in the Diving Mode.
X : CALL...Pushing Button ② will display the maximum depth memo.
Y : Pressure sensor...Measures depth by sensing water pressure
Z : Depth reading units...Depth readings are indicated in meters or feet, depending on the model.

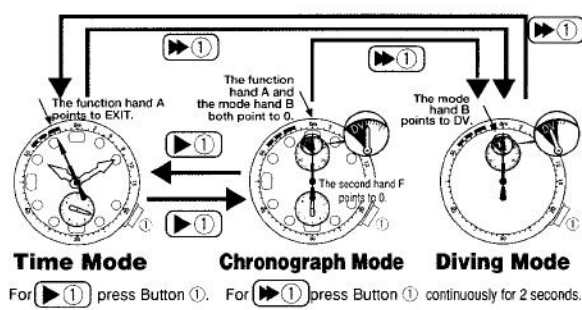



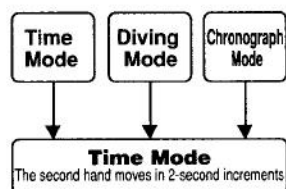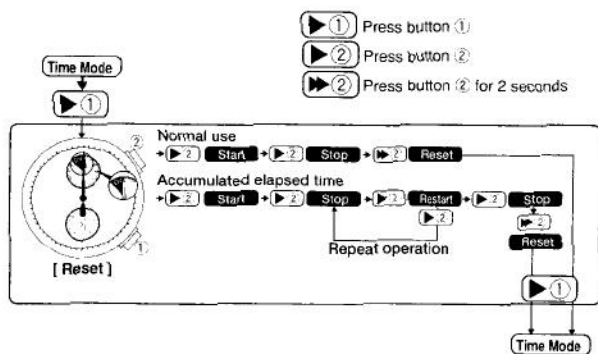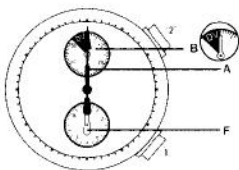

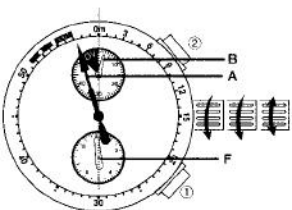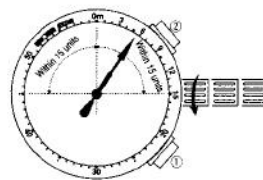

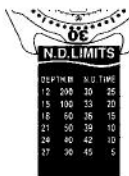

Indication	Water-related use					
Watch Dial						
Water Resist 200m	Light spray, perspiration, light rain, bathing, etc.	Swimming, etc.	Skin diving (Without air tank)	Skin diving (With air tank)	When diving using a helium-enriched environment.	Pulling out the crown when the watch is wet.
Water resistant 200m	OK	OK	OK	OK	NO	NO



