 






ManualsLib.com





 
 
ManualsLib.com



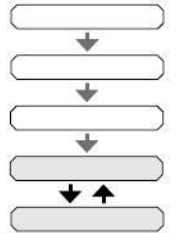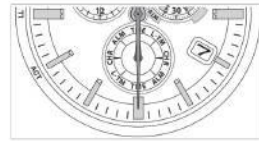




ManualsLib.com

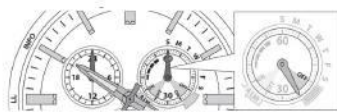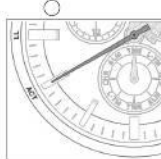

ON	OFF
Connected	Disconnected

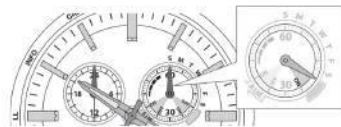



ManualsLib.com





Help

- Instruction manuals
- Official website
- FAD
- Firmware update

12:00 AM 100%

Firmware update of your watch is available.

ManualsLib.com

Firmware update




Setting

- Pairing information >
- Time Sync
- Disconnection time manager >
- Find my smartphone

Notification

- Home
- Local Time
- Alarm
- Light Level
- Notification
- Setting
- Help



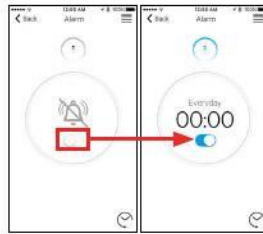


ManualsLib.com





ManualsLib.com

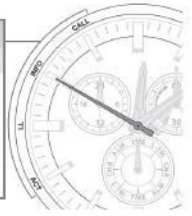

Canceling the notification indication

The second hand showing notification indication does not return to indicate the seconds until the indication is canceled.

- Once manually canceled, notification indication cannot be shown again.



1 Press and hold the lower right button (A) or the upper right button (B) for 1 second while notification is indicated.

The notification indication is canceled and the second hand returns to indicate the seconds.

- Changing the position of the crown also cancels the notification indication.

Enabling notifications

The Notification section controls notification indications of varying options.

- The following is a list of options that can be edited individually.

	Android	Apple	
Link Loss	✓	✓	Within each option may be one of the following.
Phone/Facetime	F*	F	Notify slider
SMS/Messages	F	F	
Mail	✓	F	A slider bar that enables or disables notifications indications.
Inbox by Gmail	✓	✓	
Gmail	F**	✓	Sound and vibration
Calendar	✓	✓	
Reminders	✓	✓	A bell icon that represents sound and vibration added to a notification. • Tapping the icon changes through the different options.
Twitter	F	F	
Facebook	✓	✓	Help symbol
Messenger (Facebook)	✓	✓	
Hangouts	✓	✓	The "question mark" symbol at the bottom right of the screen opens a new menu to better explain the possible options for sound and vibration. • Tapping the "X" icon returns the previous screen.
Instagram	✓	✓	
LINE	✓	✓	F = Filter Available F* = Phone only, FaceTime not available F** = Filters coming soon
LinkedIn	✓	✓	
Skype	✓	✓	
Snapchat	✓	✓	
Uber	✓	✓	
Viber	✓	✓	
WeChat	✓	✓	
Weibo	✓	✓	
WhatsApp	✓	✓	

Filters

Certain options have filter capabilities. Filters allow the user to choose contacts that will be the only recognized notification for a specific option.

All Button

ALL

An "All" button will act as if the filter is off and all incoming notifications will be allowed through.

Select Button

SELECT

The "select" button opens a list of available filter choices. Different options filters will pull from different lists associated with the smartphone.

- Phone, FaceTime, and Messages filters will pull from the users contact list.

Note: Up to 32 filters may be applied on Apple devices. FaceTime only available on Apple devices.

- Mail filters for Apple pull from the users contact that have email accounts.
- Gmail filters for Android pull from the users email accounts directly.
- Facebook, Facebook Messenger, and Twitter filters pull from associated accounts.

Once filter options are available, tapping on the contact will select that contact as a chosen filter by the representation of a check mark.

Check Mark Button



Selecting and deselecting the check mark button enables and disables the whole list of contacts at one time.

- When the check mark is tapped and becomes a light blue color, the entire list of contacts will be chosen and be considered filtered items.
- When the check mark is tapped and becomes a light gray color, the entire list of contacts will be deselected.

Note: Enabling all contacts will act the same as selecting the "All" button. Deselecting all contacts will be the same as turning off the notification.

Uploading information

Certain options will need to be uploaded to the watch in order for the notification options to apply.

- Tapping the upload icon will bring up a loading circle. Once complete, the app will return to previous options.

Note: Not uploading information will cause the watch to remain at the state in memory.



Settings

The Settings section stores interactions between the watch and smartphone.

Pairing Information

The watch can save up to 3 paired saving destinations.

This option will display the name of the smartphone that corresponds to the each save destination.

- The devices name will be based on what the smartphone calls itself within its own settings.



Time Sync

A toggle switch controls if the watch will automatically update the time, based on the time of the smartphone, whenever paired.



Disconnection Time Manager

The app will disconnect with the watch once every date a specific time regardless of connection time.

The user may choose when the disconnection will occur by altering the rotating hour and minute dials.

- The default disconnection time is 12:00 am (midnight).
- The disconnection time manager is displayed on a 24-hour format



Find My Smartphone

A toggle switch controls if the watch will be able to contact the smartphone through the "Find my smartphone" feature.

- For Android devices, smartphone will need to have sound enabled and not be in silent mode to properly operate this feature.
- To dismiss "Find my smartphone" alarm, make sure the app is open and follow the on-screen instructions.



Note: Toggle switches that are:

blue (right) are ON

and

light gray (left) are OFF.



Help

The Help section stores instructions and additional information to aid users operate features of the watch.

At the bottom of the section the current version of the app.

- It is recommended that the user keeps the app updated with the latest version for optimal performance.

Instruction manuals

Digital, PDF, full and abbreviated instruction manuals are available to download and view through this option.

- The instructions have been made available in English, Japanese, French, Spanish, Dutch, Italian, Portuguese, Chinese (traditional and simplified).
- Select the desired language to access the instructions for that language.



Official Website

Access to the official Citizen global website is available through this link. For access to a regional Citizen site, click on the "Select Region" pull down bar at the top right corner of the page.

- For regional support, please contact the correct listed location.



FAQ

A list of frequently asked questions is available through this link.



Firmware Update

Firmware updates are enabled through this option.

- When available, the words "Firmware update" will become dark and a triangle with an exclamation mark ▲ will be present.

- For more details on updating firmware, see page 5.



