

GOLF COMPU-WATCH

INSTRUCTION MANUAL

Dear Customer,

Congratulations!

You are now in possession of this super design "GOLF COMPU-WATCH". You will realize that there are many good features when you read through this manual. A good tip to you is that, you must read the mode function (P.6-7) to understand the logic of this golf compu-watch for easy operation.

CE

- 2 -

CONTENT

Page No.

Features	P.4
Description of Parts	P.5
Basic Logic of Mode Function	P.6 - P.7
LCD Display	P.8
How to Set Time/Date	P.9
How to Set PAR	P.10
How to Enter Score When In Play	P.11
How to Review The Last Record	P.12
How to Review Last 5 Average	P.13
Installing and Replacing Battery	P.14
Notes	P.15


- 3 -

31 AUG 2004


(2) Description of Parts & Keys Function:

(1) Features:

1. Real time, day, month, year display.
2. 4 golf courses available for settings Home 1, 2, 3 and guest.
3. Par, stroke, putt setting for 18 holes.
4. Total 10 games records keeping showing total Par, stroke, putt with month/date.
5. Last record rounds review for each of 18 holes with month & date.
6. Last 5 records' average review to measure your performance.
7. Show total putt against total stroke to check your skill area.
8. 3V lithium battery CR 2032 operation (included).
9. Attachable to belt clip, or watch straps (optional).

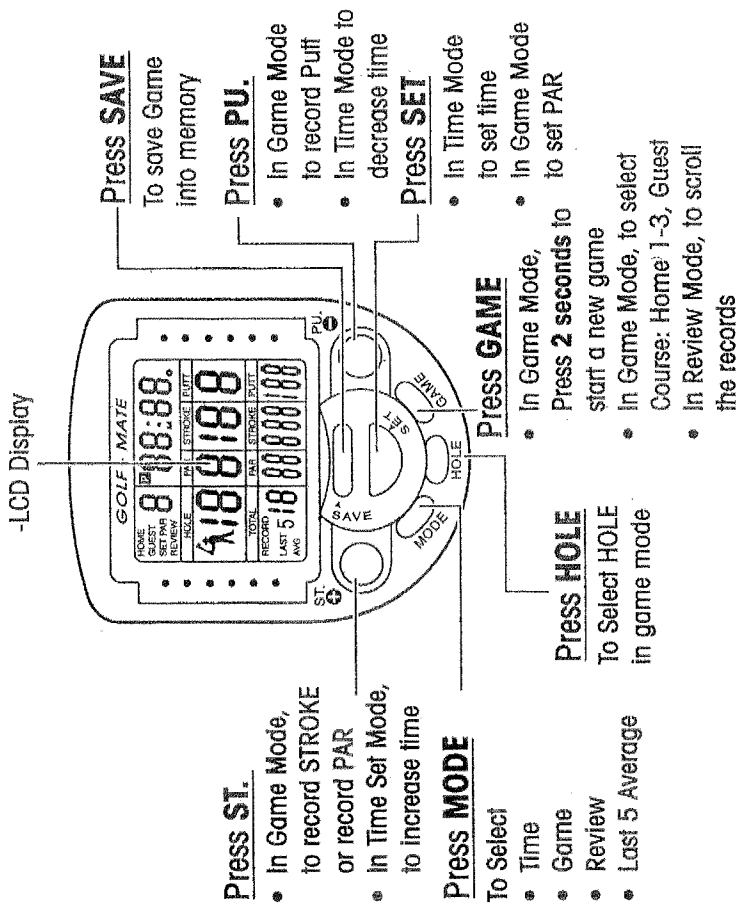

(4) Optional Accessories

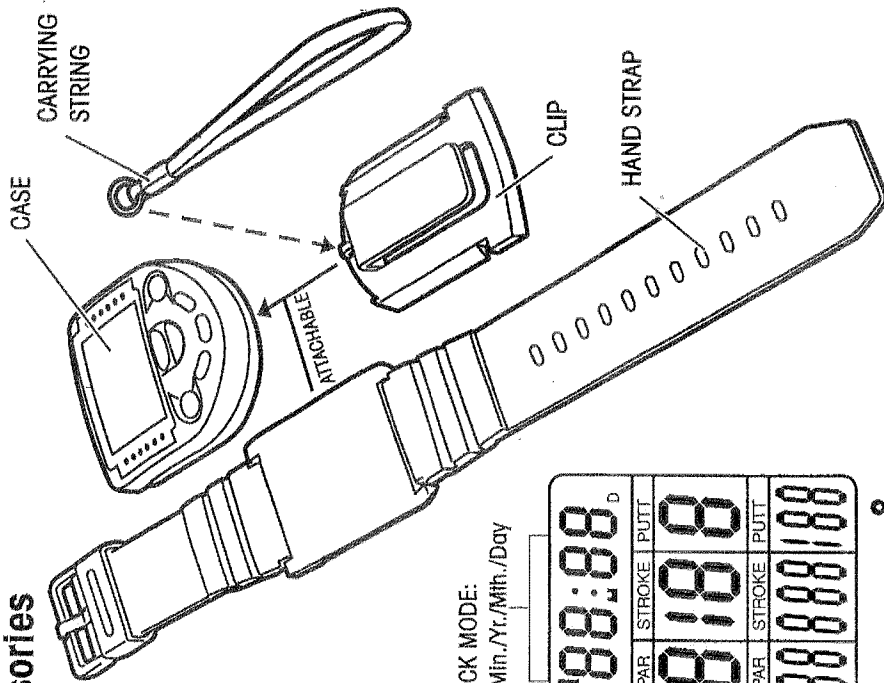


LCD Display

COURSES	HOME	CLOCK MODE: Hr./Min./Yr./Mth./Day		PAR	STROKE	PUTT
SET PAR MODE	GUEST	0	88:88	8	8	8
REVIEW MODE	SET PAR	418	8:18	8	8	8
GAME MODE	REVIEW	TOTAL	RECORD	PAR	STROKE	PUTT
HOLE NO. 1-18	LAST	518	88	88	88	188
AVERAGE MODE	AVG					

(5) How To Set Time/Date


- 1) Press **MODE** to enter into Clock Mode.
- 2) Press **SET** key to enter the real time setting.
- 3) Press **ST/4 / PUT** to adjust hour
- 4) Press **SET** to exit to minute
- 5) Repeat **3 & 4** to adjust min, year, month, day until hr. & min. display

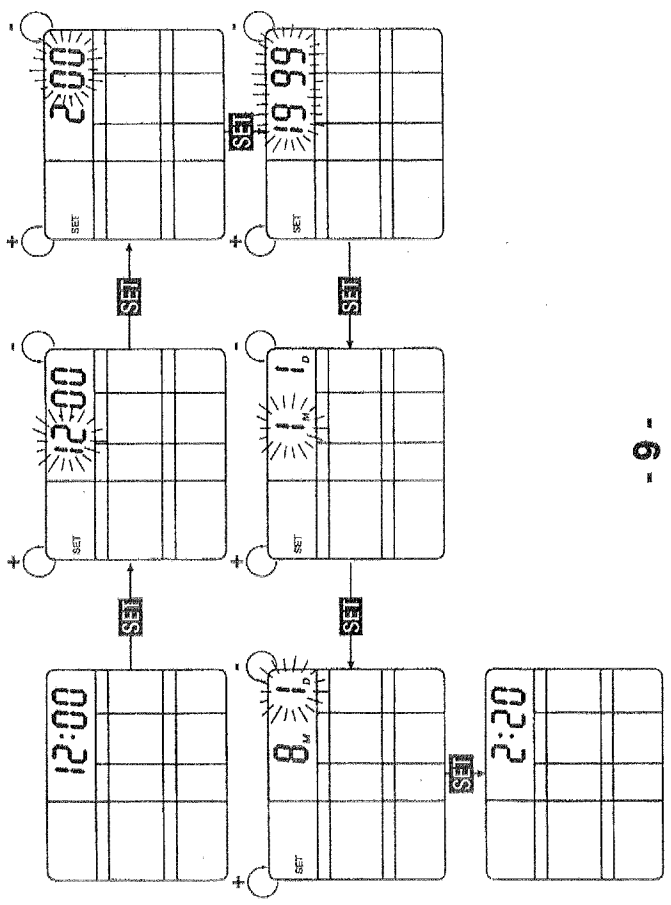

(6) How To Set PAR

Before starting a game, you may key in all the standard **PAR** of each hole of the course.


- 1) Press **MODE** to enter Game Mode
- 2) Press **SET** to enter **PAR** setting " **SET PAR** " will be flashing.
- 3) Press **GAME** to select course, i.e. Home 1, 2, 3, guest.
- 4) Press **HOLE** to select Hole 1
- 5) Press **ST/4** to enter the **PAR**
- 6) Repeat 4 & 5 until 18 holes are set.
- 7) Press **SET** key to save the course setting and exit to start playing game.

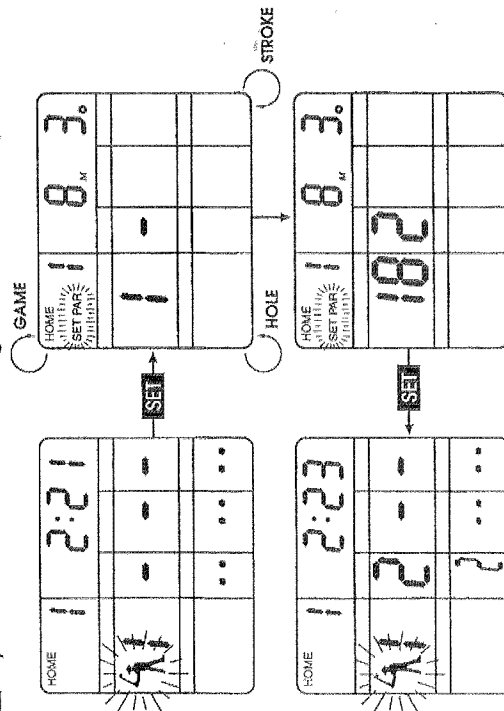

- 10 -

(7) How To Enter Score When In Play:

- 1) Press **MODE** - to enter into Game Mode
" 4 " play signal will be flashing.
- 2) Press **GAME** - to select the course: Home 1, Home 2, Home 3 or Guest & hold 2 sec.
- 3) Press **HOLE** - to select the Hole 1
- 4) Press **ST/4** - to enter the **STROKE** (limit to 15)
- 5) Press **PU/A** - to enter the **PUTT** (limit to 9)
- 6) Repeat 3, 4 & 5 until 18 holes are set.
- 7) Press **SAVE** - to save the game in record. The screen will blink once to confirm.

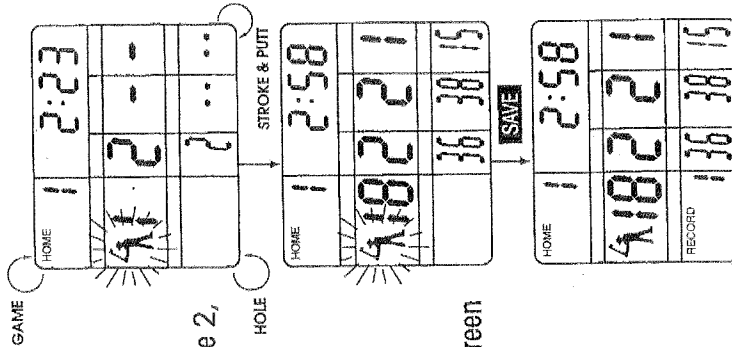

- If **STROKE** or **PUTT** is mistakenly recorded, can press **ST/4** or **PU/A**. repeatedly to reach the correct number.
- Once the game is saved, there will be no response for **ST/4** or **PU/A** key.

Note:

- If the **STROKE** is not entered before, the **PUTT** cannot be entered.
- The **PUTT** increase by 1, the **STROKE** will also increase by 1.
- If any hole is missing recorded, the missing hole will be displayed when you save. Re-enter the missing **STROKE/PUTT** and press **SAVE** again to save the game.


- 11 -

(8) How To Review The Last Record:

- 1) Press **MODE** - to select Review Mode.
- 2) Press **HOLE** - to review each hole score under the last record.
- 3) Press **GAME** - to review the last 10 records total starting from the latest one.

- If the course has not been set before or not completely set, the default total **PAR** is 72.


- Review mode active only after save and before starting a new game

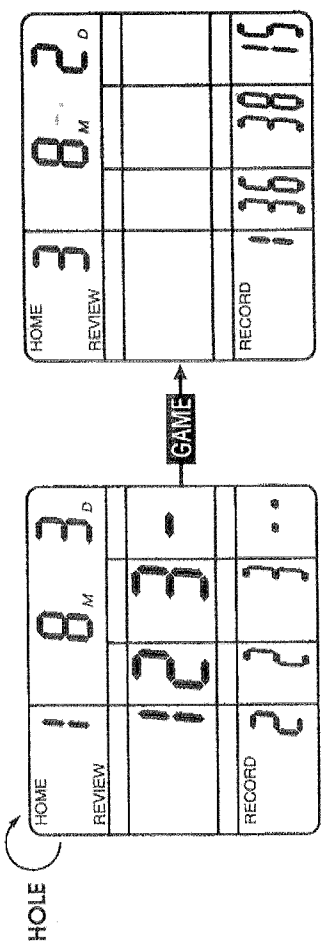

(9) How To Review Last 5 Average:

- 1) Press **MODE** - to select RECORD LAST 5 AVERAGE.
- 2) Press **ST/A / PU/A** - to review the last 5 average from the 10 recorded games.

This compu-watch can store the score up to 10 record rounds. Under this Average Mode, it can show the last 5 record's average out of these 10 records, so as to measure your performance progress.

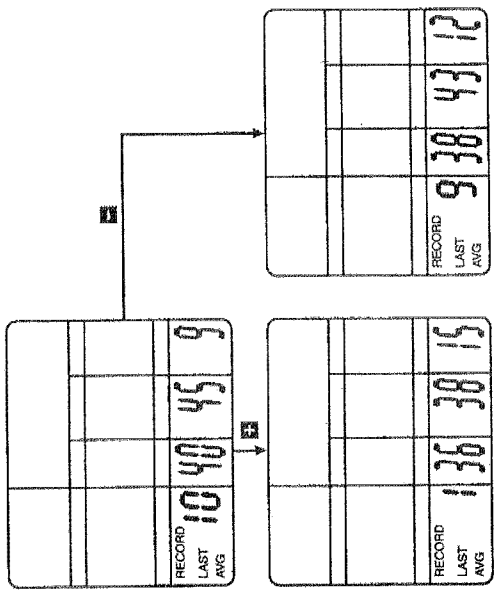


(10) Installing and Replacing Battery:

This unit uses 1 x 3V Lithium Battery CR2032.

1. Loosen 4 x Case Cover screws.
2. Loosen 2 x Battery screws.
3. Open Battery Cover.
4. Replace Battery, putting "+" side facing top.
5. Place Battery Cover holding Battery inside right on top of the Battery Contact, "Point A" must be touching "Point B"
6. Fasten 2 x Battery screws.
7. Fasten 4 x Case Cover screws.

Battery Disposal:

Return used batteries to an authorized depot for preservation of the environment.

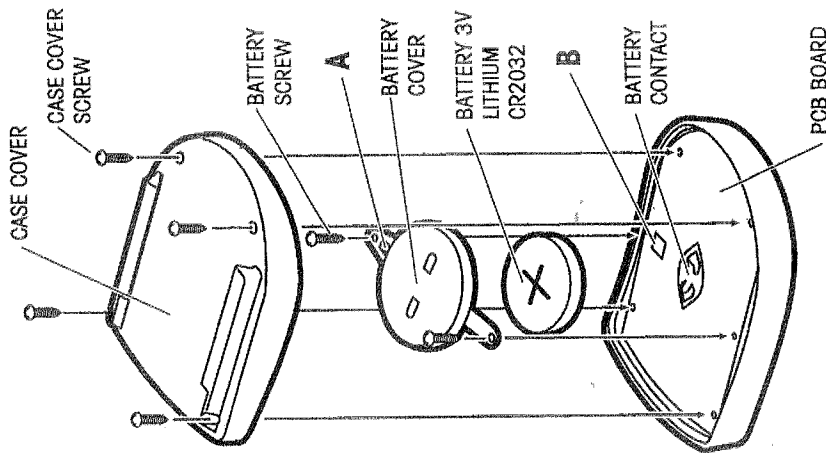

Notes:

- Avoid dropping the unit.
 - Clean display and enclosure using a soft damp cloth.
- Do not use scouring agent or solvent.
- Do not submerge in water.