



- This watch is solar-powered. Expose the dial to light and use it sufficiently charged.
- To see details of charging time, specifications and operations, refer to the instruction manual:  E270 instruction manual

Component identification

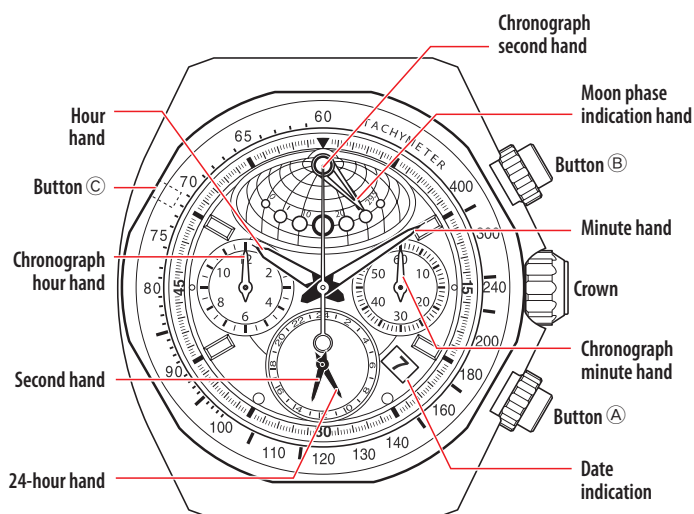

- Actual appearance may differ from the illustration.
- The crown has two positions when pulling it out.
- Refer also to our web page for detail of usage of the scale and bezel on the watch.

(<http://www.citizenwatch-global.com/support/pdf/enhanced/e.pdf>)

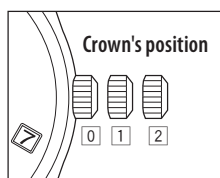

Setting the time and date indication

Setting the time

1. Pull the crown out to position **2** when the second hand points **0 second**.

The second hand stops.

2. Rotate the crown to set the time.

- Check the time set is AM or PM referring to the 24-hour hand.
- Move the hands 4 or 5 minutes forward and move them back to the right time to set the time more precisely.
- The moon phase indication hands does not move synchronously.

3. Push the crown in to position **0** in accordance with a reliable time source.

The second hand starts moving.

Setting the date indication


- Date indication adjustment is required on the first days of March, May, July, October and December.

1. Pull the crown out to position **1**.
2. Rotate the crown counterclockwise to set the date indication.
 - The crown turns freely and the date does not change if the crown is turned to the right.
 - The moon phase indication hands does not move synchronously.
3. Push the crown in to position **0** to finish the procedure.

Setting the moon phase indication

1. Push the crown in to position **0**.
2. Press and release the upper left button **C** to adjust the moon phase indication.

- Refer to a newspaper or other source to see actual moon phase.
- Each time you press the button, the moon phase indication hand moves by 0.3 of moon phase.
- Pressing and holding the button moves the hand continuously.
- The moon phase indication hand returns to "0" just after proceeding to "29.5".

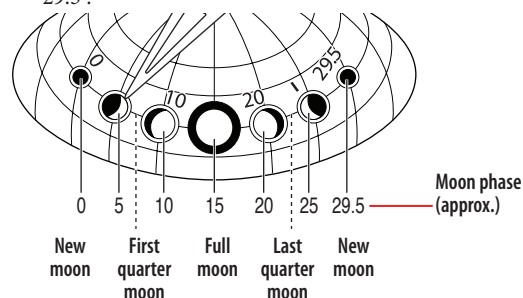

- Use the indicated moon phase only as a reference.

Checking the reference position

1. Pull the crown out to position **2**.
2. Press and hold the lower right button **A** for 5 seconds or more.

The moon phase indication hand moves to its current reference position.

3. Checking the reference position

Correct reference positions:


- Moon phase indication hand: "0"

When the current reference position is different from the correct one, adjust the position following the steps of "Correcting the reference position".

4. Push the crown in to position **0** to finish the procedure.

Correcting the reference position

1. Pull the crown out to position **2**.
 2. Press and hold the lower right button **A** for 5 seconds or more.
- The moon phase indication hand moves to its current reference position.
3. Press and release the upper left button **C** to adjust the reference position.
 - Each time you press the button, the moon phase indication hand moves by 0.3 of moon phase.
 - Pressing and holding the button moves the hand continuously.
 - The moon phase indication hand returns to "0" just after proceeding to "29.5".
 4. Push the crown in to position **0** to finish the procedure.

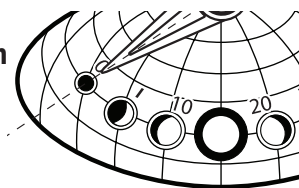

Resetting the watch - All Reset

1. Pull the crown out to position **2**.
2. Press and release both the upper left button **C** and the lower right button **A** at the same time.

The moon phase indication hand moves slightly and all reset is executed.

3. Push the crown in to position **0** to finish the procedure.

After All Reset

After All Reset, adjust the reference position and set the time, date, and the moon phase indication.

