


Ribena

GAME WATCH


Your Ribena "GAME WATCH" comes complete with installed battery. It's ready to perform two functions: a clock and your game. Do not try to replace the battery yourself. (Ask your parents to see the special note to them at the end of these rules).

GAME WATCH CONTROL GUIDE

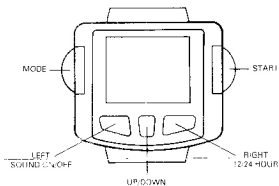

There are five buttons to your watch: Two side buttons – MODE on left and START on right – plus three buttons on the base of the watch – "LEFT", "RIGHT" and "UP/DOWN".

FUNCTIONS

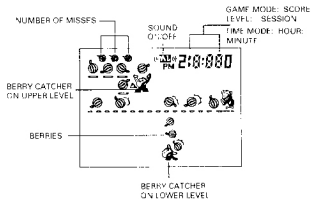

TO SET TIME

1. Press "START" to enter time setting mode.
2. Press "LEFT" to advance the hour.

3. Press "RIGHT" to advance the minute.
4. Press "START" again to set the time you have entered.
5. Press "RIGHT" to adjust to 12 or 24 hour display.

TO START THE GAME

1. Press "LEFT" to adjust sound on/off.
2. Press "MODE" once and then press "START" to activate game.
3. If game is over, press "START" to begin again.

CONTROLLING THE "BERRY CATCHER"

1. Press "LEFT" or "RIGHT" to move the "BERRY CATCHER" left or right.
2. Press "UP/DOWN" to jump between upper and lower conveyor belts, and then "LEFT" or "RIGHT" key to move left or right.

THE OBJECT OF THE GAME

1. The object of the game is to catch the berries as they fall from the conveyor belt.
2. When upper conveyor belt is activated, catch the berries before they fall off the end, and take them to the right of the screen.
3. When you have saved or transported 20 berries, you advance to the next session (there are three sessions). After you have successfully completed the third session, you advance to the next level (there are eight levels).
4. When you have missed three berries, the game is over.
5. BONUS: If you score 10,000 points, all "misses" are cleared.

TO REPLACE BATTERY

1. Your "Game Watch" uses 1 cell battery or equivalent.
2. To change battery remove back cover and the battery contact plate. Replace old battery with new one. Take care to replace battery with (+) and (-) in correct position.
3. Replace the battery contact plate and back cover. Now your game is ready to play.

Please retain these instructions for reference. The Smead Organisation, 194 Wardour Street, London W1.



Warning: This product is not suitable for children under 36 months due to small parts which may be hazardous (i.e. batteries).

SYSTRONIC

WRESTWATCH
GAMES
DATABASE