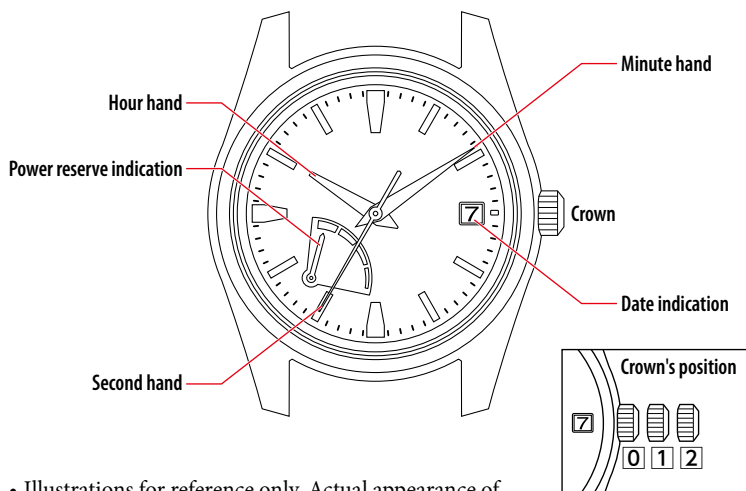 


- This watch is light-powered. Be sure your watch is fully charged before use.
- For complete instructions for setting, use, charging time and specifications, refer to the full instruction manual:  J850 instruction manual

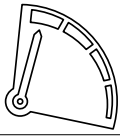 
 
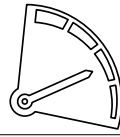 
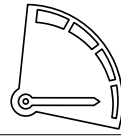 
Component identification



- Illustrations for reference only. Actual appearance of your watch may differ from the illustrations above.

Checking the power reserve

Power reserve is indicated in 4 levels.

Level	3	2	1	0
Power reserve indication				
Meaning	Power reserve is sufficient.	Power reserve is OK.	Power reserve is getting low.	Insufficient charge warning has started.
	OK for normal use.		Charge immediately	

Setting the time

1. Pull the crown out to position **2** when the second hand points **0** second.
2. Rotate the crown to set the time.
 - Take care the time set is AM or PM.
 - Move the hands 4 or 5 minutes forward and move them back to the right time to set the time more precisely.
3. Push the crown in to position **0** in accordance with a reliable time source.

Setting the date indication

- Do not adjust the date indication while the watch shows 9:00 PM - 1:00 AM. Otherwise, the date indication may change incorrectly thereafter.
- Date indication adjustment is required on the first days of March, May, July, October and December.

1. Pull the crown out to position **1**.
2. Rotate the crown counterclockwise to set the date indication.
3. Push the crown in to position **0** to finish the procedure.