








 










I

     
 
I

 




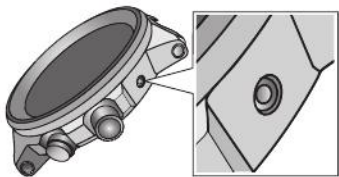

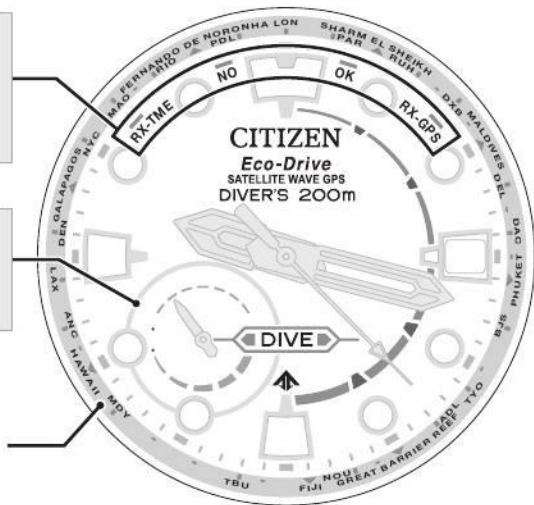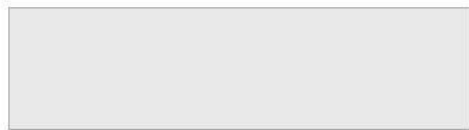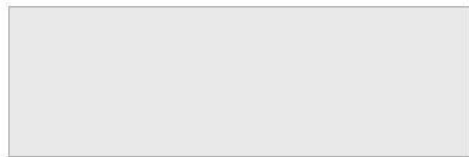

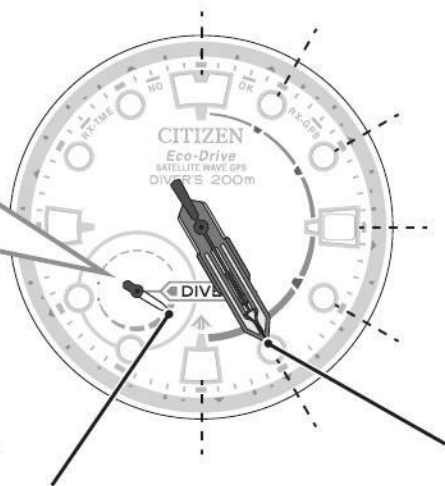 
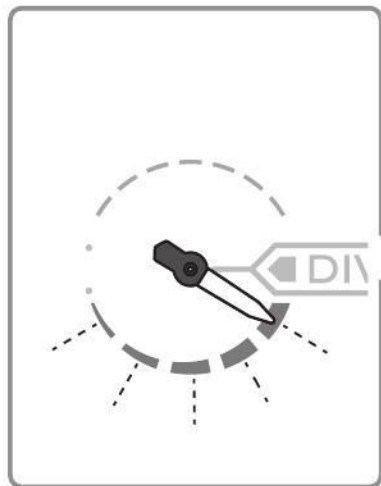 


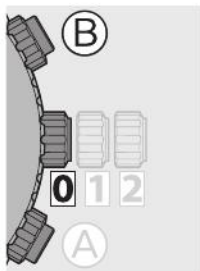








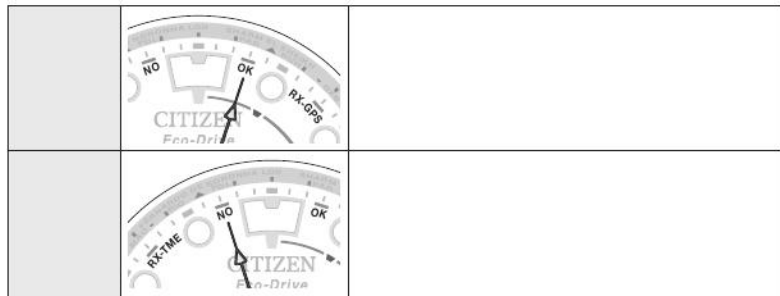
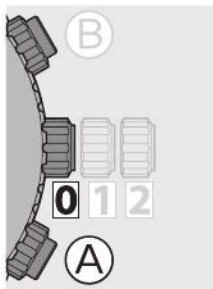



I




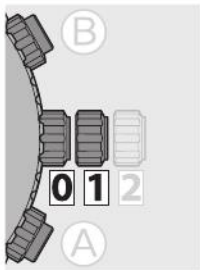 






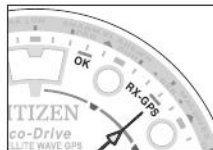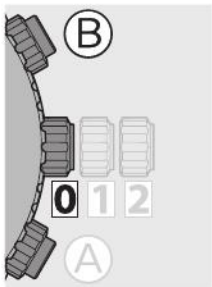  

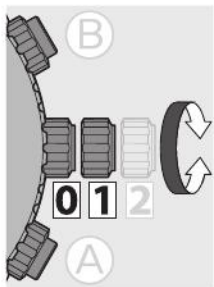     

 
 


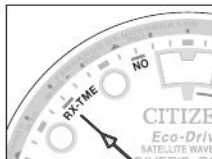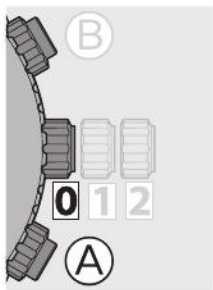

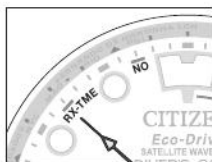 
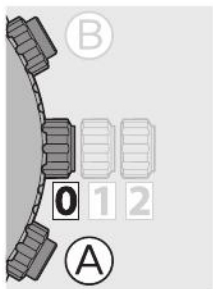 


 




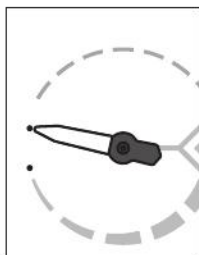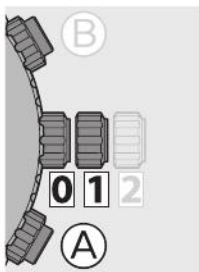 




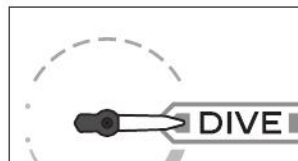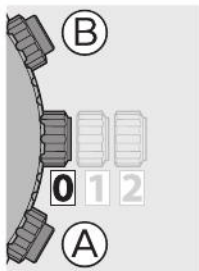

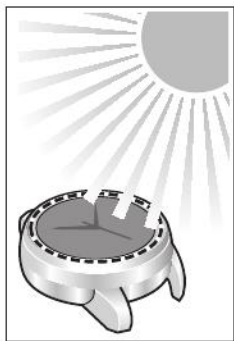 




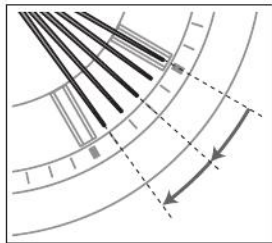
















 Make sure that the watch is not wet before operating it.

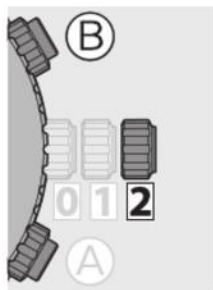

1 Pull the crown out to position 2.


The second hand points to 0 second.


2 Press and hold upper right button B for 2 seconds or more.


Using the “0:00:00” position as the starting point, the minute and second hands indicate the leap second setting.


When the leap second setting is “-37 seconds”	When the leap second setting is “-65 seconds”
The hands point to “0 minute 37 seconds”.	The hands point to “1 minute 5 seconds”.





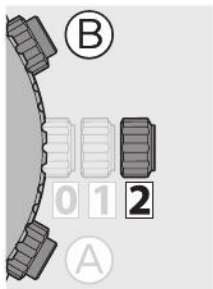 


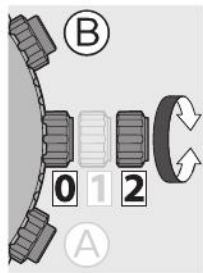 

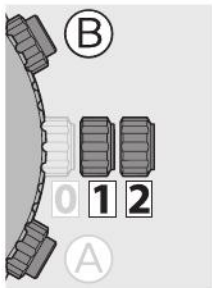 

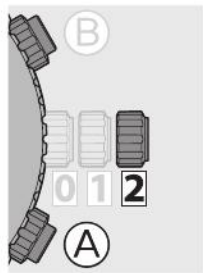    

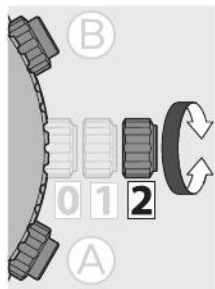 


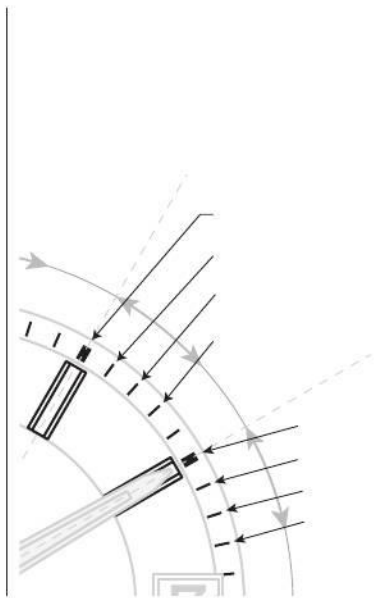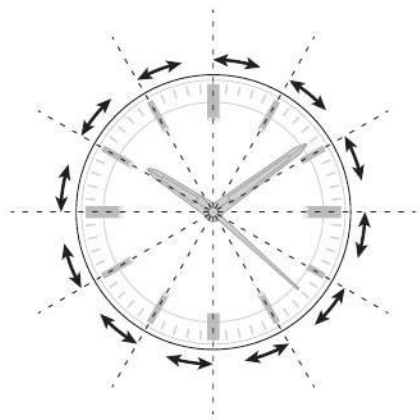 


 


 


 


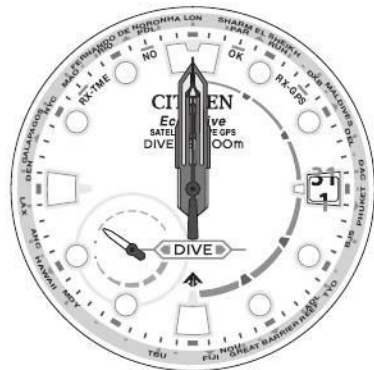

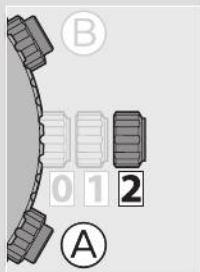

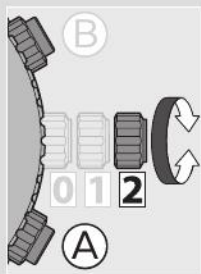

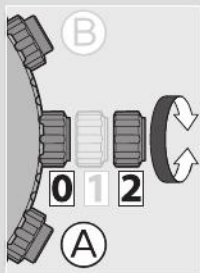



















 












--	--	--