

Module No.1181/1182

 
READING THE DISPLAY

Press (A) for an outline of all functions.





[Module No. 1182]

The operational procedures for Modules 1181 and 1182 are identical. All of the illustrations in this manual show module 1181.

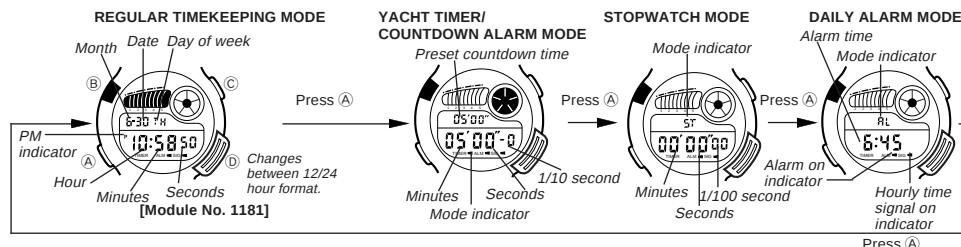

SETTING TIME AND DATE

  - 1) Press (B) in the REGULAR TIMEKEEPING MODE to set correct time.
- 2) Press (D) referring to a time tone to correct seconds.
- 3) Press (A) to shift flashing digit(s). Digit(s) to be changed will flash.

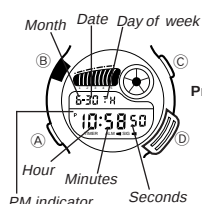

- 4) Each press of (D) increases the digit one by one. Hold down for rapid advance.
- 5) Press (B) to complete setting.

Display automatically returns to the time display if left unused for a few minutes.

USING DAILY ALARM

Beeper sounds for 20 seconds at preset time every day until cleared when daily alarm is set. Press any button to stop beeper. Signal sounds every hour on the hour if time signal is set.

 
Setting daily alarm

- 1) Press (B) in the DAILY ALARM MODE to set a new alarm time.
- 2) Press (A) to shift flashing digit(s). Digit(s) to be changed will flash.




- 3) Each press of (D) increases the digit. Hold down for rapid advance.
- 4) Press (B) to complete setting.

Display automatically returns to initial daily alarm time if left unused for a few minutes.

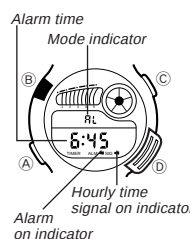

USING YACHT TIMER/COUNTDOWN ALARM

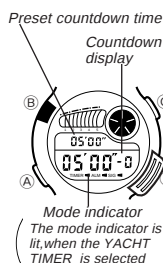 

This function combines a Yacht timer and a Countdown alarm. YACHT TIMER is preset to 5 minutes. COUNTDOWN ALARM is settable from 1 minute to 60 minutes.

USING THE TIMER

- 1) Press (B) in the YACHT TIMER/COUNTDOWN ALARM MODE to switch between timers.
- 2) If the COUNTDOWN ALARM is selected, the measuring time should be set by pressing (C).
- 3) Press (D) to start/stop.
- 4) Press (C) to reset to the measuring time while the timer is not running.

 
A signal confirms start/stop and reset operation.

The Yacht Timer and Countdown Alarm take 8 measurements from when they are started until they are stopped by pressing the (D) button. These functions stop automatically after 8 measurements.

When display reaches 0, a beeper sounds for 10 seconds. Pressing any button stops the beeper. Timer automatically repeats the countdown.

In the Yacht timer, an advance warning beeper indicates elapsed time (4, 3, 2, 1 minutes, 50, 40, 30, 20 seconds to start). When the countdown reaches 10 seconds before starting time, a beeper sounds every second.

On or off setting of alarm and time signal



USING STOPWATCH

A signal confirms start/stop and split/reset operation. (Working range) Total elapsed time display is limited to 59 minutes 59.99 seconds. For longer times reset and started again.

- a) Net time measurement
(D) → (D) (Time loss) → (D) → (D) → (C)
START STOP RESTART STOP RESET
- b) Split time measurement
(D) → (C) → (C) → (D) → (C)
START SPLIT SPLIT STOP RESET
RELEASE
- c) 1st-2nd place times
(D) → (C) → (D) → (C) → (C)
START SPLIT STOP SPLIT RESET
The first runner finishes. Record the time of the first runner. The second runner finishes. Record the time of the second runner.

