 



- To see details of specifications and operations, refer to the instruction manual:  F50*/F51* instruction manual  F52* instruction manual

Component identification


[F50*]

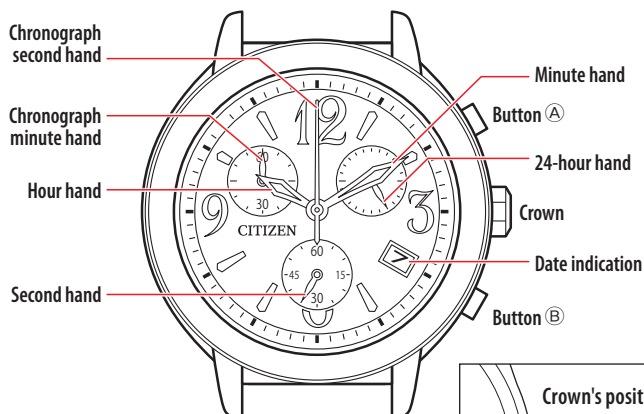

 [F51*]

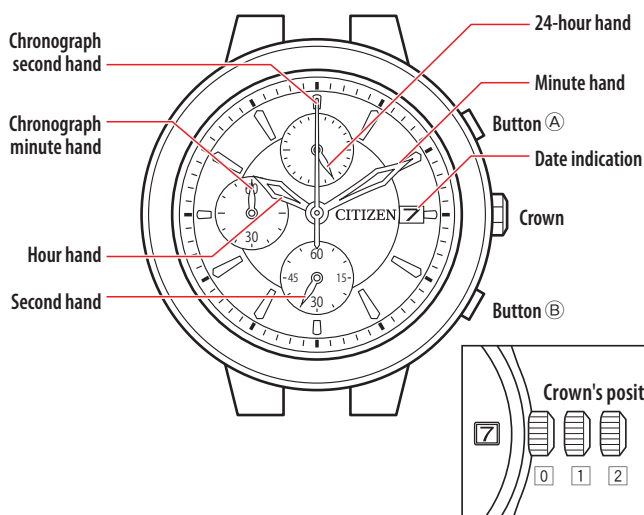

[F52*]

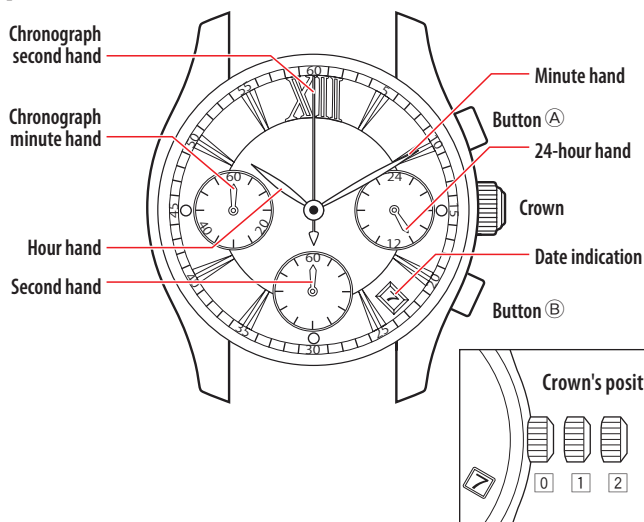 

- Actual appearance may differ from the illustrations.
- Some models are not equipped with the date indication.
- The crown has two positions when pulling it out.
- Refer also to our web page for detail of usage of the scale and bezel on the watch.
(<http://www.citizenwatch-global.com/support/pdf/enhanced/e.pdf>)

Setting the time

- Pull the crown out to position 2 when the second hand points 0 second.**
The second hand stops.
- Rotate the crown to set the time.**
 - Check whether the time set is AM or PM with the 24-hour hand.
 - Move the hands 4 or 5 minutes forward and move them back to the right time to set the time more precisely.
- Push the crown in to position 0 in accordance with a reliable time source.**

Setting the date

- Do not adjust the date indication while the watch shows 9:00 PM - 1:00 AM. Otherwise, the date indication may change incorrectly thereafter.
- Date indication adjustment is required on the first days of March, May, July, October and December.

- Pull the crown out to position 1.**
- Rotate the crown clockwise to set the date indication.**
 - Counterclockwise rotation moves nothing.
- Push the crown in to position 0 to finish the procedure.**