






CITIZEN®



 


 


 


I

 
I

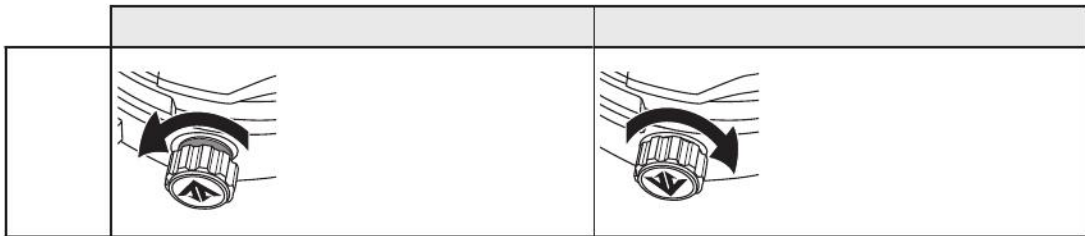

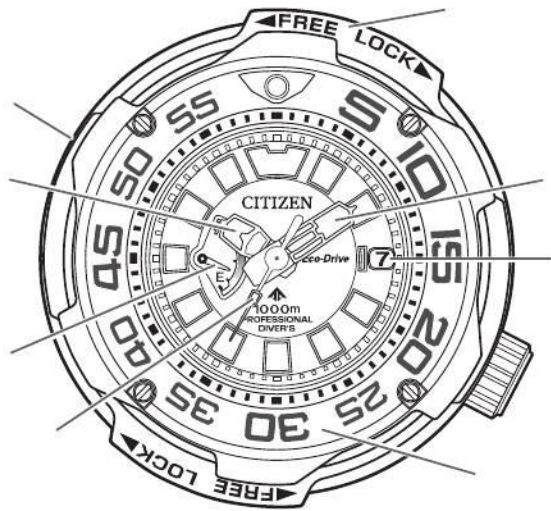

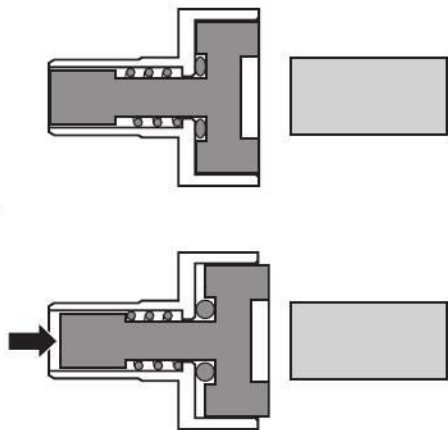 




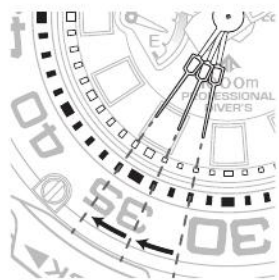



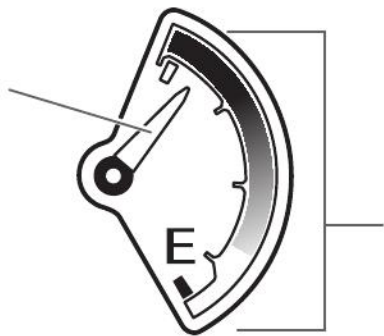

I

English



 
English





Setting the time

Make sure that the watch is not wet before operating the crown.

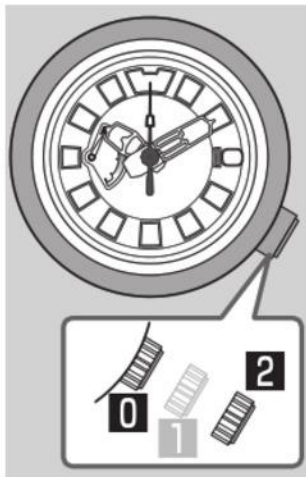

1 Pull the crown out to position **2 as the second hand points to 0 seconds.**

The watch stops and the power reserve indication hand moves to the reference position.

 
2 Rotate the crown to set the time.

- Pay attention to whether the time set is AM or PM.
- Date indication starts to change as the setting passes 10PM. Rotating the crown counter-clockwise does not turn back the date indication.

3 Push the crown in to position in **0 accordance with a reliable time source to finish the procedure.**

Adjusting the calendar

Make sure that the watch is not wet before operating the crown.

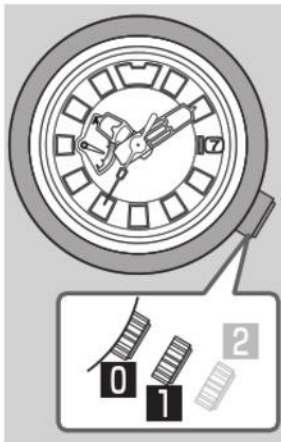

You must correct the date on the first day of March, May, July, October and December.

 
- Do not set the date during the period below, when the date indication is changing on this watch. If you do, the date indication may change incorrectly.

Period of time: From 10PM to 0AM (12:00AM)

 
 
- 1 Pull the crown out to position 1.**
- 2 Rotate the crown clockwise to set the date.**
- 3 Push the crown in to position 0 to finish the procedure.**





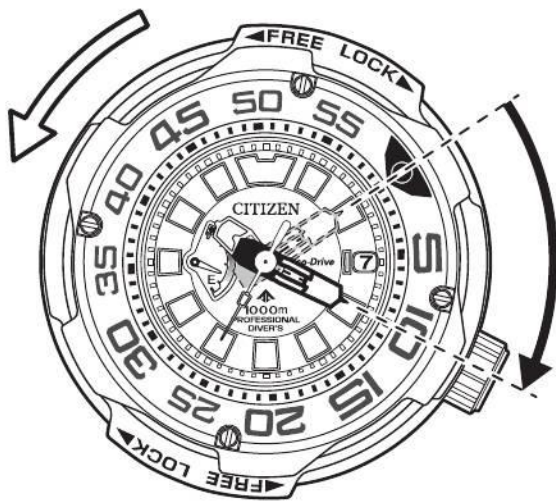



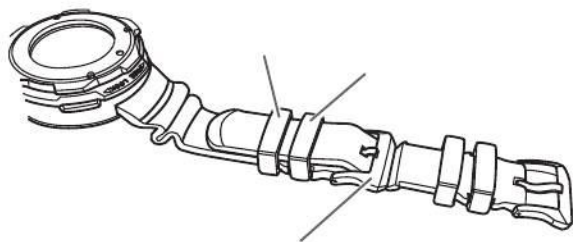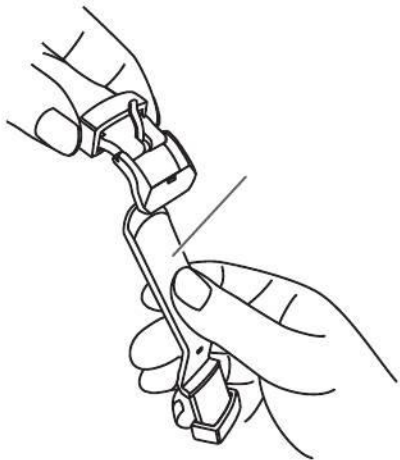









	0	
	0	



















--



