

Y710(SZ)

B74-2N

ALBA

アニメメロディ

とりあつかいせつめいしょ
取扱説明書 (SZ)

ALBA Y710 (SZ)

このたびはアニメメロディY710をおかい
あげいただきありがとうございます。
ご使用の前にこの取扱説明書をよくお読
みのうえ正しくご愛用くださいますよう
お願い申しあげます。
なお、この取扱説明書はお手元に保存し
必要に応じてご覧ください。

株式会社 服部時計店

本社 〒104 東京都中央区京橋2丁目6番21号 ☎03 (563)2111

■ DISPLAY AND BUTTON OPERATION

Button "D"

- Illuminating light is activated in any display.

Button "B"

- In time display, the calendar is displayed while the button "B" is depressed.



- In time/calendar setting and melody alarm setting, select the digits to be adjusted.

Buttons "B" & "C"

- By depressing the buttons "B" and "C" at the same time, activate melody demonstration and engage or disengage the melody alarm.

Button "C"

- In time display, activate love divination play.
- In time/calendar setting and melody alarm setting, set the desired time.

Day Indicator Second

Hour Minute

Animation Character (Micky and Minny)

Melody Alarm Mark

DISPLAY SELECTION BUTTON

- Melody alarm - Can sound the melody at the time set.
- Melody demonstration - Can test the alarm melody.

By each depression of button "A", the display changes in the following order.

Time display

How to play love divination



Time/calendar setting

Melody alarm setting

How to set the melody alarm



How to set the time/calendar

■ HOW TO SET THE TIME AND CALENDAR

1. Depress button "A" to show time/calendar setting. (Second digits start flashing.)
2. Depress button "B" to select the digit to be adjusted.
3. Depress button "C" to set the desired digits.
4. After setting, depress button "A" to show time display.

 
Second setting

- Depress button "C" in accordance with a time signal. The seconds are reset to "00" and start immediately.

- When the seconds count any number from "30" to "59" and button "C" is depressed, one minute is added and the seconds are immediately reset to "00".

- Telephone time casting service (tel. 117) might be helpful when you set the time.

By each depression of button "B", the digits start flashing in the following order.



One digit is advanced by each depression of button "C".

SLYTRONIC
WRISTWATCH
GAMES
DATABASE

■ SPECIFICATIONS

1. Frequency of crystal oscillator ... 32,768 Hz (Hz = Hertz)
2. Loss/gain Loss/gain at normal temperature range
Monthly rate: less than 15 seconds
3. Operational temperature range ... -5°C to +50°C
4. Display medium Nematic liquid crystal, FEM (Field Effect Mode)
5. Battery One piece of lithium battery. Battery life is approximately 3 years. (In case of using melody alarm 8 seconds a day, 10 times of love divination play and 5 seconds of illuminating light.)
6. IC C-MOS-LSI 1 unit
7. Illuminating light Illuminates the display in the dark.


Functions	Hour	Minute	Second	Month	Date	Day	Additional mechanism
Time display	●	●	●	○	○	●	Love divination
Melody Alarm	●	●					Melody demonstration Animation play
Time/calendar setting	●	●	●	●	●	●	Auto-calendar Hourly time signal

● indicates the digits which are constantly displayed by depressing button "A".
○ indicates the digits to be displayed while button "B" is depressed.

* Specifications are subject to change without notice.

HOW TO PLAY LOVE DIVINATION

- ① In time display, depress button "C" and the display changes from "Happy" to "Trouble", "Lucky" and "Mini lucky" in that order.

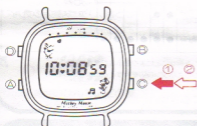


- ② Then, depress the button "C" to activate Love Divination.

- Micky and Miny move for 4.5 seconds.



* A wedding march will sound only in Happy Pattern display.

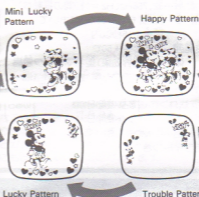


- Finally, one of the "Happy", "Lucky", "Mini Lucky" or "Trouble" will be displayed for 4 seconds. After that, it will automatically return to time display.

HOW TO SET THE MELODY ALARM

- ① Depress button "A" to activate melody alarm setting. (Hour digits and A/P mark start flashing.)
- ② Depress button "B" to select the digits to be adjusted.



 - By each depression of button "B", the digits to be adjusted changes flashing in the following order.




- ③ Depress button "C" to set the desired time.

- One digit is advanced by each depression of button C.

- ④ After setting, depress button "A" twice to show time display.

How to engage and disengage the melody alarm and hourly time signal.

- In time display, depress buttons "B" and "C" at the same time, and the melody alarm will sound and the melody alarm mark appears and disappears at each depression. Alarm time is displayed while depressing the button.

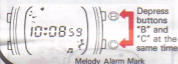

Melody alarm sounds

Melody Alarm Mark

 
- Melody Alarm Time Signal) Sounds
- Melody Alarm Time Signal) Does not sound

HOW TO STOP THE ALARM RINGING

Any depression of button "A", "B", "C" or "D" will stop the sound of melody alarm.

ALARM TEST

In time display, depress buttons "B" and "C" at the same time. The melody alarm will ring while depressing the buttons.



- * By depressing buttons "B" and "C" at the same time, the alarm and time signal are set or reset alternately.

REMARKS FOR PARTICULAR DISPLAY

In time/calendar setting, if the buttons "B" and "C" are depressed at the same time, the pattern 1 will be displayed, and if depressed twice, pattern 2 will be displayed. These displays will be used at a watch retailer to make adjustment, so depress button "A" to show normal display.

Pattern 1

Pattern 2



BATTERY CHANGE

BATTERY LIFE



A new battery will last approximately three years.

- The battery in your watch is the monitor battery to check the functions of the watch. As it is inserted at the factory, the battery life may be less than three years.

BATTERY CHANGE

Be sure to have the battery replaced by an ALBA DEALER. A dim illuminating light or a dim display in normal temperatures indicates that the battery life nears its end. We recommend the battery be replaced with a new one. If an old battery is kept in the watch for a long time, electrolyte leakage from the battery may damage the module.

- When the battery is replaced, please specify "ALBA BATTERY".
- The battery installed in the watch is for monitoring purposes and is not included in the price of the watch.
- The replacement of the battery is, therefore, changeable, even within the guarantee period of the watch.
- When a battery is taken out of a watch, it must be kept at a place beyond the reach of an infant. In case it is swallowed by an infant, consult a doctor immediately.