

Manualslib.com
CITIZEN[®]



Eco-Drive[®]



 
ManualsLib.com



ff



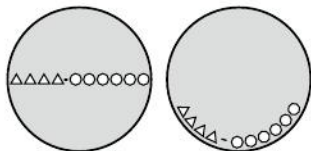

ManualsLib.com





ManualsLib.com



ManualsLib.com



ManualsLib.com



ManualsLib.com



ManualsLib.com

 
ManualsLib.com

 


ManualsLib.com

ManualsLib.com

ManualsLib.com




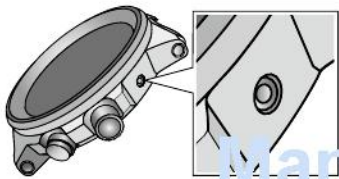


ManualsLib.com

Component identification

 Hands and buttons

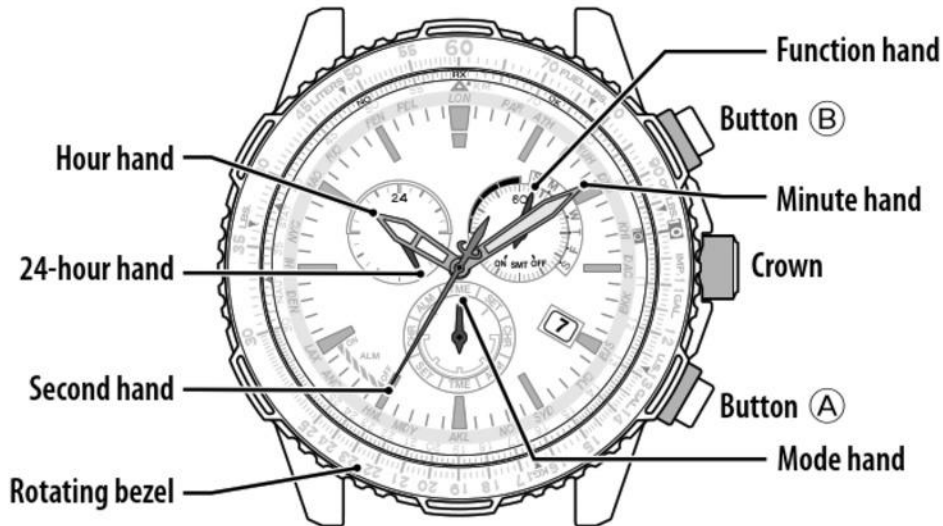

 
- The illustrations in this instruction manual may differ from the actual appearance of your watch.

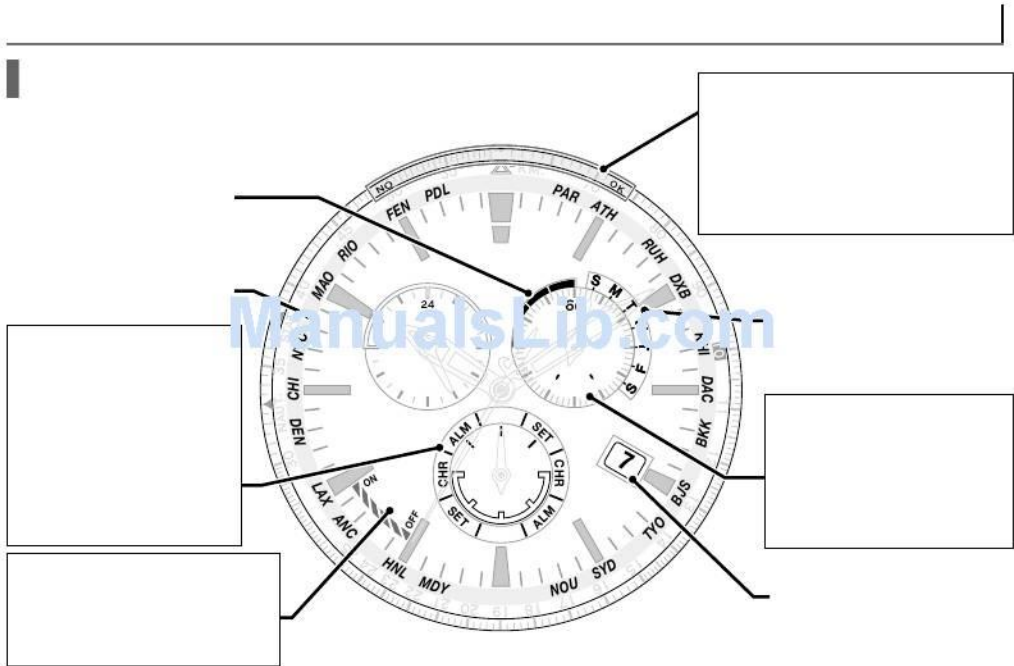

Changing the mode

This watch features the four different modes as follows:


TME	Shows ordinary time.
CHR	Mode for using the chronograph.
ALM	Mode for setting the alarm.
SET	Mode for setting time and calendar manually.

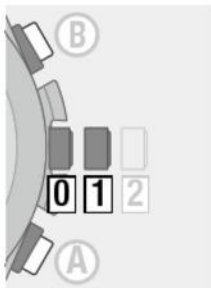 


1 Pull the crown out to position **1**.

 The second hand points to 30 seconds and stops.



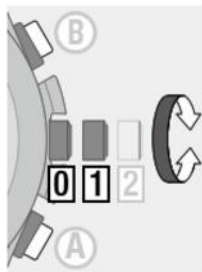

2 Rotate the crown to change the mode.

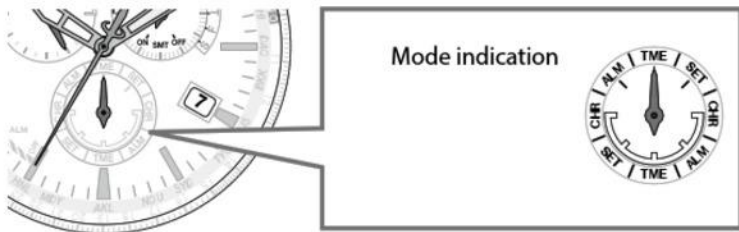 


- Turn the crown so that the mode hand will point to a marker of the mode indication securely.



3 Push the crown in to position **0** to finish the procedure.

Indication of the watch changes into that of the mode selected.

 - It may take a moment to change indication.

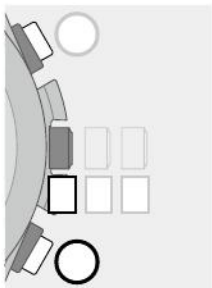


ManualsLib.com

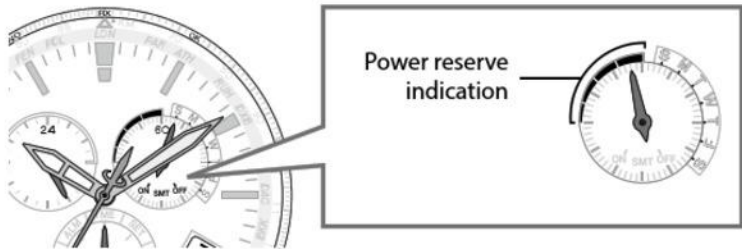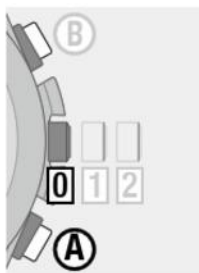  


- Press button (A) to return to normal indication. It returns to normal indication automatically in about 10 seconds without pressing the button.

 ManualsLib.com

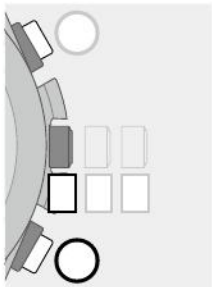


ManualsLib.com



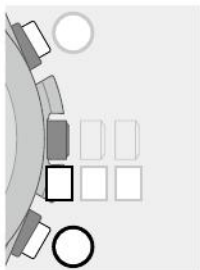 

ManualsLib.com

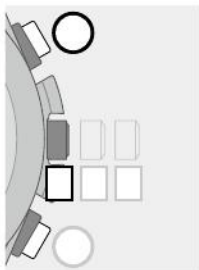 


ManualsLib.com

Setting the world time

This watch can indicate the time around the world according to which of 24 time zones (offsets from UTC — Coordinated Universal Time) is chosen.

 - See page 22 to check which time zone is currently indicated.

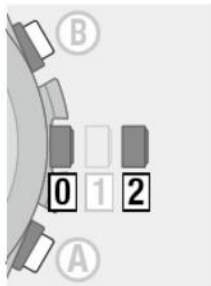


1 Change the mode to [TME] (page 14) and pull the crown out to position 2.

The second hand indicates the current time zone setting and the function hand indicates the current summer time (DST) setting (page 32).




Ex.:

 When the time zone setting is “TYO” and the summer time (DST) setting is “SMT OFF”

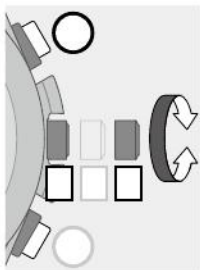


ManualsLib.com



ManualsLib.com

 ManualsLib.com

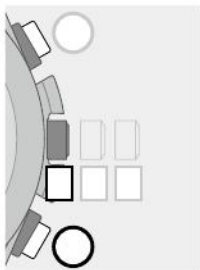


ManualsLib.com



ManualsLib.com

 
Checking the summer time (DST) setting


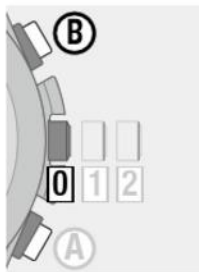


1 Change the mode to [TME] (page 14) and push the crown in to position **0**.


2 Press and release the upper right button **B**.

   The second hand indicates the current time zone setting and the function hand indicates the current summer time (DST) setting.

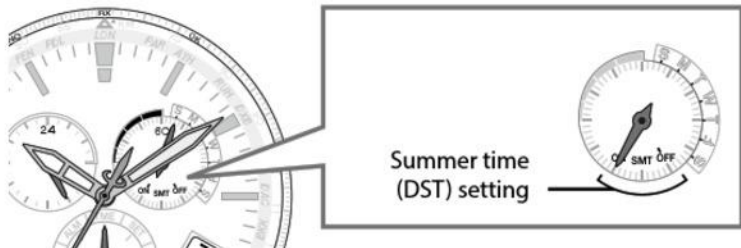


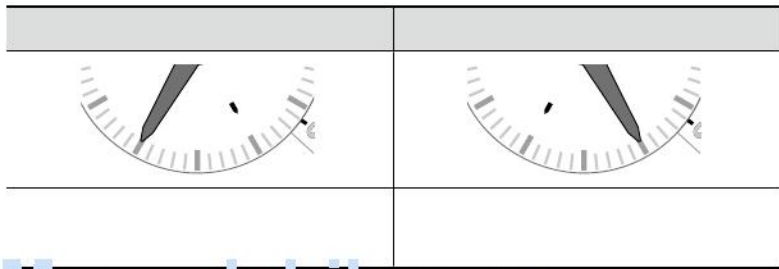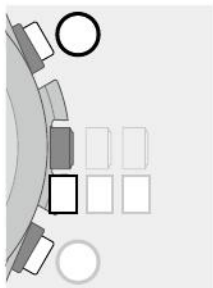


ManualsLib.com

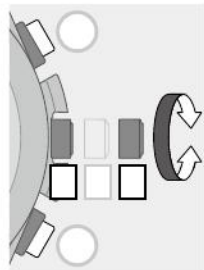 

ManualsLib.com

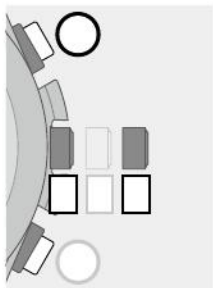 


ManualsLib.com

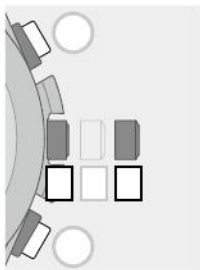 


ManualsLib.com



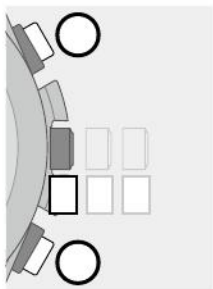 

ManualsLib.com

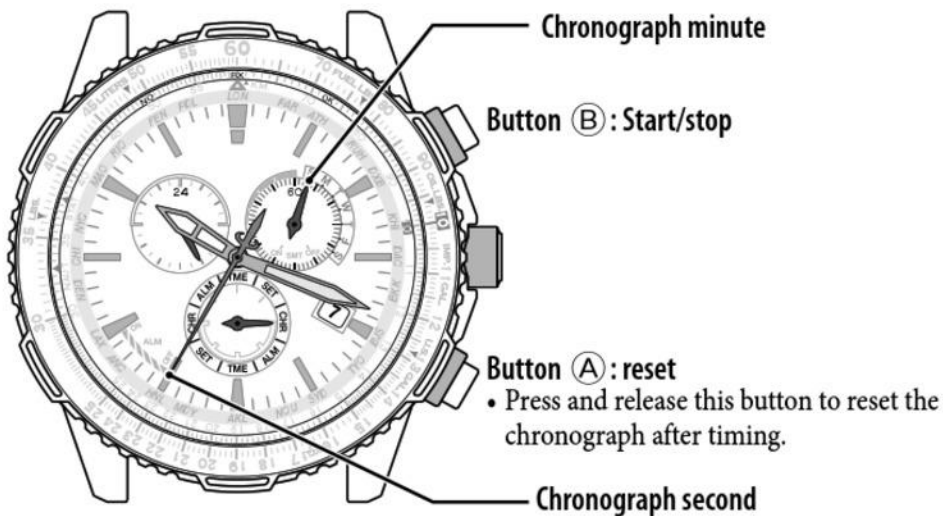 


- After 60 minutes of continuous chronograph operation, the chronograph automatically stops and is reset.

Using alarm

The alarm on this watch is based on the time indicated. It is based on the time of the time zone newly selected when the time zone setting of the world time is changed.

 
Checking alarm setting

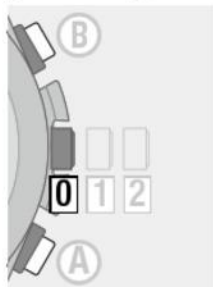


- 1 Change the mode to [ALM] (page 14) and push the crown in to position 0.**

 The hour, minute and 24-hour hands indicate the alarm time currently set and the second hand shows the alarm setting.




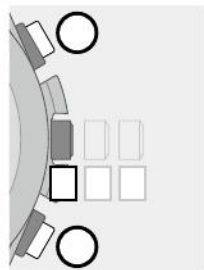


ManualsLib.com

 

English

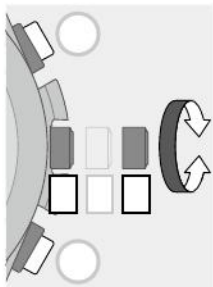 

ManualsLib.com

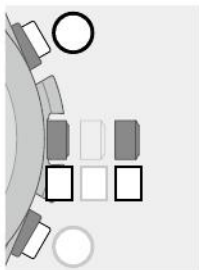 

ManualsLib.com

 
ManualsLib.com





ManualsLib.com

ManualsLib.com

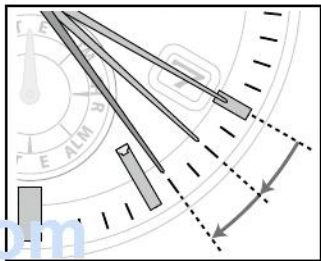

ManualsLib.com



ManualsLib.com



 
ManualsLib.com

 
ManualsLib.com



■

	ManualsLib.com	

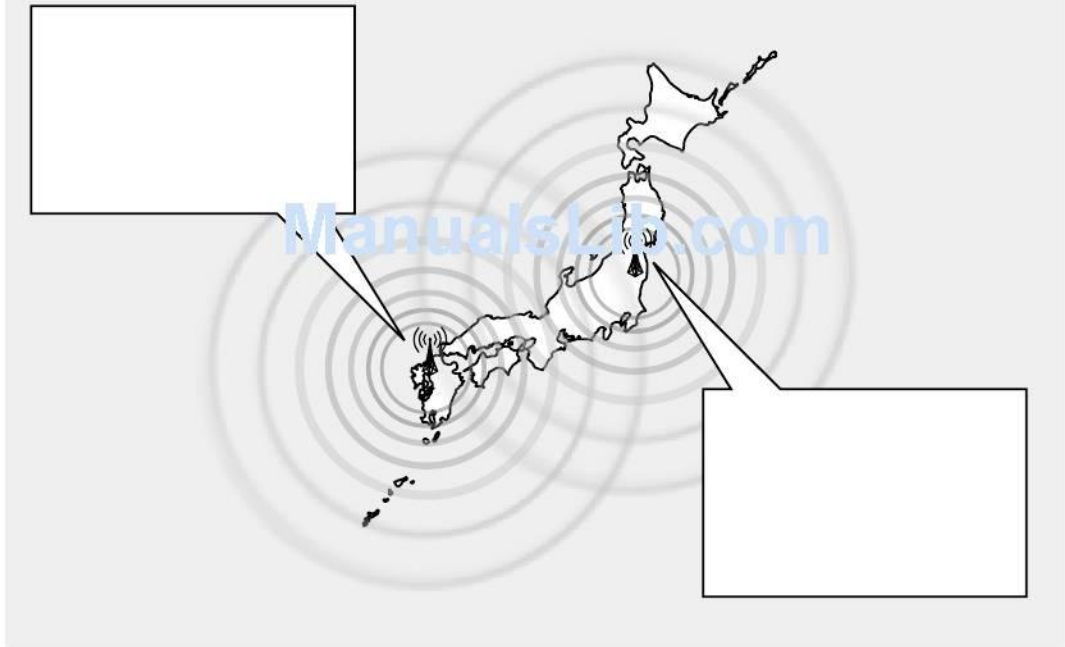

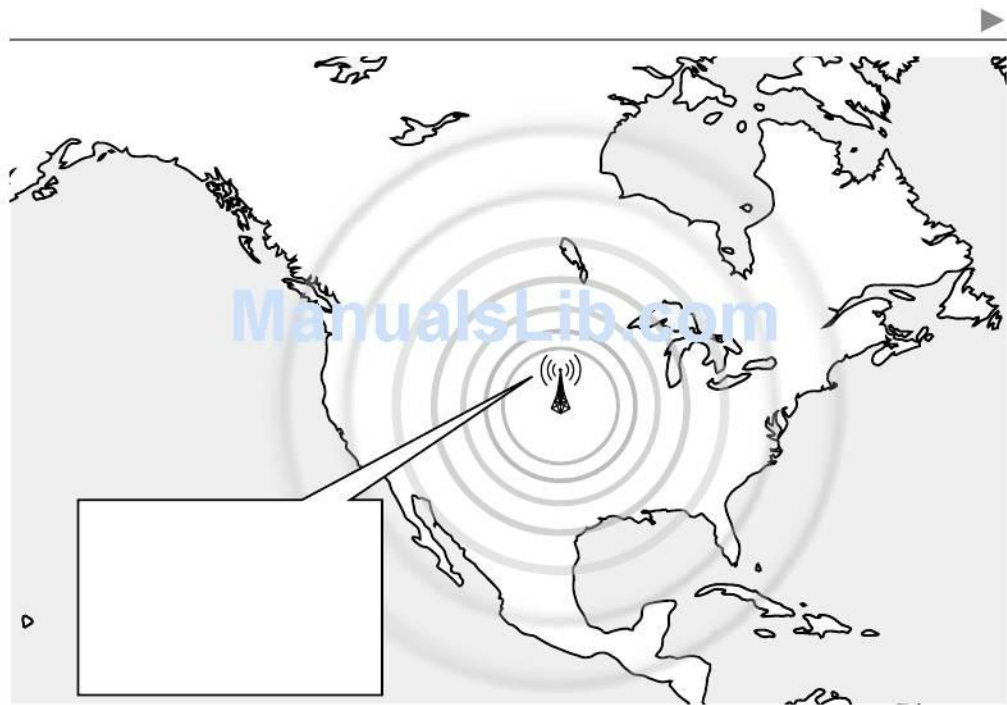





ManualsLib.com






  ManualsLib.com

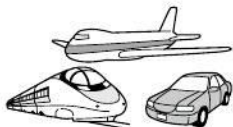


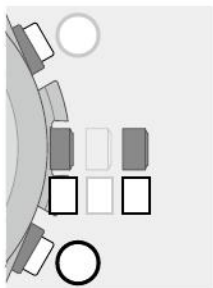


ManualsLib.com

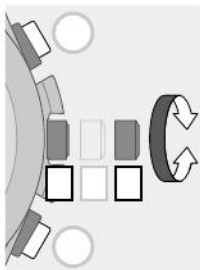 

ManualsLib.com

  ManualsLib.com

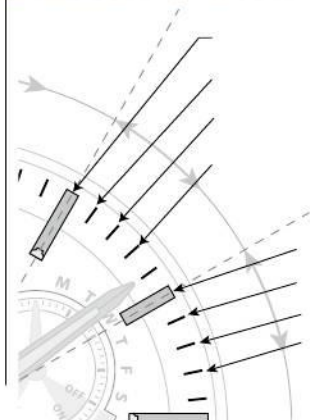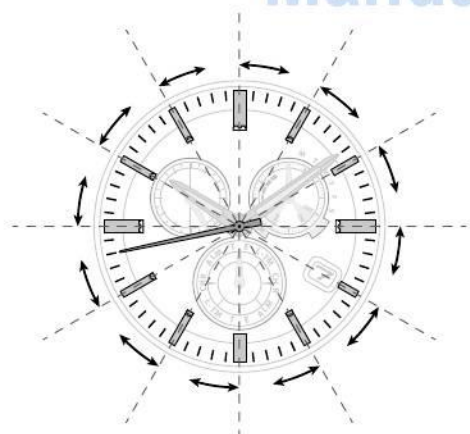


ManualsLib.com




 ManualsLib.com




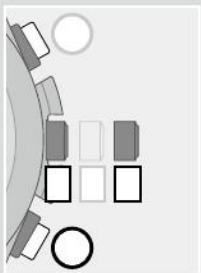

ManualsLib.com

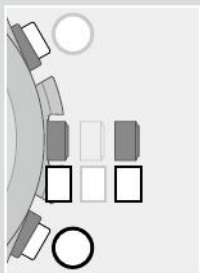 

ManualsLib.com

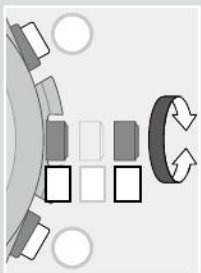 

ManualsLib.com

ManualsLib.com



ManualsLib.com		



ManualsLib.com

ManualsLib.com



ManualsLib.com



English



ManualsLib.com









ManualsLib.com



ManualsLib.com



ManualsLib.com



ManualsLib.com



ManualsLib.com



ManualsLib.com



ManualsLib.com



ManualsLib.com

ManualsLib.com



ManualsLib.com

ManualsLib.com

ManualsLib.com

ManualsLib.com

CE

ManualsLib.com

ManualsLib.com