


Module No. 555


READING THE DISPLAY

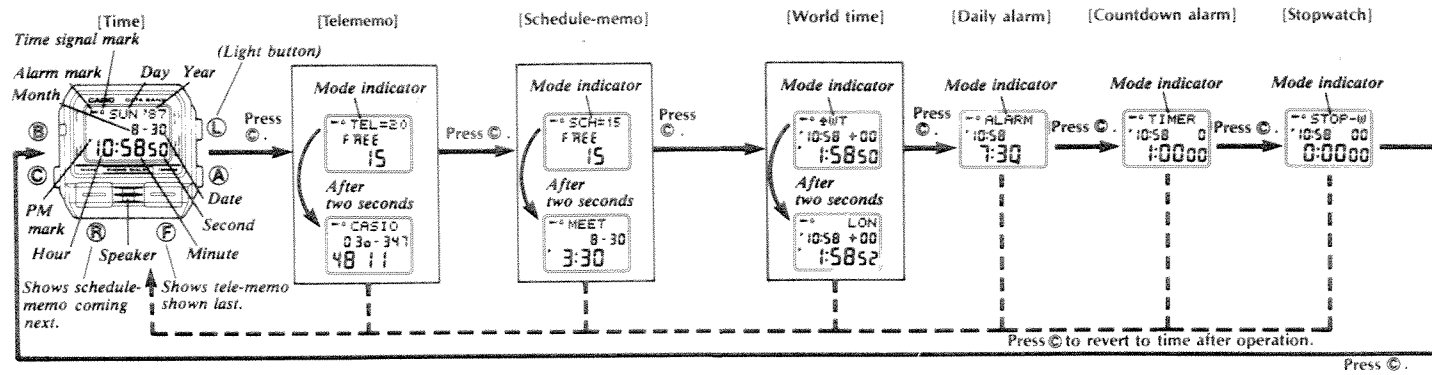

OPERATING TELEMEMO

A maximum of 50 records of 9 letters and 14 numerals can be stored in memory. Press **F** or **R** to search the memory contents. Keep pressed for high speed search. Used pages are automatically stored in alphabetical order. Password function keeps memories private. Pressing **A** dials the displayed number.

Searching telememo

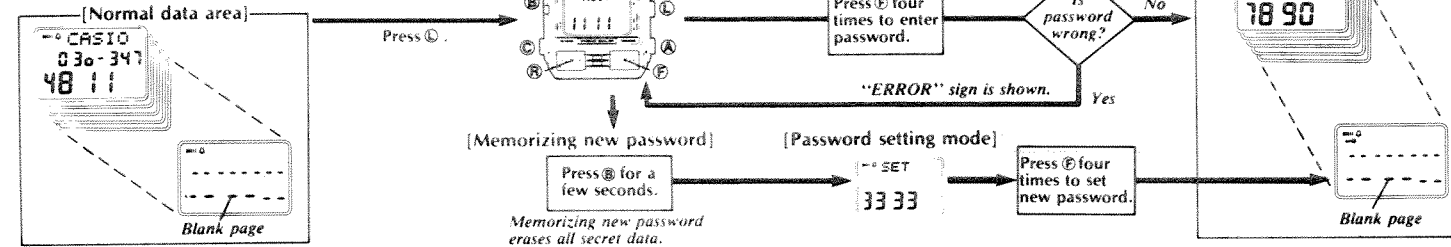


Alteration of password


- Press **F** and press **A**.
- Press **F** four times to enter old password.
- Press **F** four times to enter new password.

Memorizing new numbers

 - Press **F** or **R** in the normal data or secret data area to search a blank page or numbers to be revised.
- Press **A** to set new letters and numerals.
- A letter can be entered at cursor position by pressing **A** or **L**. The cursor can be shifted by pressing **C**. Keep pressed for high speed movement.



 - A number can be entered at the cursor position by pressing **A** or **L**. The cursor can be shifted by pressing **C**. Keep pressed for high speed movement.



- * Used to dial *
- ** Used to dial #
- *** The local mark, used to separate a phone number from its area code. Anything that

- Check the desired telephone number shown on the display and press **A**. After three seconds, dialing tones will begin to sound. (Before sounding, set the telephone handset on the watch speaker as shown in Fig. 2)


- Hold the handset in a vertical position. Bring the speaker of the watch into contact with the mouthpiece of the telephone handset so that the speaker is positioned at the center hole of the mouthpiece. (Hold the handset as shown in Fig. 2)

(Elimination of area codes)
Entering an area code mark (**Q**) makes it possible to automatically dial a number excluding the area code.


Press **A** twice to dial the displayed number excluding the area code.

Differences in Telephone Handsets

Type B handsets are commonly found on public telephones and home telephones. The Other Types have flat mouthpieces, and fewer holes than Type B, or even slits in place of holes.

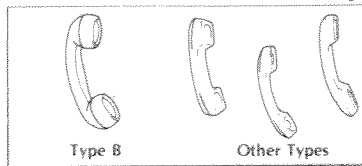

OPERATING COUNTDOWN ALARM

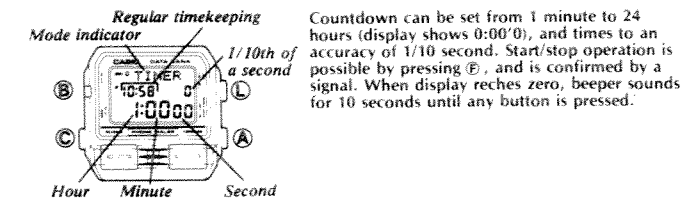

- Press **F** to set new time.
- Each press of **F** selects auto-repeat or repeat function. The mark (**X**) indicates on setting of auto-repeat function.
- Press **C** to shift flashing digit(s). Digit(s) to be changed will flash.




- Each press of **A** advances flashing digits one by one and **L** reverses them. Keep pressed to move quickly.
- Press **F** to complete setting.

(Auto-retrieve function)
Display automatically returns to time if left unused for a few minutes.

(Auto-repeat function)
Pre-entered time is retrieved and started again when display reaches zero.


(Repeat function)
Pre-entered time is retrieved when display reaches zero.

OPERATING SCHEDULE-MEMO

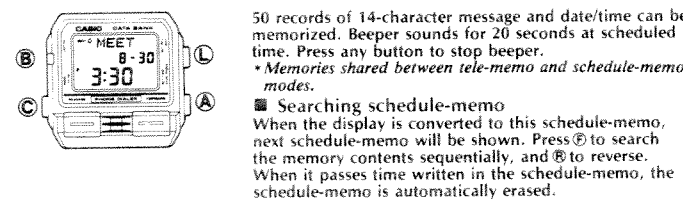

- Press **F** or **R** in the schedule-memo to search a blank record or records to be revised.
- Press **A** to set new letters and numerals.
- A number/letter can be entered at cursor position by pressing **A** or **L**. The cursor can be shifted by pressing **C**. Keep pressed for high speed movement.

SETTING TIME AND DATE

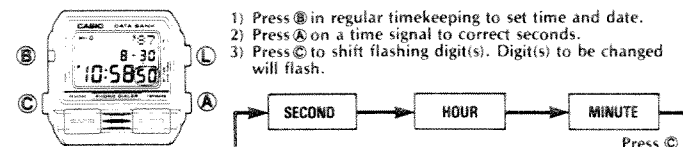


- Press **F** in regular timekeeping to set time and date.
- Press **A** on a time signal to correct seconds.
- Press **C** to shift flashing digit(s). Digit(s) to be changed will flash.

- Each press of **A** advances flashing digits one by one and **L** reverses them. Keep pressed to move quickly.
- Press **F** to complete setting.

(Auto-retrieve function)
Display automatically returns to time if left unused for a few minutes.

OPERATING WORLD TIME

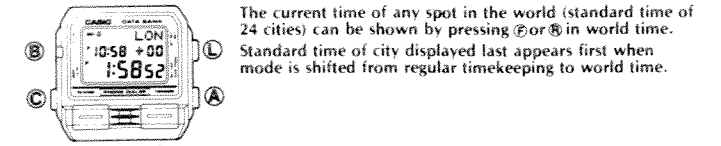

- Press **F** or **R** in world time to select appropriate local time.
- Press **F**.
- Press **C** to shift flashing digit(s). Digit(s) to be changed will flash.

 
- Each press of **A** advances flashing digits one by one and **L** reverses them. Keep pressed to move quickly.
- Press **F** to complete setting.

(Auto-retrieve function)
Display automatically returns to time if left unused for a few minutes.

(Changing to daylight saving time)
Hold down **A** for a few seconds while in world time to change to daylight saving time (+1 hour). The daylight saving time mark " **φ** " is shown on the display while this setting is in effect. Repeat this procedure to switch back from daylight saving time to standard time.

(Auto-repeat function)
Pre-entered time is retrieved and started again when display reaches zero.

(Repeat function)
Pre-entered time is retrieved when display reaches zero.



- Press **F** or **R** in the schedule-memo to search a blank record or records to be revised.
- Press **A** to set new letters and numerals.
- A number/letter can be entered at cursor position by pressing **A** or **L**. The cursor can be shifted by pressing **C**. Keep pressed for high speed movement.

(Auto-retrieve function)
Display automatically returns to time if left unused for a few minutes.

(Auto-repeat function)
Pre-entered time is retrieved and started again when display reaches zero.

(Repeat function)
Pre-entered time is retrieved when display reaches zero.

- Press **F** to complete memorizing.

OPERATING DAILY ALARM

Beeper sounds for 20 seconds at preset time every day until cleared when daily alarm is set. Press any button to stop beeper. Signal sounds every hour on the hour if time signal is set. (Sound demonstration) Press and hold **A** in alarm mode to sound beeper.

Setting daily alarm


- Press **F** to set new time.
- Press **C** to shift flashing digit(s). Digit(s) to be changed will flash.




- Each press of **A** advances flashing digits one by one and **L** reverses them. Keep pressed to move quickly.
- Press **F** to complete setting.

(Auto-retrieve function)
Display automatically returns to initial daily alarm time if left unused for a few minutes.

[On or off setting of daily alarm and time signal]

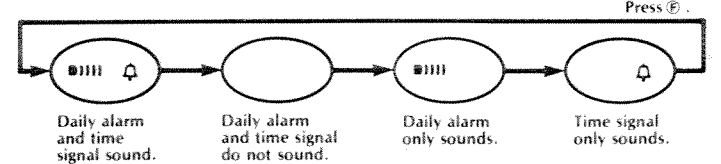

OPERATING STOPWATCH

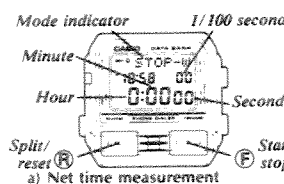

A signal confirms start/stop and split/reset operation. (Working range) Total elapsed time display is limited to 23 hours 59 minutes 59.99 seconds. For longer times reset and start again.

