


- To see details of specifications and operations, refer to the instruction manual:  C520 instruction manual

Component identification

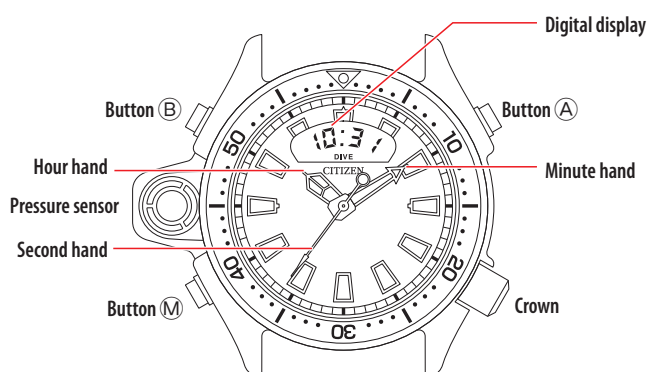

- Actual appearance may differ from the illustration.
- Refer also to our web page for detail of usage of the scale and bezel on the watch. (<http://www.citizenwatch-global.com/support/pdf/enhanced/e.pdf>)
- Rotate the screw down crown counterclockwise until it releases from the case before operating it. After operation, with pressing it to the case, rotate the crown clockwise to tighten it firmly.

Setting the time and calendar

Setting the time of the analog section

- Pull out the crown when the second hand points 0 second.**
The second hand stops.
- Rotate the crown to set the time.**
- Push in the crown in accordance with a reliable time source to finish the procedure.**
The second hand starts moving.


Setting the time of the digital section

- Press button (M) to cancel setting of the time of the digital section.
 - The setting is automatically canceled in about 3 minutes without any operation during the setting.
- Press and hold the lower left button (M) for 2 seconds or more to change the mode to "Time mode".**
 - Each time you press and hold the button for 2 second or more, confirmation alarm sounds and the mode switches between "Time mode" and "Diving mode" alternately.
 - Press and release the lower left button (M) repeatedly to change the mode to "Time/calendar".**
Hour/minute, second or calendar is indicated on the digital display.
 - Press and hold the upper left button (B) for 2 seconds or more.**
The "second" starts blinking and becomes adjustable.
 - Press the upper right button (A) in accordance with a reliable time source.**
 - Pressing the button when the seconds show from 30 thru 59 increases the minute by 1.



5. Press and release the upper left button (B) repeatedly to change the target to be set.

- Each time you press the button, the target changes as follows:

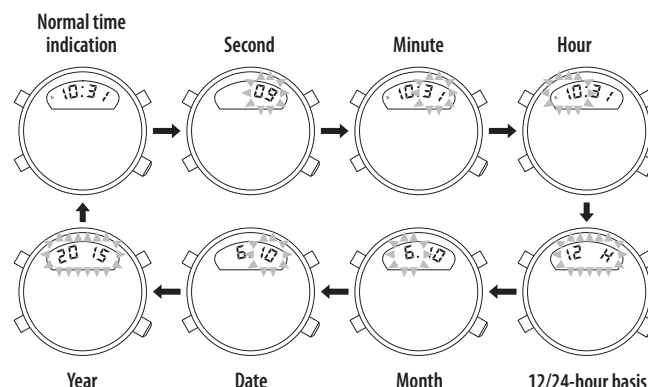

6. Press and release the upper right button (A) to adjust the target.

- Pressing and holding the button changes indication continuously.

7. Repeat steps 5 and 6 to set other targets.

8. Press and release the lower left button (M) to finish the procedure.

Resetting the watch - All Reset

- All the log data will be deleted after All Reset.

- Pull out the crown.**
- Press and release buttons (A), (B) and (M) at the same time.**
All the digital indication lights up.
- Push in the crown to finish the procedure.**
The alarm sounds.

After All Reset

After All Reset, set the time and calendar and other settings.