


ManualsLib.com

Cal. C440

Parts name	Time mode	Calendar mode	Alarm-1/Alarm-2 mode	Chronograph mode	Race Timer mode	Timer mode
Ⓐ button	Press once	EL illuminated	Switching On/Off	Start/stop (EL illuminated)	Start/stop	Start/stop
	Hold 2 secs.		Alarm sound monitor			
Ⓑ button	Press once	Adjustment mode changed		Split time (EL illumi-		Timer set

Cal. C450




Parts name	Time mode	Calendar mode	Alarm mode	Chronograph mode	Timer mode
Ⓐ button	Press once	EL illuminated	Switching On/Off	Start/stop (EL illuminated)	Start/stop
	Hold 2 secs.		Alarm sound monitor		
Ⓑ button	Press once	Adjustment mode changed		Split time (EL illuminated, reset)	Timer set (EL illuminated)
	Hold 2 secs.	Adjust Time	Adjust Calendar		
Ⓒ button	Press	To Calendar mode	To Alarm mode	To Chronograph mode	To Timer mode
① Mode marks	TME	CAL	ALM	CHR	TMR
② Digital display	Hours, Minutes, Seconds., AM/PM, Summertime	Month, Date, Day	Hours, Minutes, AM/PM, ON/OFF	Minutes, Seconds., 1/100 Sec. (Hours, Minutes, Seconds)	Timer set time (minutes) Remaining time (min., sec.)
③ 1/1 second graphic display	1/1 second graphic display		1/1 second graphic display	1/10 second graphic display	Timer remaining time (seconds) graphic display
			Alarm sound graphic display		
④ 5/1 second graphic display	5/1 second graphic display		5/1 second graphic display	5/1 second graphic display	Timer remaining time (min., sec.) graphic display
			Alarm sound graphic display		
⑤ Hours hand	Always shows hours			Always shows hours	
⑥ Minutes hand	Always shows minutes			Always shows minutes	
⑦ Seconds hand	Always shows seconds			Always shows seconds	
⑧ Crown	Use to set analog display			Use to set analog display	

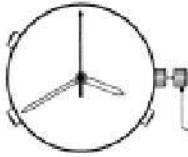


Analog time setting position




Cal. C440

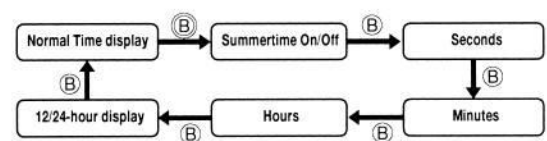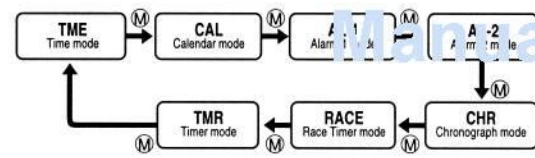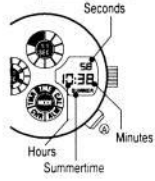



Button operation: (B) Press for 2 seconds or longer, (B) Press once

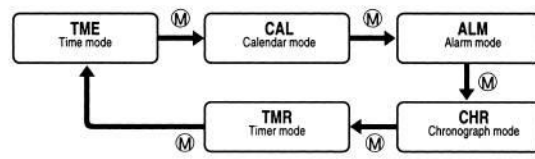


**Cal. C440**

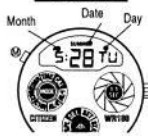

**Cal. C450**

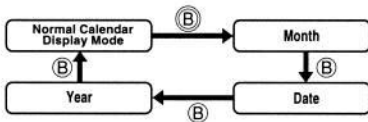 


**Reset Mode of Chronograph**


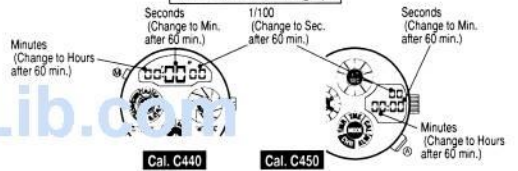




ManualsLib.com

**Cal. C440**



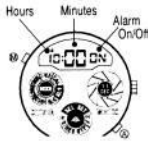



**Cal. C450**

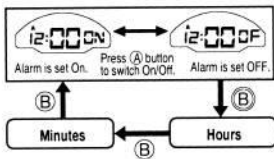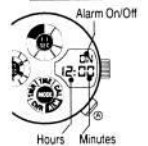

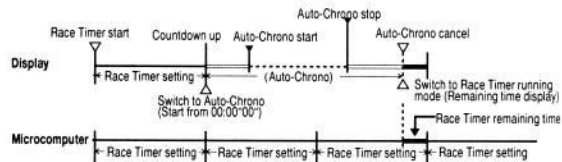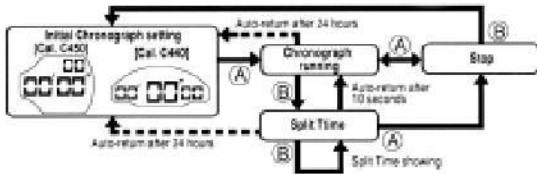


ManualsLib.com

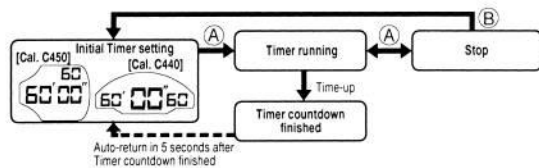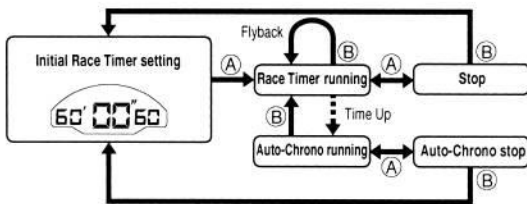
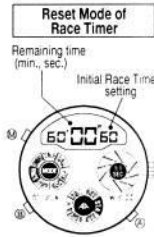


 



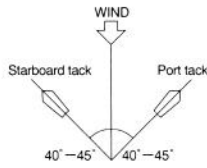


$\theta$

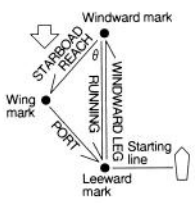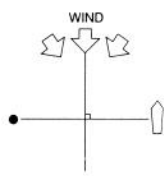

ManualsLib.com



Indication		Water related use				
Watch face	Caseback	 Light spray, perspiration, light rain, bathing etc.	 Swimming etc.	 Skin diving (without air tank)	 Scuba diving (Diving with air tank)	 Pulling the crown out when the watch is wet.
-	WATER RESIST	<b>OK</b>	<b>NO</b>	<b>NO</b>	<b>NO</b>	<b>NO</b>
WATER RESISTANT (5bar)	WATER RESIST	<b>OK</b>	<b>OK</b>	<b>NO</b>	<b>NO</b>	<b>NO</b>
WATER RESISTANT (10 – 20bar)	WATER RESIST	<b>OK</b>	<b>OK</b>	<b>OK</b>	<b>NO</b>	<b>NO</b>
"WATER RESISTANT" may sometimes be abbreviated "WATER RESIST" • Always set the crown in the normal position.						

**ManualsLib.com**