


- This watch is solar-powered. Expose the dial to light and use it sufficiently charged.
- To see details of charging time, specifications and operations, refer to the instruction manual:  B51* instruction manual

Component identification

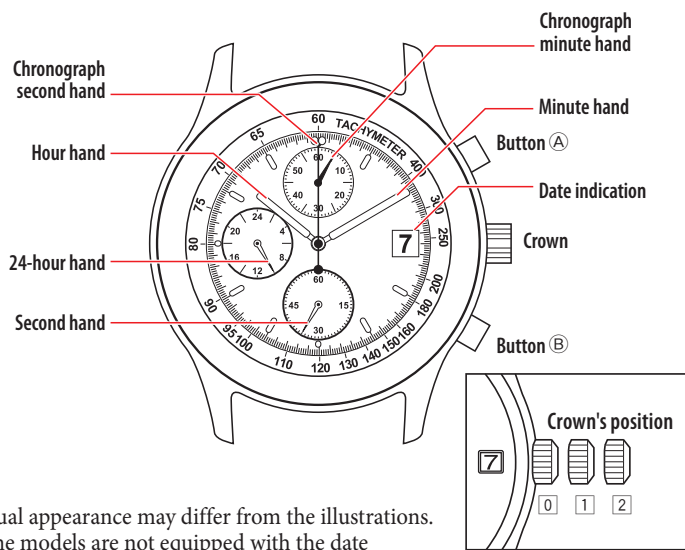


- Actual appearance may differ from the illustrations.
- Some models are not equipped with the date indication.
- The crown has two positions when pulling it out.
- Refer also to our web page for detail of usage of the scale and bezel on the watch. (<http://www.citizenwatch-global.com/support/pdf/enhanced/e.pdf>)

Charging by swinging the watch

In addition to exposing to light, this watch is charged by moving the arm wearing it.

Efficient swing to charge the watch

- Swing the watch back and forth in the range of 20 - 25 cm (8 - 10 inches) at the rate of 2 - 2.5 times per second.
- About 300 - 500 times of swing-back-and-forth are required to restart the watch when it is stopped.
- To see details of charging by swinging the watch, refer to the instruction manual.

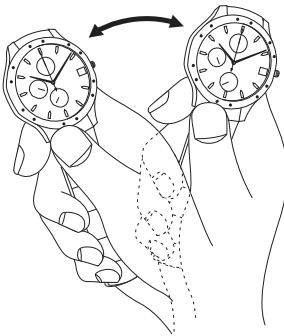

Setting the time

- 1. Pull the crown out to position [2] when the second hand points 0 second.**
The second hand stops.
- 2. Rotate the crown to set the time.**
 - Check whether the time set is AM or PM with the 24-hour hand.
 - Move the hands 4 or 5 minutes forward and move them back to the right time to set the time more precisely.
- 3. Push the crown in to position [0] in accordance with a reliable time source.**

Setting the date

- Do not adjust the date indication while the watch shows 9:00 PM - 1:00 AM. Otherwise, the date indication may change incorrectly thereafter.
- Date indication adjustment is required on the first days of March, May, July, October and December.

- 1. Pull the crown out to position [1].**
- 2. Rotate the crown counterclockwise to set the date indication.**
 - Clockwise rotation moves nothing.
- 3. Push the crown in to position [0] to finish the procedure.**

Adjusting the 0 position of the chronograph second hand

Adjust the position of the chronograph second hand when it does not return to the 0 position after resetting the chronograph or it settles at a wrong position due to strong shock or other causes.

- 1. Pull the crown out to position [2].**
- 2. Press and release the upper right button (A) repeatedly to adjust the chronograph second hand to the 0 position.**
 - Pressing and holding the button moves the hand continuously.
- 3. Set the time and push the crown in to position [0].**
- 4. Press and release the lower right button (B).**
The chronograph minute and second hands return to the 0 position. If not, repeat steps 1 - 3.
 - Adjust the time after finishing the 0-position adjustment.