





---

# ■ Main Components


051\*

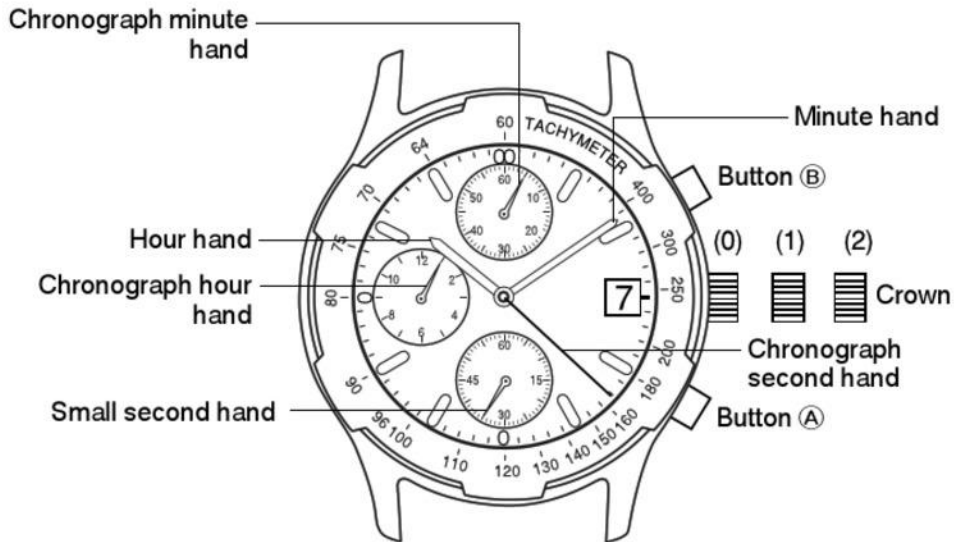


**051C**

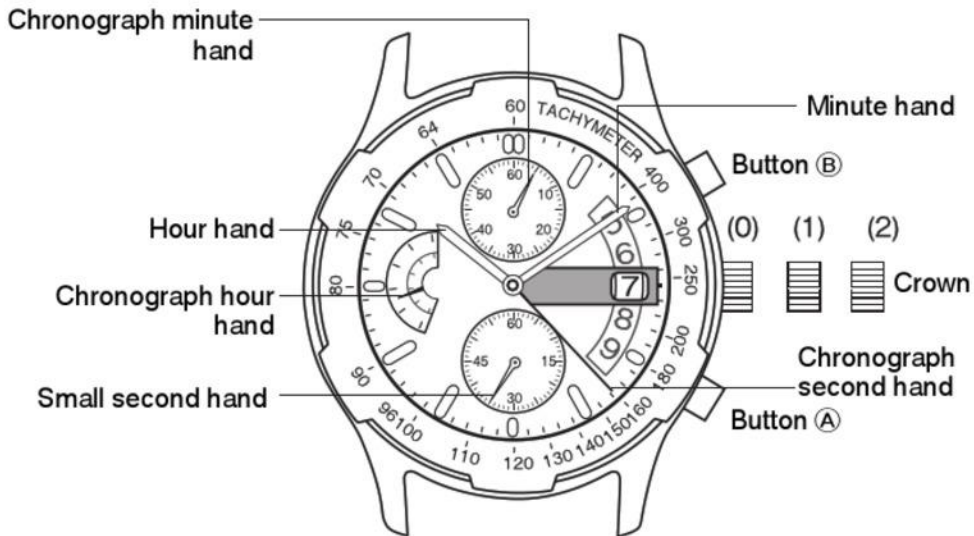


0540

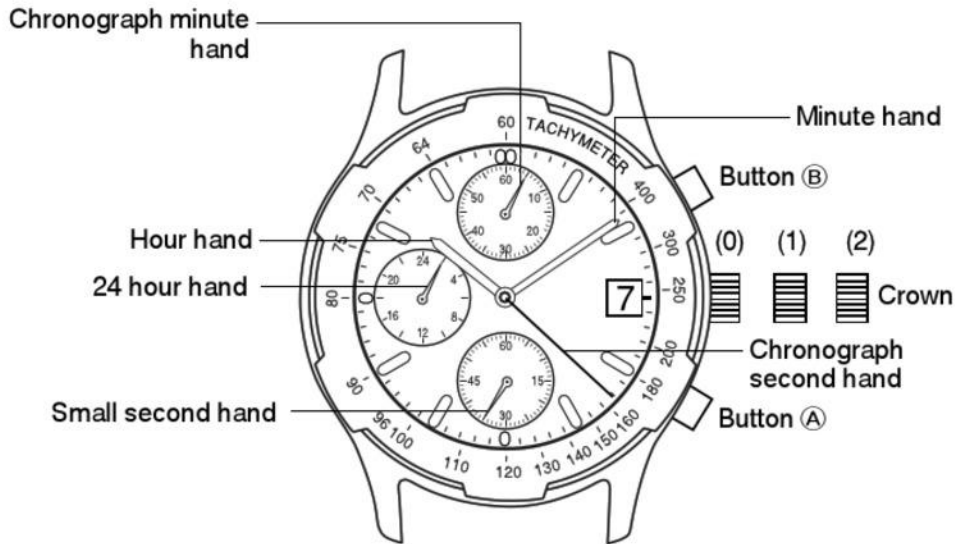



0560


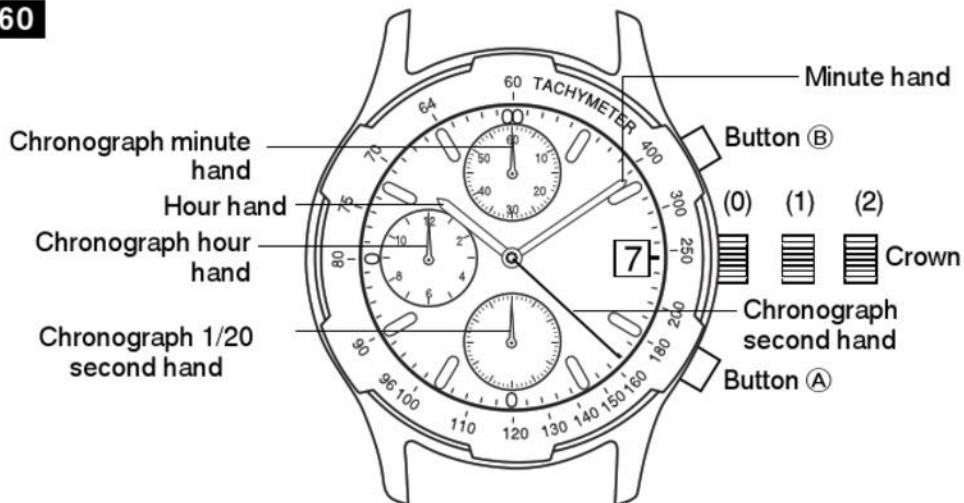



The Chronograph 1/20 second hand functions as one step movement to confirm normal watch operation when the chronograph is not being used. When stopped, this hand can be re-started by pressing button (A).

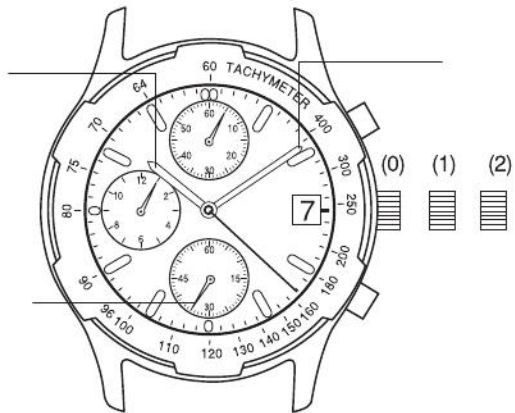


 
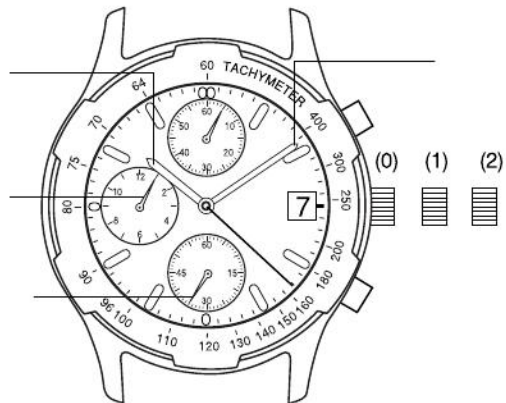


 
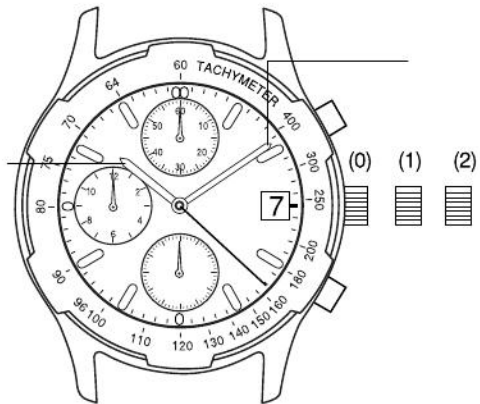


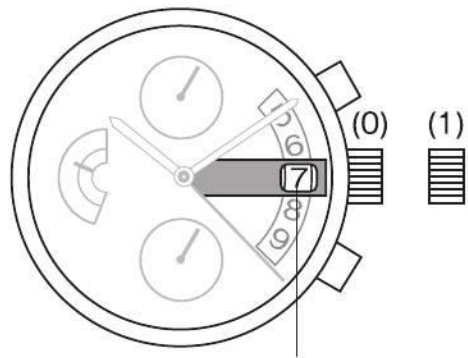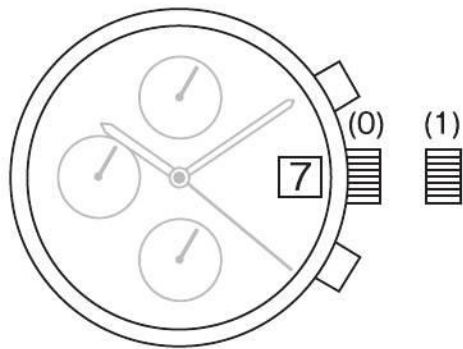


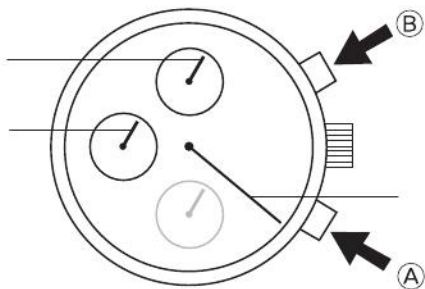


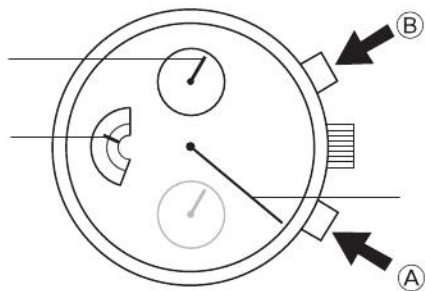


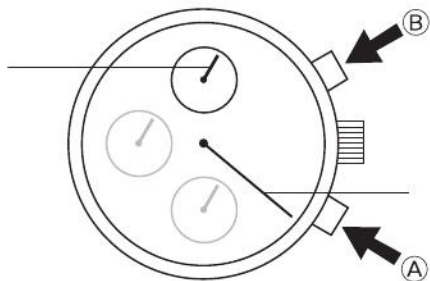


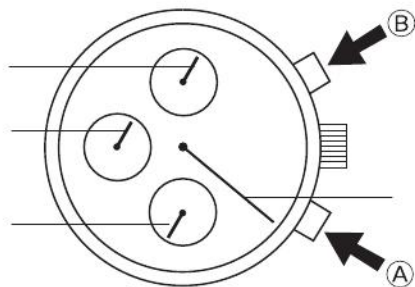



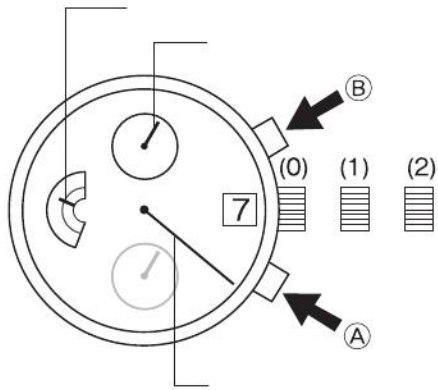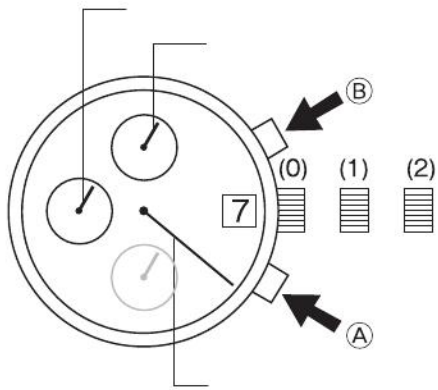

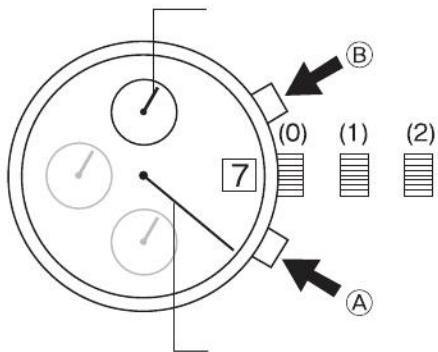

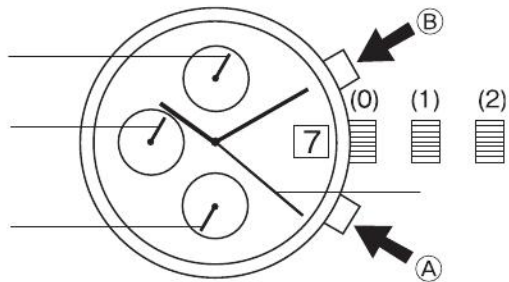





	<hr/>	



