
 


[Shifting international area times]

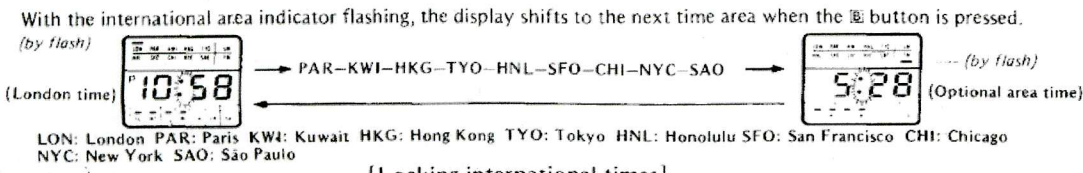

 
[Locking international times]

When the [] button is pressed for 4 seconds the area indicator display is locked and will not shift to the next area until the [] button is again pressed for 4 seconds.




[Adjusting standard time to daylight-saving time]

Certain countries adjust standard time for part of the year, especially for summer. The summertime adjustment can easily be performed by pressing the [] button with a pointed object such as a pen, pencil or paper clip. As the summertime adjustment effects only the area time displayed, if necessary, each area time can be adjusted for summertime differences.




[Presetting the optional area time]

In the TM position, an optional time and date is presetable following a procedure similar to setting calendar and time. As seconds are automatically synchronized with other area times ± 30 second adjustments cannot be performed in this position.

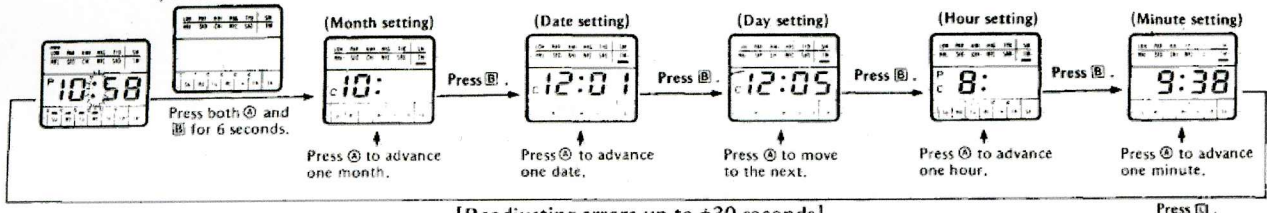

[Readjusting errors up to ± 30 seconds]

(Gains within 30 seconds)

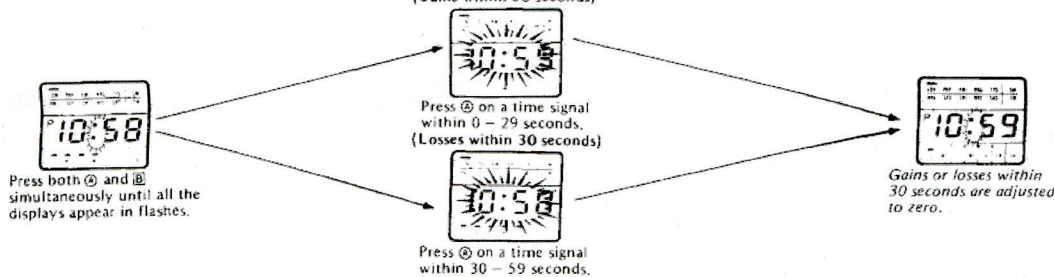

[Setting time and calendar]

