

PRINTED
IN
JAPAN

CASIO®

UC088418

DI

CASIO

Module No. 242

User's Guide/Warranty Certificate: 1/14
Guía del propietario/Certificado de garantía: 15/28
使用方法/保証書 29/42

028521

000000

000000

Setting alarm times

[ON or OFF setting of alarms]

In each alarm mode, every time the **(L)** button is pressed, the alarm-ON-mark (**(1)** **(2)** **(3)** **(4)** **(5)**) appears. When the alarm-ON-mark is lit, the alarm sounds at the preset time. To stop the buzzer, press the **(L)** button.

[ON or OFF setting of hourly time signals]


In hourly time signals mode, every time the **(L)** button is pressed, the hourly time signals-ON-mark (**(Δ)**) appears. When the mark is lit, the time signals sounds at every time on the hour.

(Sound demonstration) Press and hold the **(A)** button in each alarm mode to sound the buzzer.

Presetting daily alarm times

Presetting of all the alarm modes is the same as follows:

[Hour setting]

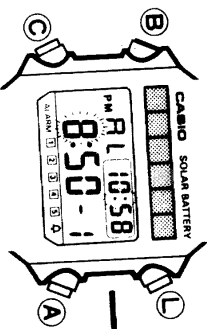


Press **(A)** to select the type of alarm.
Press **(B)** to set hours.*
One hour advances with every push of **(A)**.

[10-minute setting]



Press **(C)** to set 10-minute advances. 10 minutes advance with every push of **(A)**.


[1-minute setting]

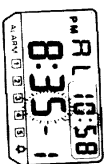

Press **(C)** to set minutes. One minute advances with every push of **(A)**. Press **(B)** to complete.

* When the watch is in the 24-hour system, the alarm time is displayed in the 24-hour system.

Presetting dual time

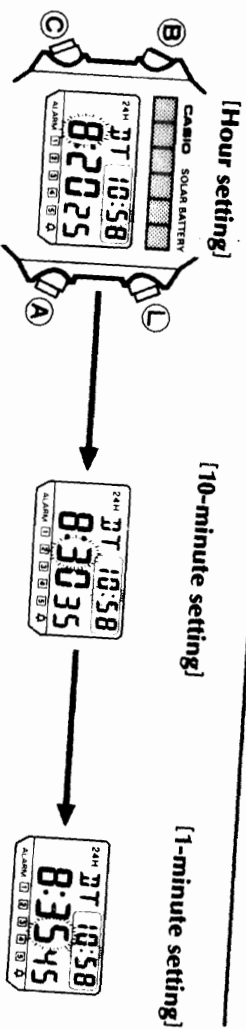

Press (B) in the dual time mode to set hours. One hour advances with every push of (A).

Press (C) to set 10-minute. 10 minutes advance with every push of (A).


Press (C) to set 1-minute. One minute advances with every push of (A). Press (B) to complete.

(Quick digit advance) When the (A) button is pressed for more than 2 seconds, the digit advances quickly. When released, the digit advance will stop.

5

Countdown alarm operation

The countdown can be set from one minute to 11 hours 59 minutes, and times to an accuracy of one second. Start/stop operation is possible by pressing the (A) button and is confirmed by a signal. A signal sounds at 5-minute intervals. When the display reaches zero, the buzzer will sound for 10 seconds unless the (L) button is pressed. (Repeat function) When the display is stopped, the pre-entered time is retrieved automatically.

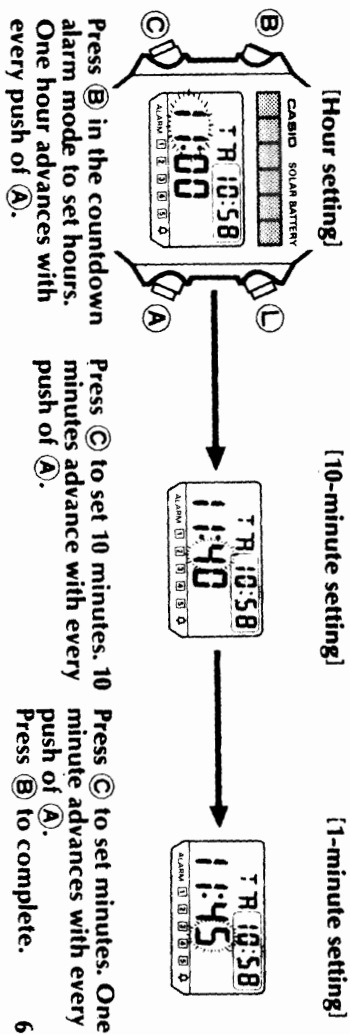

Press (B) in the countdown alarm mode to set hours. One hour advances with every push of (A).


Press (C) to set 10 minutes. 10 minutes advance with every push of (A).

Press (C) to set minutes. One minute advances with every push of (A). Press (B) to complete.

6


Stopwatch operation

A signal confirms start/stop operation. (Working range) The stopwatch display is limited to 59 minutes 59.99 seconds. Thereafter it can be reset and started again.

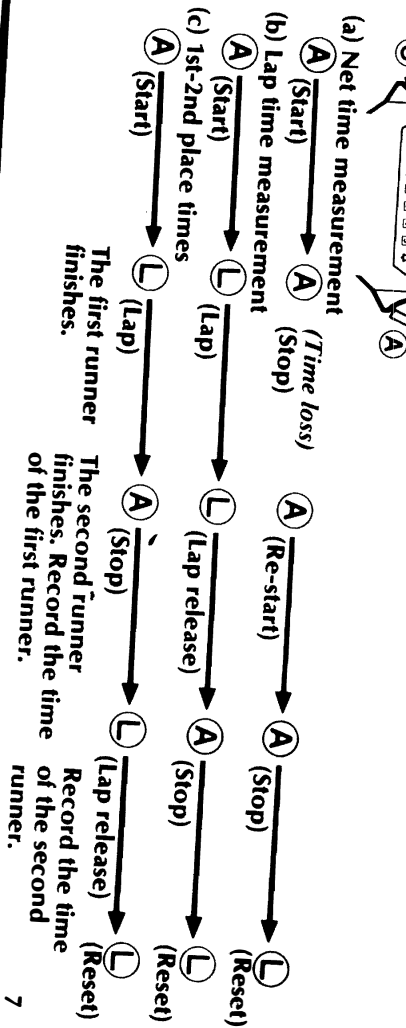

7

Setting time and calendar

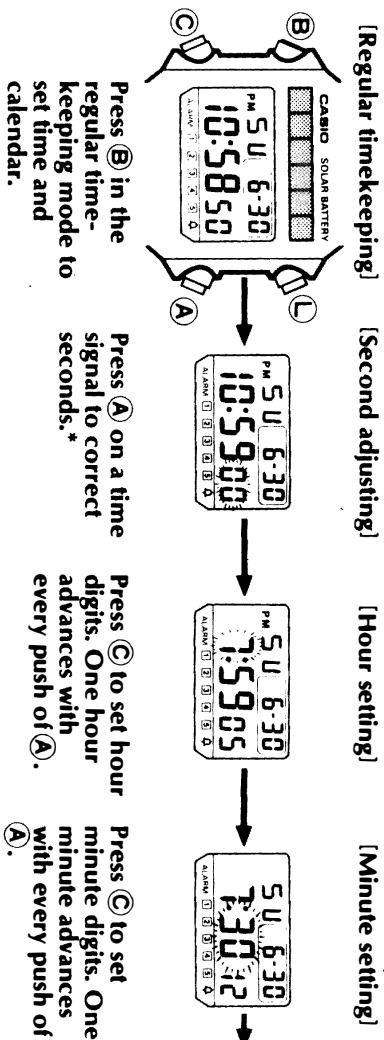


*Precise time can be maintained by correcting the seconds once a month on a time signal from a radio, TV, telephone, etc.

8

IMPORTANT: Setting sequence **MUST BE FOLLOWED** when making any new setting.

[Month setting]

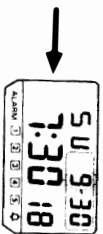


Press **(C)** to set month digits. One month advances with every push of **(A)**.

[Date setting]



Press **(C)** to set date digits. One date advances with every push of **(A)**.

[Day setting]

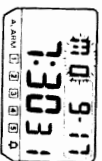

Press **(C)** to set day digits. Day moves to the next with every push of **(A)**. Press **(B)** to complete.

(Independent correction) Correction of any digit, if not required, can be skipped by pressing the **(C)** button repeatedly.

(Reversion to regular timekeeping mode) The watch reverts to the regular timekeeping mode if the **(B)** button is pressed, regardless of the digit setting mode. (Auto-retrieve function) When setting the watch, if you leave it alone for 2 to 3 minutes, the display will automatically return to the regular timekeeping mode.

9

Care of your watch

- Battery life: 7-year battery life starts when battery is factory installed. At first sign of power fade (no light or dim display), renew battery at sales store or Casio distributor.
- As this watch contains precise electronic components, it is suggested that the back cover be removed only by authorized personnel.
- Your watch is ranked A through E according to the water resistance chart below: Check the ranking of your watch to determine proper use.

Rank	Case designation	Splashes, rain, etc.	Swimming, car washing, etc.	Snorkeling, diving, etc.	Scuba diving
A*	—	No	No	No	No
B	WATER RESISTANT	Yes	No	No	No
C**	50M WATER RESISTANT	Yes	Yes	No	No
D***	100M WATER RESISTANT	Yes	Yes	Yes	No
E****	200M WATER RESISTANT	Yes	Yes	Yes	Yes

* The watch is sweat-resistant but not water-resistant. So be careful not to get it wet. The pendant type does not meet sweat-resistant levels.

10

** 50M WATER RESISTANT casing model does not permit underwater button operations.
*** 100M WATER RESISTANT casing model permits underwater button operations (except where buttons are countersunk).

Should the watch be exposed to sea water, wash it well with fresh water and wipe dry.

**** 200M WATER RESISTANT casing model withstands scuba diving use (except diving using helium-oxygen gas).

- A waterproof rubber seal is used to exclude water and dust. As rubber deteriorates after long usage, the seal should be replaced periodically (every 2—3 years).
- Should water or condensation appear in the watch, immediately have it overhauled because water can corrode electronic parts inside the case.
- Avoid exposing it to extremely high and low temperatures.
- Although the watch is designed to withstand shocks under normal use, it is inadvisable to subject it to hard knocks—rough usage or drops onto hard surfaces—.
- Avoid fastening the band too tightly. You should be able to insert your finger inside the band.
- Clean the watch and bracelet with a soft cloth, dry or moistened with mild soap. To avoid surface damage, never use volatile chemicals (such as benzine, thinners, spray cleaners, etc.).
- Gold plated surfaces can be kept in good condition by regular wiping with a soft damp cloth. Discoloration can be removed with detergent.

Always keep unused watches in a dry place.

11

- Avoid exposing the watch to strong chemicals such as gasoline, cleaning solvent, aerosol spray, adhesive agent, paints, etc. whose chemical action will destroy the seals, case and finish.

Specifications

Accuracy at normal temperature: ± 15 seconds per month

Display capacity:

- Regular timekeeping mode
- Hour, minute, second, am/pm, month, date, and day of week
- Calendar system: Auto-calendar set at 28 days for February
- Time system: Changeover between 12/24 hour formats
- Alarm mode
- Daily alarms - 1, 2, 3, 4 and 5
- Hourly time signal

● Dual time mode

Input range: From 1 minute to 11 hours 59 minutes

Measuring unit: Second

Measuring modes: Normal time and net time

● Stopwatch mode

Measuring capacity: 59 minutes 59.99 seconds

Measuring unit: 1/100th of a second

Measuring modes: Normal time, net time, lap time and 1st-2nd place times

Battery: The secondary battery (Type: No. 726R)
Approx. 7 years operation on type No. 726R (includes the alarm is used for 20 seconds per day).

NOTE: THERE IS NO WAY unit components can be damaged or malfunction, due to mis-operation of buttons. If confusing information appears on the display it means entry sequence was incorrect. Please read the manual and try again.

Warranty Certificate

THIS WARRANTY CERTIFICATE IS VALID ONLY FOR SERVICE IN THE COUNTRY OF PURCHASE.

Should this watch malfunction under normal use, it will be repaired without charge for a period of one year from the date of purchase. If the watch requires service within the warranty period, request repair or adjustment at the store where purchased or the authorized Casio watch distributor, presenting the watch together with this warranty certificate. The customer shall not have any claim under this warranty for repair or adjustment expenses if:

- (1) The trouble is caused by improper, rough or careless treatment.
- (2) The trouble is caused by a fire or other natural calamity.
- (3) The trouble is caused by improper repair or adjustment made by anyone other than the authorized Casio watch distributor or its retailers.
- (4) The case, band, glass or battery is damaged or worn.
- (5) This warranty certificate is not presented when requesting service.
- (6) The name and address of the authorized distributor or the retailer are not stamped in the warranty certificate.
- (7) The date of purchase, model name and manufacturing number are not entered in the warranty certificate.

* The above warranty applies to regions other than the United States of America.

* United Kingdom — This undertaking is in addition to consumers statutory rights and does not affect those rights in any way.

