


- To see details of specifications and operations, refer to the instruction manual:  C470/C471 instruction manual

Component identification



- Actual appearance may differ from the illustration.

Using EL lights

The EL lights are turned on when you press button (A) while the crown is pushed in and the mode is [TME], [CAL] or [SET].


Setting the time

Setting the time of the analog section

- Pull out the crown when the second hand points 0 second.**
The second hand stops.
- Rotate the crown to set the time.**
 - Move the hands 4 or 5 minutes forward and move them back to the right time to set the time more precisely.
- Push in the crown in accordance with a reliable time source to finish the procedure.**
The second hand starts moving.

Setting the time of the digital section

- Press button (M) to cancel setting of the time of the digital section.
 - The setting is automatically canceled in about 2 minutes without any operation during the setting.
- Press and release the upper left button (M) repeatedly to change the mode to [TME].**
 - Press and release the lower left button (B) repeatedly to indicate an area name you want on the digital display.**
 - For area names, refer to the table on "Using the world time".
 - Pressing and releasing button (A) while Pressing and holding button (B) also change the area name indication.
 - Press and hold the lower left button (B) for about 1 second.**
[S.T.] and [ON] or [OF] (off) starts blinking and the time becomes adjustable.
 - The blinking part is the target to adjust.
 - Press and release the lower left button (B) repeatedly to change the target to be set.**
 - Each time you press button (B), the target changes as follows:

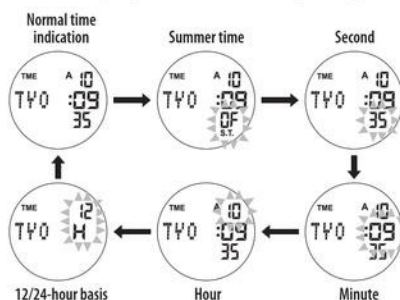

- Press and release the lower right button (A) to adjust the target.**
 - Press button (A) in accordance with a reliable time source when setting the second.
 - Pressing and holding button (A) changes indication continuously when setting the minute and the hour.
 - "A" or "P" is displayed to indicate AM or PM in 12-hour basis indication.
- Repeat steps 4 and 5 to set other targets.**
- Press and release the upper left button (M) to finish the procedure.**



Setting the calendar

The calendar of this watch does not have to be adjusted manually until Thursday, December 31, 2099 including leap years. (perpetual calendar)

- Press button **M** to cancel setting of the calendar.
- The setting is automatically canceled in about 2 minutes without any operation during the setting.

1. Press and release the upper left button **M repeatedly to change the mode to [CAL].**

2. Press and release the lower left button **B repeatedly to indicate an area name you want on the digital display.**


- For area names, refer to the table on "Using the world time".
- Pressing and releasing button **A** while Pressing and holding button **B** also change the area name indication.

3. Press and hold the lower left button **B for about 1 second.**

- The month indication starts blinking and the calendar becomes adjustable.
- The blinking part is the target to adjust.

4. Press and release the lower left button **B repeatedly to change the target to be set.**

- Each time you press button **B**, the target changes as follows:

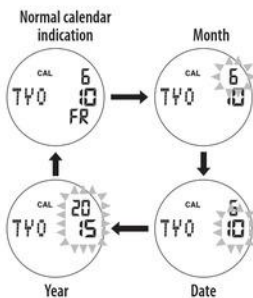

5. Press and release the lower right button **A to adjust the target.**

- Pressing and holding button **A** changes indication continuously.

6. Repeat steps 4 and 5 to set other targets.

7. Press and release the upper left button **M to finish the procedure.**

- The day of week is set automatically.

Using the world time

1. Press and release the upper left button **M repeatedly to change the mode to [TME].**

- Choose [CAL] to see calendar.

2. Press and release the lower left button **B repeatedly to choose an area name on the digital display.**

- The time or calendar of the chosen area is indicated on the digital display.
- Pressing and releasing button **A** while Pressing and holding button **B** also change the area name indication.

Table of time zones and representative areas

- The time zone in the table is based on UTC (Coordinated Universal Time).
- Countries or regions may change time zones for various reasons.

Time zone	Area name	Representative area	Time zone	Area name	Representative area
0	UTC	Coordinated Universal Time	+9	TYO	Tokyo
	LON	London	+10	SYD	Sydney
	PAR	Paris	+11	NOU	Noumea
+1	ROM	Rome	+12	AKL	Auckland
	CAI	Cairo	-10	HNL	Honolulu
+2	IST	Istanbul	-9	ANC	Anchorage
	MOW	Moscow	-8	LAX	Los Angeles
+3	KWI	Kuwait	-7	DEN	Denver
	DXB	Dubai	-6	CHI	Chicago
+4	KHI	Karachi	-5	MEX	Mexico City
+5.5	DEL	New Delhi		NYC	New York
+6	DAC	Dhaka	YMQ	Montreal	
+7	BKK	Bangkok	-4	CCS	Caracas
	SIN	Singapore	-3	RIO	Rio de Janeiro
HKG	Hong Kong	BUE		Buenos Aires	
BJS	Beijing				



Using the zone-set function

You can hide unnecessary ones in the 30 areas and UTC, which the watch can indicate the time of; you can also activate/deactivate summer time for those areas separately.

- Press button **M** to cancel setting.
- The setting is automatically canceled in about 2 minutes without any operation during the setting.

- 1. Press and release the upper left button **M** repeatedly to change the mode to [SET].**
- 2. Press and release the lower left button **B** repeatedly to choose an area name on the digital display.**
 - Pressing and releasing button **A** while Pressing and holding button **B** also change the area name indication.
- 3. Press and hold the lower left button **B** for about 1 second.**

"ON" or "OF" and the area name starts blinking and display/hide of the area becomes adjustable.
- 4. Press and release the lower right button **A** to select "ON" (display) or "OF" (hide) of the area.**
- 5. Press and release the lower left button **B**.**

"ON" or "OF" and "S.T." (summer time) starts blinking and the summer time setting becomes adjustable.
- 6. Press and release the lower right button **A** to set the summer time.**
- 7. Repeat steps 2 to 6 to set other areas.**
- 8. Press and release the upper left button **M** to finish the procedure.**

Resetting the watch — All Reset

- 1. Pull out the crown.**
- 2. Press and release buttons **A**, **B** and **M** at the same time.**

All the digital indication lights up.
- 3. Push in the crown.**

The alarm sounds and the digital indication is turned off.

After All Reset

After All Reset, set the time and calendar and other settings. Set also the alarm.

