






## Safety precautions (IMPORTANT)

This manual contains instructions that should be strictly followed at all times not only for optimal use, but to prevent any injuries to yourself, other persons or property. We encourage you to read the entire booklet (especially, pages 12 to 19) and understand the meaning of the following symbols:

- Safety advisories are categorized and depicted in this manual as follows:

 <b>DANGER</b>	Highly likely to cause death or serious injury
 <b>WARNING</b>	Can cause serious injury or death
 <b>CAUTION</b>	Can or will cause minor or moderate injury or damage

- Important instructions are categorized and depicted in this manual as follows:

	Warning (caution) symbol followed by instructions that should be followed or precautions that should be observed.
	Warning (caution) symbol followed by prohibited matters.







## Features



There are following four different designs of multi-hand analog quartz watch.

- Model with date/day indicators (Cal. 6325)
- Model with date/day indicators and a moon age display (Cal. 6320, 6321)
- Model with date/day/24-hour indicators (Cal. 6329)

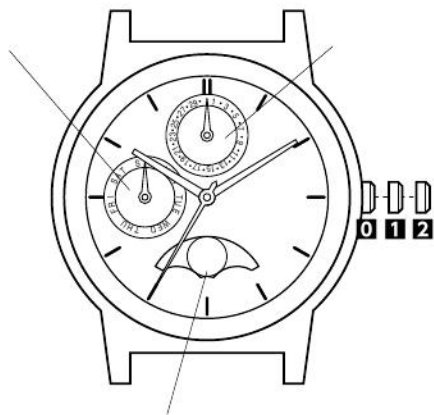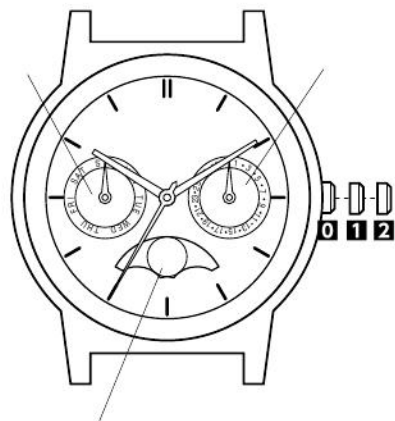

0  
1

2

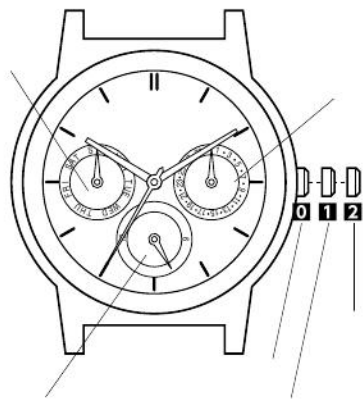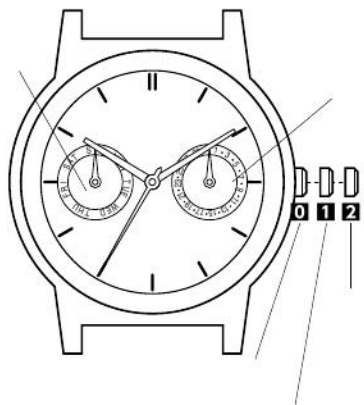



**2**

**0**

- You can not fast-forward the day setting. The day changes every time you advance the hour
- Be sure to rotate the crown clockwise to set the hour and minute hands. If you rotate it
- The day changes during a.m. time.

### Setting the date

1. Pull the crown out one step to position **I** .

2. Rotate the crown counterclockwise to set the date.

Do not change the date while the hour hand is indicating between 9 p.m. and 1a.m. If you change the date during this time, the date may not change to the following day.

3. Return the crown to the normal position **0** .

### Setting the Moon Age

The moon age indicator tells the moon age and not its actual shape. Refer to this indicator as a rough indication of the moon age or the moon phase.

## Setting the Time and Calendar

---


### a. Model with moon age scale

#### 1. Determine the moon age for the day.

Look in a newspaper to find out the moon age for the day, and then set the moon shape while referring to "How to see the moon age" shown in the right.

#### 2. Pull the crown out one 'step' to position **1**.

#### 3. Rotate the crown to turn the moon shape clockwise, and then set the center of the moon to 4.4 on the moon age scale. (Example: for moon age 4.4)

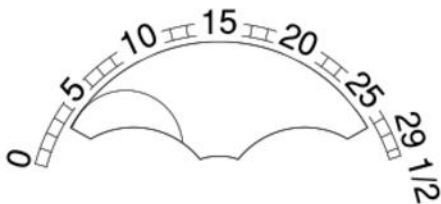

### b. Model without moon age scale

#### 1. Determine the moon age for the day.

Look in a newspaper to find out the moon age for the day, and then set the moon shape while referring to "How to see the moon age" shown in the right.



 

#### 2. Pull the crown out one 'step' to position **1**.

#### 3. Rotate the crown referring to "How to see the moon age" so that you can set the moon shape to the closest moon age (0, 7, 15, or 22).

### Moon age

The moon age depends on the period between new moons. This period is approximately 29 and half days.

### c. How to see the moon age

New moon Moon age: 0 (Spring)	First quarter Moon age: 7 (Neap)	Full moon Moon age: 15 (Spring)	Last quarter Moon age: 22 (Neap)
			






You can set the moon age more precisely at new moon (moon age: 0) or full moon (moon age: 15).



- Refer to the watch dial and the case back for the indication of the water resistance of your
- WATER RESIST(ANT)  $\times$ bar may also be indicated as W.R. $\times$ bar.
- Non-water resistant models are not designed to come into contact with any moisture. Take care not

- Water resistance for daily use (to 3 atmospheres) means the watch is water resistant for
- Upgraded water resistance for daily use (to 5 atmospheres) means that the watch may be worn while
- Upgraded water resistance for daily use (to 10/20 atmospheres) means that the watch may be worn





- Be particularly careful when wearing your watch while holding a small child, to avoid injury.
- Be particularly careful when engaged in strenuous exercise or work, to avoid injury to yourself
- Do NOT wear your watch while in a sauna or other location where your watch may become
- Be careful when putting on and taking off your watch, since there is a risk of damaging your
- Take off your watch before going to bed.



- Always use the watch with the crown pushed in (normal position). If the crown is of the screw
- Do NOT operate the crown or any push buttons when the watch is wet. Water may enter the
- If water enters the watch or the watch fogs up and does not clear up even after a long time,

- 
- Even if your watch has a high level of water resistance, please be careful of the following.
    - If your watch is immersed in sea water, rinse thoroughly with fresh water and wipe with a
    - Do not pour water from a tap directly onto your watch.
    - Take off your watch before taking a bath.
  - If seawater enters the watch, place the watch in a box or plastic bag and immediately take it in



- Leather, genuine skin and rubber (urethane) bands will deteriorate over time due to
- The durability of a leather band may be affected when wet (fading, peeling of adhesive), owing
- It is recommended to take off the watch if it gets wet, even if the watch itself is water resistant.



- 
- Analog quartz watches are powered by a step motor that uses a magnet. Subjecting the watch to
  - Avoid dropping the watch or subjecting it to other strong impact. It may cause malfunctions and/or
  - The integrated circuits (IC) used in quartz watches are sensitive to static electricity. Please note the
  - If paint thinner, benzene or other solvents or products containing these solvents (including gasoline,

- 
- Be sure to remove any protective stickers that may be on your watch (case back, band, clasp, etc.).



- Rotate the crown while it is pressed in fully and press the buttons periodically so they do not become
- The case and band of the watch come into direct contact with the skin in the same manner as
- The case and band of the watch come into direct contact with the skin. If you think there is something
- Leather bands may become discolored by perspiration or dirt. Always keep your leather band clean

- 
- Wipe any dirt or moisture such as perspiration from the case and crystal with a soft cloth.
  - For a metallic, plastic or rubber (urethane) watchband, wash any dirt off with water. Remove the
  - For a leather band, wipe off dirt using a dry cloth.
  - If you will not be using your watch for an extended period of time, carefully wipe off any

- The light emission gradually becomes weaker as time passes.
- The duration of the light (“glow”) will vary depending on the brightness, types of and
- The paint may not glow and/or may dissipate quickly if exposure to light was not sufficient.

	<ul style="list-style-type: none"><li>• Time: hours, minutes, seconds</li><li>• Time: 24-hour (Cal. 6329 only)</li><li>• Calendar: Date, day of the week</li><li>• Moon age (Cal. 6320 and 6321)</li></ul>
	<ul style="list-style-type: none"><li>• Date fast-forward setting function</li><li>• Second hand stop function</li></ul>

CE

Model No.AG8 \* · ED8 \*

Cal.632 \*

CTZ-B8170①