


# LORUS

## INSTRUCTIONS

L-HL029-1

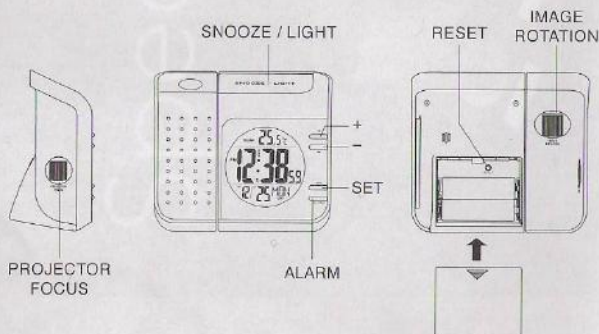

### Specifications

- Calendar with day-of-the-week display.
- Hour, Minute and Second display.
- 12 or 24 hour format.
- Operating temperature from 0°C to 50°C (32°F to 122°F).
- Temperature measuring range from -9.9°C to 50°C (14.2°F to 122°F).
- Temperature resolution 0.1°C (0.1°F).
- Alarm with snooze function.
- Backlight and projection display.

### Battery Installation

- Open the battery door.
- Load full set (2 pcs AA size battery) of new batteries in polarity (+) and (-) as indicated.
- Close the battery door.

Warning : Do not mix old and new batteries.  
Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel cadmium) batteries.

### SET THE CLOCK

#### To Set the Language

1. Press and hold the SET button for couple of seconds will go to language set mode.
2. Press - key to toggle different language.

#### To Set the Calendar

1. Press SET button after language set mode.
2. Press + or - button sequentially to set year.
3. Holding down either + or - button to change the year at high speed.
4. Press SET button to confirm year set and go to date set.
5. Press + or - button sequentially to set date.
6. Holding down either + or - button to change the date at high speed.

#### To Set the Time

1. Press SET button after calendar set mode.
2. Press + or - button sequentially to set minutes, when you press the + or - button once, the seconds count reset to 00.
3. Holding down either + or - button to change the time at high speed.

#### To Set the Format



1. Press SET button after desired time set and go to format set mode.
2. Press + button to toggle between 12hr and 24 hr time display format.
3. Press - button to toggle between °C and °F temperature display format.
4. Press SET button to confirm and quit the set mode.

#### Using Alarm


 
##### To Set Alarm Time

1. Press + or - button sequentially to set the alarm time, the alarm time will be shown at time display with AL icon turned on.
2. Holding down either + or - button to change the alarm time at high speed.

##### To Active Alarm Function

1. Press ALARM key once, the sign  will appear on the time display. The alarm function is activated.
2. To deactivate the alarm function, press ALARM key until the  disappear.

##### To Active the Snooze Alarm

1. Press ALARM key twice, the sign  and Zz will appear on the time display. The snooze function is activated.
2. When the alarm sounds, press the SNOOZE button. The alarm will sound again in approximately 5 minutes.
3. To deactivate the snooze alarm, press ALARM key until the  and Zz disappear.

##### To Use the Backlight and Projector

- You may check the time in the dark by simply pressing the "SNOOZE/LIGHT" button once. The display will light up with a soft glow that lasts for a while. You can read the time easily and clearly.
- Adjust by turning forwards or backwards the projector, so that the projection lens is pointed in the appropriate direction.
- Focus image - rotate "PROJECTOR FOCUS" forward or backward until the image clarity is optimized.
- Rotate image - rotate "IMAGE ROTATION" to turn the projected image clockwise or anticlockwise to suit your viewing.

Note : Frequent use of this feature will affect battery life.

##### To Reset the Unit

If the unit does not work properly, reset it by pressing the RESET button.

#### Care of Your Clock

- Avoid exposing your clock to extreme temperatures, water or severe shock.
- Avoid contact with any corrosive materials such as perfume, alcohol or cleaning agents.
- Do not subject the clock to excessive force, shock, dust, temperature or humidity. Any of these conditions may shorten the life of the clock.
- Do not tamper with any of the internal components of this clock. This will invalidate the warranty and may cause damage.

#### Disposal of Your Old Product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.



Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

#### Disposal of Flat Batteries / Accumulators

You, as the end user, are legally obliged (Battery Ordinance) to return all flat batteries and rechargeable batteries. Disposal in the household waste is prohibited.

"European Directive 2006/66/EC" Batteries, including rechargeable batteries, which contain hazardous substances are marked by symbols which indicate the prohibition of disposal in the household waste. The designations for the heavy metals concerned are as follows : Cd = cadmium, Hg = mercury, Pb = lead. You can return flat batteries / rechargeable batteries free of charge to the collection points in your community or anywhere else where batteries / rechargeable batteries are sold.

You thus fulfil your statutory obligations and help protect the environment.



#### Caution

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type, please refer to the engraved battery marks inside the battery compartment for the correct battery polarity (+) and (-).