 



OPERATION CHART: MODULE QW-1177

GENERAL GUIDE

- Press **C** to change from mode to mode. Each mode is explained in detail on the following pages.

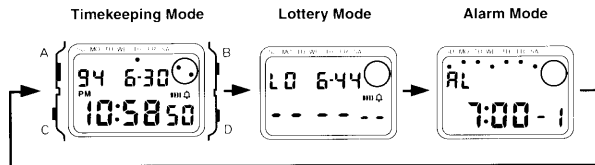

 
TIMEKEEPING MODE

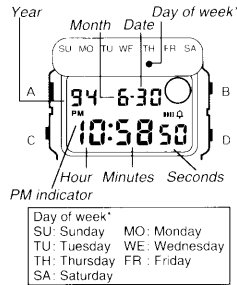

- In the Timekeeping Mode, press **D** to switch between the 12-hour and 24-hour formats.

To set the time and date

 - Press **A** while in the Timekeeping Mode. The seconds digits flash on the display because they are selected.
- Press **C** to change the selection in the following sequence.

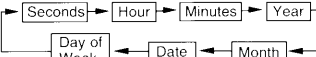

- While the seconds digits are selected (flashing), press **D** to reset the seconds to "00". If you press **D** while the seconds count is in the range of 30 to 59, the seconds are reset to "00" and 1 is added to the minutes. If the seconds count is in the range of 00 to 29, the minutes count is unchanged.
- While any other digits (besides seconds) are selected (flashing), press **D** to increase the number or **B** to decrease it. While the day of the week is selected, pressing **D** advances to the next day and **B** goes to the previous day.
- Holding down either button changes the current selection at high speed.
- After you set the time and date, press **A** to return to the Timekeeping Mode.

- The date can be set within the range of January 1, 1990 to December 31, 2029.
- If you do not operate any button for a few minutes while a selection is flashing, the flashing stops and the watch goes back to the Timekeeping Mode automatically.


LOTTERY MODE

This mode generates two-digit random values to assist you in selecting numbers for a lottery. You can specify generation of three to six values, and you can specify the maximum value generated as any number from 10 to 99.

Important!

No representation or warranty is made that the generation of random two-digit values by the watch and the use of such values in connection with any lottery or other game of chance guarantees the winning of any lottery or other game of chance. No responsibility is assumed for any incidental or consequential damages including but not limited to damages resulting from the use of any random value generated by the watch.


Lottery Number Demo Display

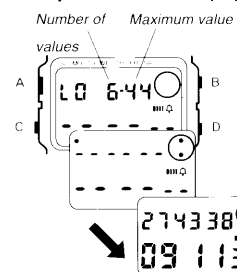

In the Timekeeping Mode, hold down **B** until the Lottery Number Demo Display appears. After a few more seconds, the display automatically changes to show the Lottery Number Display. Pressing any button while the Lottery Number Display is shown returns to the Timekeeping Mode.

- You can specify the number of values to be generated and the maximum value to use. For details, see "Setting the maximum value and the number of values to be generated" below.


Setting the maximum value and the number of values to be generated

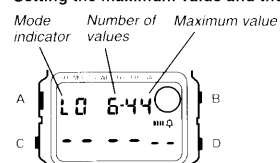

- Press **A** while in the Lottery Mode. The maximum value digits flash on the display because they are selected.
- Press **C** to change the selection in the following sequence.




- While the maximum value or number of value digits are selected (flashing), press **D** to increase the number or **B** to decrease it in the following sequence.

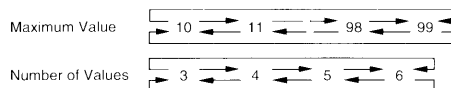


- Holding down either button changes the current selection at high speed.
- Values are generated within the range of 01 up to the maximum value that you specify.
- After you finish setting the maximum value and the number of values, press **A** to return to the Lottery Mode.
- If you do not operate any button for a few minutes while a selection is flashing, the flashing stops and the watch goes back to the Lottery Mode automatically.

To use the lottery function

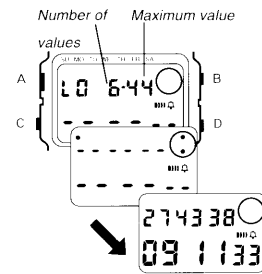

- Press **D** while in the Lottery Mode.
- The number of lottery numbers that appear are in accordance with the number of values you have preset. The values generated are within the range from 01 up to the value you specified as the maximum value.
- This lottery number generation routine built into this watch is programmed not to generate two or more of the same values in a set of lottery numbers.
- To generate a different set of numbers, press **D** again.

ALARM MODE

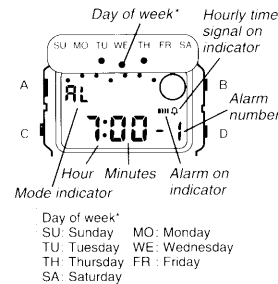

You can set two independent alarms with hour, minutes and the day of the week. When the alarm is on, it sounds for 20 seconds at the preset time. You can set alarms to remind you of drawings for lotteries you have entered.

Press any button to stop the alarm after it starts to sound. When the Hourly Time Signal is on, the watch beeps every hour on the hour.

- The marks that appear under the days of the week in the Alarm Mode indicate for which days the alarm is set.

Alarm Types

The types of alarm you get depends on the information you set.

To set a Daily Alarm

Set the hour and minutes for the alarm time, and then specify the alarm for all days of the week. This type of setting causes the alarm to sound every day at the time you set.

To set an alarm for specific days of the week

 
Set the hour, minutes, and the days of the week that you want the alarm to sound. This type of setting causes the alarm to sound every week at the time you set, on the days of the week you set. You can set as many days of the week as you want.

To set alarms

- Press **D** while in the Alarm Mode to select Alarm 1 or Alarm 2.



- You can set two different alarms. Set one as Alarm 1 and the other as Alarm 2.
- After you select an alarm, press **A**. The hour digits flash on the display because they are selected.
- Press **C** to change the selection in the following sequence.

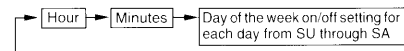

- A mark flashes under the day of the week currently selected for on/off setting.



- While hour or minutes digits are selected, press **D** to increase the selected digits or **B** to decrease them. Holding down either button changes the selection at high speed.
- The format (12-hour or 24-hour) of the alarm time matches the format you select for normal timekeeping.
- When setting an alarm time using 12-hour format, take care to set the time correctly as morning or afternoon (PM).
- When the flashing mark is under a day of the week, press **D** to switch the day of the week setting on and off.
- Switch the alarm on for the days of the week on which you want the alarm to sound.
- Switching all days of the week off effectively switches the alarm off.
- After you finish making the alarm settings that you want, press **A** to return to the Alarm Mode.

To switch an Alarm and Hourly Time Signal on and off

- In the Alarm Mode, press **D** to select an alarm or the Hourly Time Signal.
- When the alarm or Hourly Time Signal you want to is selected, press **B** to switch it on and off.

■ Indicates alarm is ON

⊕ Indicates Hourly Time Signal is ON

- If any alarm is on, the Alarm On Indicator is shown on the display when you change to another mode.

To test the alarm

Hold down **D** while in the Alarm Mode to sound the alarm.