


ABOUT THIS MANUAL

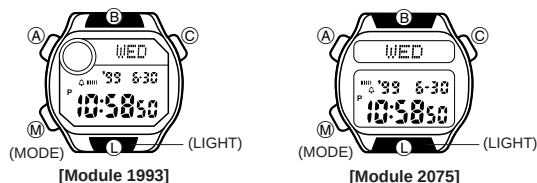

- The operational procedures for Module 1993 and 2075 are identical. All of the illustrations in this manual show Module 1993.
- Button operations are indicated using the letters shown in the illustration.

 
GENERAL GUIDE

- Press (M) to change from mode to mode. Each mode is explained in detail on the following pages.
- In any mode, press (L) to illuminate the display.


Timekeeping Mode



Telememo Mode



Identification (ID) Mode

 

Vital Statistics Mode



Stopwatch Mode



Alarm Mode




 
TIMEKEEPING MODE

In addition to normal timekeeping, the Timekeeping Mode is also used to set the current time and date, and to turn the EL alarm on and off.

- In the Timekeeping Mode, graphic area indicates counting of seconds.

To set the time and date

1. Press (A) while in the Timekeeping Mode. The seconds digits flash on the display because they are selected.
2. Press (M) to change the selection in the following sequence.

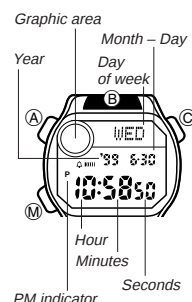

3. While the seconds digits are selected (flashing), press (B) to reset the seconds to 00. If you press (B) while the seconds count is in the range of 30 to 59, the seconds are reset to 00 and 1 is added to the minutes. If the seconds count is in the range of 00 to 29, the minutes count is unchanged.
4. While any other digits (besides seconds) are selected (flashing), press (B) to increase the number. While the 12/24-hour setting is selected, press (B) to switch between the two formats.
 - Holding down (B) changes the current selection at high speed.
 - When the 12-hour format is selected, the 12H indicator appears on the display. With the 12-hour format, the P (PM) indicator appears on the display to indicate "p.m." times. There is no indicator for "a.m." times.
 - Selecting the 24-hour format causes the 24H and the 24 indicators to appear on the display.
5. After you set the time and date, press (A) to return to the Timekeeping Mode.
 - The day of the week is automatically set in accordance with the date.
 - The date can be set within the range of January 1, 1995 to December 31, 2039.
 - If you do not operate any button for a few minutes while a selection is flashing, the flashing stops and the watch goes back to the Timekeeping Mode automatically.

BACKLIGHT

The backlight uses an EL (electro-luminescent) panel that causes the entire display to glow for easy reading in the dark. An EL alarm feature can be turned on so the backlight flashes whenever an alarm or hourly time signal sounds.

- Pressing (L) in any mode illuminates the display for about three seconds, regardless of the EL alarm on/off setting.
- The backlight of this watch employs an electro-luminescent (EL) light, which loses its illuminating power after very long term use.
- The backlight remains lit for about three seconds from the point you press (L), even if it already lit when you press (L). If you keep (L) depressed for one or two minutes, the backlight will automatically turn off.
- The illumination provided by the backlight may be hard to see when viewed under direct sunlight.
- The backlight automatically stops illuminating whenever an alarm sounds.
- The watch will emit an audible sound whenever the display is illuminated. It does not indicate malfunction of the watch.

To turn the EL alarm on and off



EL alarm on indicator

In the Timekeeping Mode, hold down (B) for one or two seconds to toggle the EL alarm on (star displayed) and off (star not displayed).

- The EL alarm on indicator remains on the display in all modes until you switch the EL alarm off.
- The above operation controls operation of the EL alarm only. It does not affect operation of audible tones and signals.
- When an alarm is reached while the EL alarm is turned on, the flashing of the backlight and the timing of the alarm tones may not be exactly matched. This is normal and does not indicate malfunction.


TELEMEMO MODE

The Telememo Mode lets you store up to 20* pairs of name and telephone number data. Stored data is sorted automatically into alphabetic sequence based on the characters of the name.

* The Telememo Mode shares memory with the Identification (ID) Mode. This means that the maximum number of Telememo Mode entries you can store is reduced by one each time you store Identification Mode.


To check remaining memory

In the Telememo Mode, hold down (B) and (C) to display how much memory remains for input of data. The value that appears shows how many more data items (Telememo Mode and ID Mode) you can input.

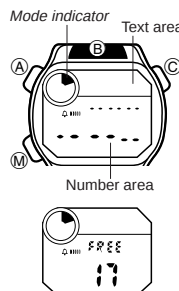

- This watch has three built-in ID Mode titles, which are programmed in memory when you first purchase the watch and which are automatically set whenever the watch's battery is replaced. Because of this, the remaining memory display shows a value of 17 (20 - 3) whenever it is performed immediately after you purchase the watch or have the battery changed.

To input new Telememo data

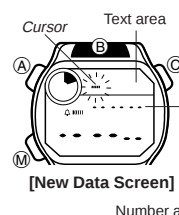

[New Data Screen]

Number area

1. In the Telememo Mode, press (B) or (C) until the new data screen appears.
 - If there is no Telememo data stored in memory yet, the new data screen appears as soon as you enter the Telememo Mode.
 - If the message FULL appears in the text area, it means that memory is full. To store more data, you will first have to delete some of the data stored in memory.
2. Press (A) and a cursor appears in the text area.
3. Input a name in the text area and a telephone number in the number area.
 - You can input up to eight characters in the text area, and 12 digits in the number area.

Use (B) and (C) to input characters, and (M) to move the cursor around the display. For details, see "How to input characters".

- Make sure that you distinguish between the letter O and the number 0 (zero). Inputting a zero for the letter O will affect automatic sorting.
- 4. After inputting your data, press (A) to store it and return to the Telememo Mode.
- The text area can show only five characters at a time, so longer messages scroll continuously right to left.

To recall Telememo data

In the Telememo Mode, press (B) to scroll forward through stored data items or (C) to scroll in reverse.


- Holding down either button scrolls through the data at high speed.
- The data item that is displayed when you exit the Telememo Mode is still displayed the next time you enter the Telememo Mode.

To edit Telememo data items

1. In the Telememo Mode, scroll through the data items and display the one you want to edit.
2. Press (A) and a cursor appears in the text area.
3. Use (M) to move the cursor to the character you want to change.
4. Change the character.
- See "How to input characters" for details.
5. After making the changes that you want, press (A) to store them and return to the Telememo Mode.

To delete Telememo data

1. In the Telememo Mode, scroll through the data items and display the one you want to delete.
2. Press (A) and a cursor appears in the text area.
3. Press (B) and (C) at the same time to delete the Telememo data item.
- At this time the cursor appears in the text area, ready for input.
4. Input data or press (A) to return to the Telememo Mode.

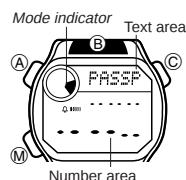

IDENTIFICATION (ID) MODE

With the Identification (ID) Mode, you can input up to 20* sets of data, each of which contains a title (such as passport, credit card, etc.) and a number. Data is automatically sorted into the alphabetic sequence of the titles.

* The ID Mode shares memory with the Telememo Mode. This means that the maximum number of ID Mode entries you can store is reduced by one each time you store Telememo Mode.

Important!

The ID Mode is useful for storing important data like passport numbers, license numbers, credit card numbers, etc. Note, however, that storing such important data in the watch's memory runs the risk of it being misused should you lend the watch to someone, or should the watch become lost or stolen. Because of this, the manufacturer strongly recommends that you store such important information in coded form that cannot be understood by others.

Note that CASIO COMPUTER CO., LTD. shall not be held liable to you or any third party for any losses or damages suffered through the misuse of data stored in the memory of this watch.

About titles

- This watch has three built-in ID Mode titles: PASSPORT, LICENSE, and CREDIT (credit card). You can use these built-in titles as they are, append eight more characters to a built-in title (to indicate a credit card company name, for example), or change a built-in title to a different one.
- In addition to the three built-in titles, you can also input your own titles, up to eight characters long.
- You can input more than one set of data using the same title.

About automatic sorting

ID Mode data items are automatically sorted according to their titles. The three built-in titles come first, followed by the titles you input, in alphabetical order.


To check remaining memory



In the ID Mode, hold down (B) and (C) to display how much memory remains for input of data. The value that appears shows how many more data items (Telememo Mode and Identification Mode) you can input.

- This watch has three built-in ID Mode titles, which are programmed in memory when you first purchase the watch and which are automatically set whenever the watch's battery is replaced. Because of this, the remaining memory display shows a value of 17 (20 - 3) whenever it is performed immediately after you purchase the watch or have the battery changed.

To input new ID Mode data

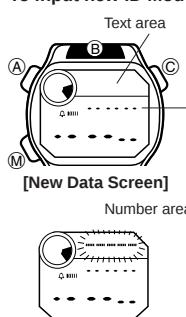


1. In the ID Mode, press (B) or (C) until the text area of the display shows either one of the built-in titles or the new data screen.
- If the message FULL appears in the text area, it means that memory is full. To store more data, you will first have to delete some of the data already stored in memory.

2. Press (A) and the characters in the text area begin to flash.

3. Use (B) and (C) to display a built-in title or new title input (-----). Each press of (B) and (C) changes the selected title in the following sequence.

 Press (B)



Press (C)

- The built-in titles PASSP, LICEN, and CREDI always appear in the above sequence, along with the display for input of a new title. Titles you previously created when inputting other data do not appear.
- If you want to input your own title for the data, select -----.
- 4. Press (M) and a cursor appears in the text area.
- 5. Input a title in the text area and a number in the number area.
- You can input up to eight characters in the text area, and 12 digits in the number area.

Use (B) and (C) to input characters, and (M) to move the cursor around the display. For details, see "How to input characters".

- If you are using a built-in title, you can append up to eight characters to the built-in title.
- To use a built-in title as it is without appending text, press (M) eight times to move the cursor to the number area.
- 6. After inputting your data, press (A) to store it and return to the normal ID Mode data screen.
- The text area can show only five characters at a time, so longer titles scroll continuously right to left.

To recall ID Mode data

In the ID Mode, press (B) to scroll forward through stored data items or (C) to scroll in reverse.

- Holding down either button scrolls through the data at high speed.
- The data item that is displayed when you exit the ID Mode is still displayed the next time you enter the ID Mode.

To edit ID Mode data items

1. In the ID Mode, scroll through the data items and display the one you want to edit.
2. Press (A) and the characters in the text area begin to flash.
- You can also use this procedure to edit built-in title names.
3. Use (M) to move the cursor to the character you want to change.
4. Change the character.
- See "How to input characters" for details.
5. After making the changes that you want, press (A) to store them and return to the ID Mode.

To delete ID Mode data items


1. In the ID Mode, scroll through the data items and display the one you want to delete.
2. Press (A) and the characters in the text area begin to flash.
3. Press (B) and (C) at the same time to delete the ID data item.
4. Press (A) to return to the ID Mode.

VITAL STATISTICS MODE

The Vital Statistics Mode provides space in memory for storage of your name, blood type, and the date of your birth.

To recall Vital Statistics data

In the Vital Statistics Mode, press (B) or (C) to change the data on the display in the following sequence.

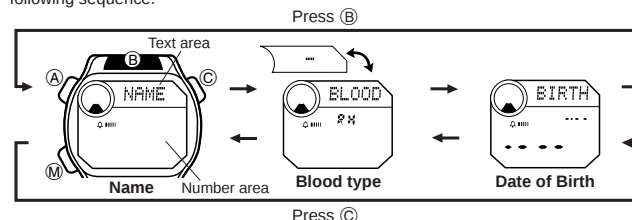

- The name display always appears first whenever you enter the Vital Statistics Mode.

Important!

- In the blood type display, the text area shows the blood type (A, B, O, AB) and the number area indicates the Rh factor (+ or -). If no blood type data is stored in memory (after you purchase the watch or have the battery replaced), the text area shows "-" and the number area shows "RH". Since these indicators can easily be misunderstood as meaning "RH negative," we recommend that you input the correct blood type data as soon as possible when necessary.
- Use the Vital Statistics Mode to store your own personal data (name, blood type, date of birth). Once you input your personal data, take care that the watch is not borrowed by another person. Otherwise, emergency medical personnel may assume that your data in the Vital Statistics Mode applies to the person who borrowed the watch.
- Data stored in the Vital Statistics Mode is cleared when you have the battery of the watch replaced. Be sure to input data again after battery replacement.

To input your name




1. In the Vital Statistics Mode, display the NAME screen.
2. Press (A) and a cursor appears in the text area.
3. Input your name into the text area.
- You can input up to 20 characters for your name.


Use (B) and (C) to input characters, and (M) to move the cursor around the display. For details, see "How to input characters".

- You can clear the characters currently input for the name by pressing (B) and (C) at the same time.
- 4. After inputting your data, press (A) to store it and return to the normal NAME screen.
- The text area can show only five characters at a time, so a longer name scrolls continuously right to left.


To input your blood type

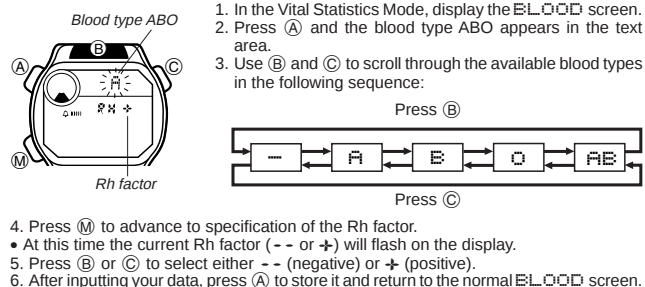

To input the date of your birth

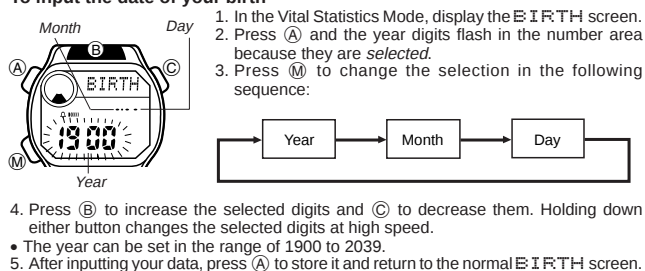

ALARM MODE

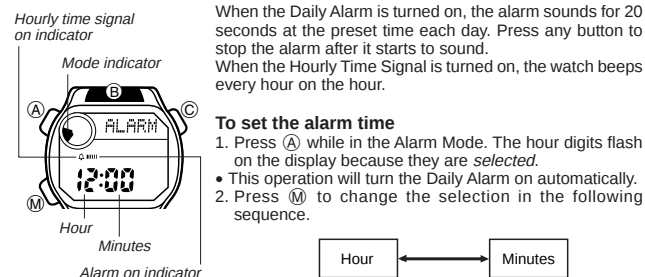


3. Press (B) to increase the selected digits. Holding down (B) changes the selection at high speed.
- The format (12-hour and 24-hour) of the alarm time matches the format you select for normal timekeeping.
- When setting the alarm time using the 12-hour format, take care to set the time correctly as morning (no indicator) or afternoon (P).
4. After you set the alarm time, press (A) to return to the Alarm Mode.

To turn the Daily Alarm and Hourly Time Signal on and off


Press (B) while in the Alarm Mode to change the status of the Daily Alarm and Hourly Time Signal in the following sequence.

 [Hourly Time Signal ON Indicator/Alarm ON Indicator]



To test the alarm


Hold down (C) while in the Alarm Mode to sound the alarm.

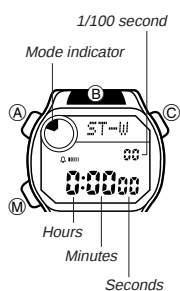


STOPWATCH MODE

The Stopwatch Mode lets you measure elapsed time, split times, and two finishes. The range of the stopwatch is 23 hours, 59 minutes, 59.99 seconds.

 (a) Elapsed time measurement



 (b) Split time measurement




(c) Split time and 1st-2nd place times




INPUTTING TEXT

The following describes how to input text in the Telememo Mode, ID Mode, and Vital Statistics Mode.

How to input characters

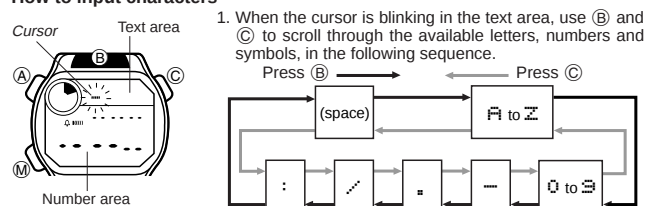

- Holding down either button scrolls through at high speed.
- You can input English alphabetic characters, numbers, and symbols in the text area. For a complete list of characters you can input, see the "CHARACTER LIST".
- When the character you want at the cursor position is shown, press (M) to move the cursor to the right.
- Repeat steps 1 and 2 until your text is complete.
- The text area in the Telememo Mode and ID Mode can hold up to eight characters. When the cursor is located at the eighth space of the text area in these modes, moving the cursor to the right causes it to jump down to the first digit in the number area. When the cursor is at the 12th digit of the number area, moving it to the right causes it to jump back up to the first character of the text area.
- You can input only numbers and spaces in the number area. Each press of (B) or (C) changes the input at the current cursor location in the following sequence:

 

- If you do not perform any button operation for about two or three minutes while the cursor is on the display, the watch automatically returns to the normal data display (the cursor disappears).

CHARACTER LIST

1	(space)	10	I	19	R	28	0	37	9
2	A	11	J	20	S	29	1	38	-
3	B	12	K	21	T	30	2	39	.
4	C	13	L	22	U	31	3	40	/
5	D	14	M	23	V	32	4	41	:
6	E	15	N	24	W	33	5		
7	F	16	O	25	X	34	6		
8	G	17	P	26	Y	35	7		
9	H	18	Q	27	Z	36	8		