


Radio Game Watch

UK

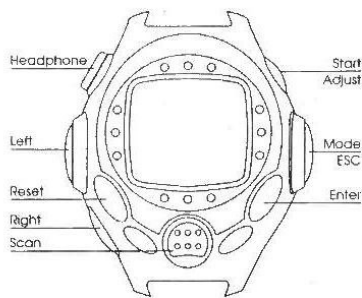

Mode Setting

Press 'Mode' to select different features as the following sequence:

Time ----- Alarm ----- Brick Game ----- Time

Time Setting

- In normal time display, press & hold "Start/Adjust" for 2 seconds to enter the adjusting mode:
- Press 'Enter' to proceed the next setting (see Time Setting Sequence below)
- Press 'Left' and 'Right' to adjust setting
- Press 'Mode' to confirm

Time Setting Sequence

Min - Hour - 12/24 Hr system - Month - Date

Alarm

- Press 'Mode' to select the alarm mode

Alarm Setting

- Press & hold 'Start/Adjust' for 2 seconds to enter the adjusting mode
- Press 'Enter' to proceed hour and minute adjustment
- Press 'Left' and 'Right' to adjust alarm time - Hour first
- Press 'Mode' to confirm settings

Alarm on/off

- Press 'Left' or 'Right' to activate alarm during the alarm setting mode.
- Press 'Mode' to confirm

Brick Game

- In time mode, press 'Mode' twice enter Brick game
- Press "Start/Adjust" to start the game
- Press "LEFT" & "RIGHT" button to move the block left & right respectively
- Press "START" to rotate the block
- Press "MODE" for fast falling

FM Radio

- Open the earphone jack cover and plug the earphone into the jack
- Radio on automatically, then press 'Scan' & 'Reset' to change the radio channels, watch display will show equalizer like pattern. Adjust the "Volume Control" at headphone.
- Reset radio to the lowest frequency range by pressing "Reset" button. Advance to the next frequency available by pressing "Scan" button until the desired station is reached.
- Unplug the earphone, the radio off automatically

Battery Replacement

- Remove battery hatch by using a coin and turn anti-clockwise
- Remove exhausted batteries and dispose safely
- Insert replacement batteries as shown below
- Close battery hatch by using a coin to turn clockwise to lock

Caution

- Battery (CR2025 x 2) should be replaced by adult
- Insert battery with correct polarity
- Keep your watch free from water, liquid toiletries (perfume, gasoline, hair spray, etc) and moisture
- Keep your watch free from dirt, sand and other sharp or small particles
- Avoid long-term expose to direct sunlight
- Avoid extreme temperature

The above information should be kept for future reference.

