



ИНСТРУКЦИИ

用法說明

頁

Теперь Вы являетесь обладателем часов Seiko Solar (Seiko Solar) Калибра V110/V111/V114/
V145/V147/V157/V158/V181/V182/V187. Перед использованием их, для достижения
лучших результатов, пожалуйста, внимательно ознакомьтесь с данной инструкцией и обязательно
сохраните ее.

歡迎購買精工V110/V111/V114/V115/V116/V117/V137/V145/V147/V157/V158/V181/V182/V187模型
太陽能手錶。在使用您的精工牌指針式石英錶以前，務請注意閱讀這本小冊子中的各項說明，並請將手
冊妥加保管，以便隨時參考。




- When the watch has stopped operating, the second hand will start moving at 2-second intervals.



- If your watch has a second hand, when the instant-start function is activated after the watch is exposed to light, the second hand starts moving at 2-second intervals immediately, but the energy stored in the rechargeable battery is not sufficient. If the watch is turned away from the light, it may stop operating.
- It is not necessary to charge the watch fully. It is important, however, to charge the watch sufficiently, especially in case of initial charge.



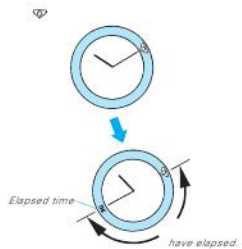

: For some models, the rotating bezel rotates only counterclockwise.

- *The specifications are subject to change without prior notice for product improvement.*