



PRESS S1+S2
FIRST

INSTRUCTIONS

1. The screen will display the time. Press enter for three seconds into setting, with "hold" being displayed on the screen. Press S2 left to increase number. Press S1 right to decrease number. Press enter to change the setting section.

2. Press mode to change to date/day. Press enter for three seconds into setting, with "hold" being displayed on screen. Press S2 left to increase number. Press S1 right to decrease number. Press enter to change the setting section.

3. Press mode to change to alarm.

Press S2 left or S1 right to switch alarm ON/OFF. Press enter into setting the alarm time. Press S2 left to increase number. Press S1 right to decrease number. Press enter to change the setting section.

4. Press mode to switch to stop watch. Press enter to start. Press enter to stop. Press enter to clear.

5. Press mode to switch to Hot Wheels Car Race Game.

The objective is to advance to the following round.

There are 5 rounds in all. In order to advance you must make the qualifying time. At the end of the game the time and position of the top driver will be displayed. Press enter to switch gears (turbo/low). Press S1 right to turn right. Press S2 left to turn left.

6. Press mode to switch to Hot wheels Snow Boarder Game.

The snowboarder goes down the slope against the clock and must avoid crashing into the trees. There are moguls on the hill which you could jump and get down the hill faster, but you must beware of the trees. Press enter to start. Press S1 right to turn right. Press S2 left to turn left.

7. Press mode to switch to Hot wheels Skate Boarder Game.

Skateboarder skates on the half pipe and has to score points by maximizing his skills. The graph represents the level as it bounces up and down very quickly. The user must press enter at the top of the half pipe at the moment the skater is at its highest point of the pipe. If the skater falls three times the game is over. Press enter to start. Press enter to jump.

IMPORTANT NOTE

Your watch will always leave its current screen and return to idle mode if you do not push a button within 5 seconds. Unless you are setting the time, date, or alarm, and these numbers are flashing, or... unless the stopwatch is running.

CAUTION:

- all batteries should be replaced by an adult
- do not mix old and new batteries.
- do not mix alkaline (standard (carbon-zinc), or rechargeable (Nickel-cadmium) batteries.
- different types of batteries, or new and used batteries are not to be mixed.
- only batteries of the same or equivalent type as recommended are to be used.
- batteries are to be inserted with the correct polarity.
- exhausted batteries are to be removed from the toy.
- the supply terminals are not to be short circuited.
- do not use rechargeable batteries.
- non rechargeable batteries are not to be recharged.
- the package has to be stored if contains important instructions.
- d.c.

BATTERY REPLACEMENT

If your watch remains "frozen on the screen, then the battery may be drained. Follow these instructions closely to replace the spent battery.

Please note ! This watch is an animated watch with sound .Hence ,battery life may be shorter than other watches.

1.Lay watch face down .Unscrew the four screws and remove stainless steel cover according to Figure 2.


2.Insert the screwdriver or your fingernail into the groove next to the battery. Lift the used battery out.

3.Replace the battery with one CR2032 lithium battery ,observing correct polarity. Fit new battery under lip and position with the positive side up.

4.Reposition stainless steel cover over screw holes.

5.Gently screw down the cover, avoiding stripping the screw down.

FIGURE 2

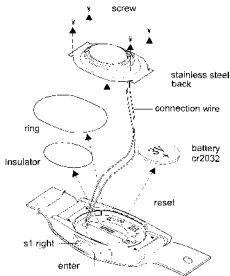

ONE YEAR LIMITED WARRANTY

FOR THE ORIGINAL PURCHASER, CLICKS WILL REPAIR/REPLACE THE MOVEMENT ASIDE YOUR WATCH FOR ONE YEAR FROM THE ORIGINAL DATE OF PURCHASE OF YOUR WATCH, IF THE MOVEMENT FAILS DUE TO DEFECTS, MINERAL OR ACRYL WASHING. THIS WARRANTY DOES NOT COVER CASE, CASE FINISH, STRAP, BRACELET FINISH, LENS OR BATTERIES. THIS WARRANTY DOES NOT COVER ANY FAILURE DUE TO MISUSE, SUCH AS SEVERE SHOCK. **DO NOT RETURN**

TO THE STORE FOR SERVICE. YOUR WATCH MUST BE RETURNED TO "CLICKS" FOR SERVICE. WRAP YOUR WATCH CAREFULLY IN TISSUE PAPER OR OTHER SOFT MATERIAL, PACK INSIDE A STURDY MAILING CARTON, SEND VIA INSURED PARCEL POST TO CLICKS REPAIR CENTER, 38 WEST 58TH ST, NEW YORK, NY 10019. YOU MUST INCLUDE A CHECK FOR \$5.00 TO COVER THE COST OF HANDLING AND RETURN POSTAGE. INCLUDE A NOTE WITH YOUR NAME AND RETURN ADDRESS PRINTED CLEARLY, GIVE A SHORT DESCRIPTION OF THE PROBLEM. A COPY OF PROOF OF PURCHASE AS ORIGINAL PURCHASER MUST BE ENCLOSED FOR ANY WARRANTY REPAIR. FOR ANY OF OUT-WARRANTY REPAIR, CLICKS WILL NOTIFY YOU OF ANY ADDITIONAL REPAIR CHARGES BEFORE PROCEEDING.



WARNING:

CHOKING HAZARD-small parts.
not for children under 3 years .

SYSTRONIC

WRESTWATCH
GAMES
DATABASE