



RHEINER


FASHION



GMBH



Empty rectangular box for text input.

Empty rectangular box for text input.


Large empty rectangular box for text input.


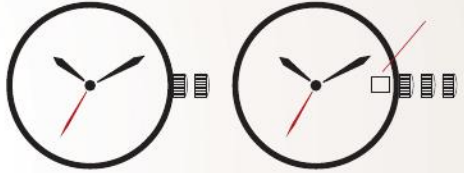


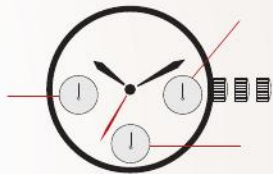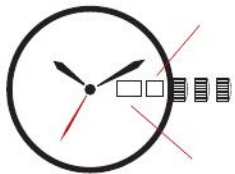


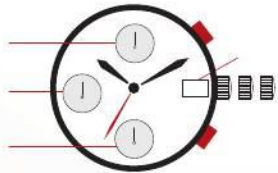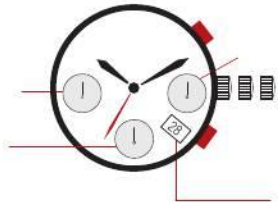




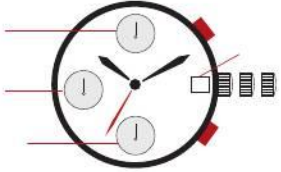

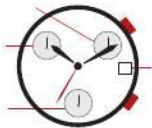
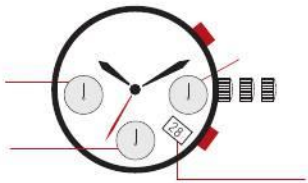



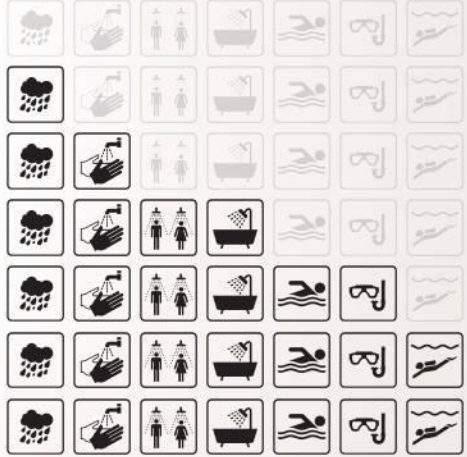


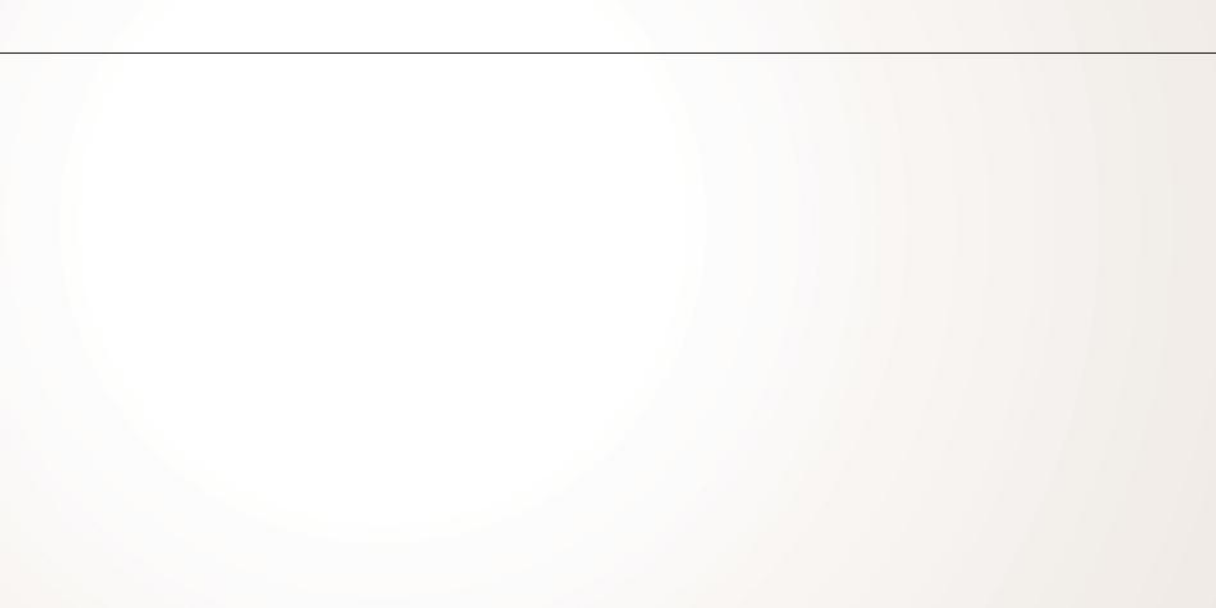






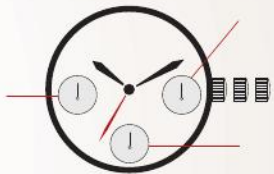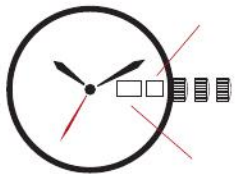


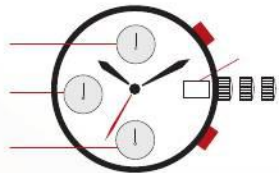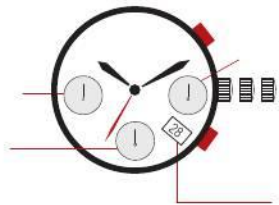




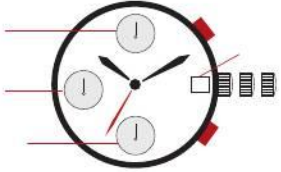



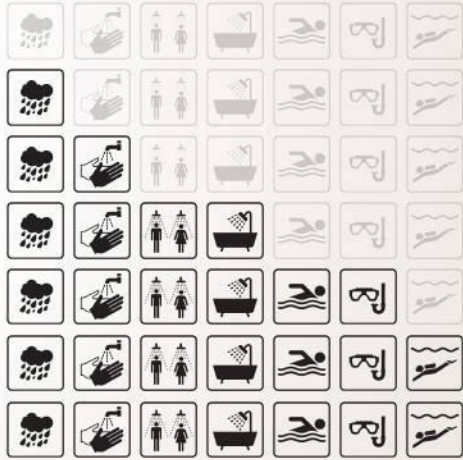

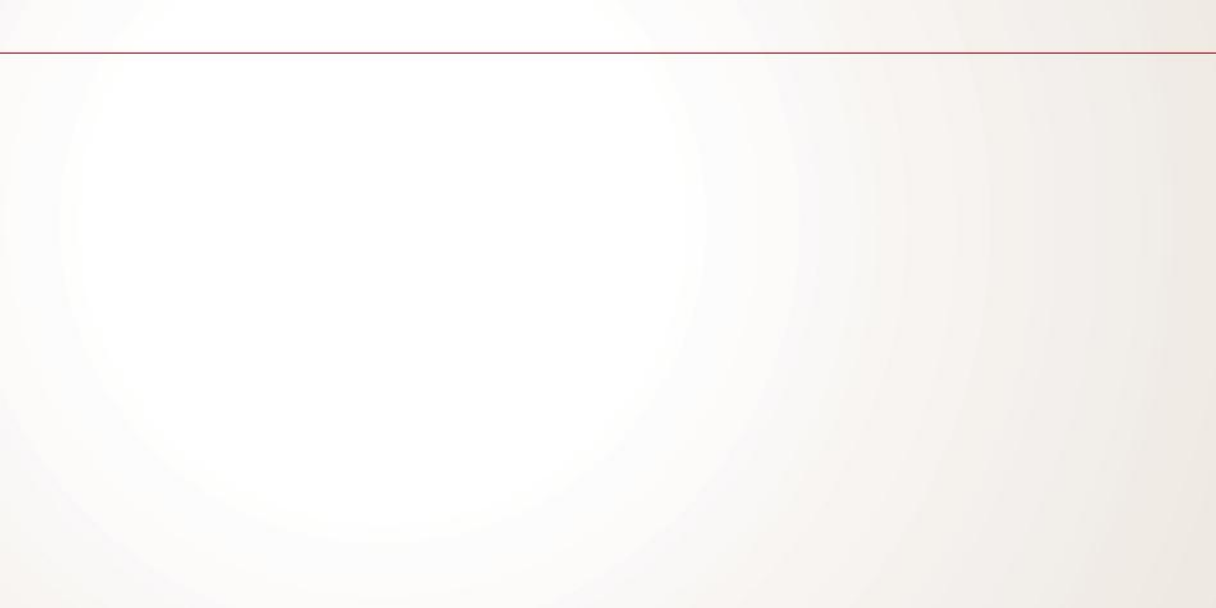

* Distribution and Guarantor:

Rheiner Fashion GmbH


Kanalstraße 99, 48432 Rheine, Telefon +49 (0)5971 80809-80

Fax +49 (0)5971 899086249, vertrieb@rheiner-fashion.de, www.rheiner-fashion.de

Is valid for the Federal Republic of Germany that the legal rights of the consumer are valid beside the guarantee and are not limited by the guarantee.


NOTES ON ENVIRONMENTAL PROTECTION

Old appliances are recyclable materials, therefore they do not belong in the trash! The symbol of the crossed-out wheeled bin indicates. We therefore ask you to support us with your active contribution to resource conservation and environmental protection and to make this equipment at the recycling facility set up. The materials are on their characteristics, utilization of waste you make an important contribution to protecting our environment. Please check with the local city office, waste disposal site. Batteries contain valuable raw materials that are recycled. The crossed-out wheeled bin means no batteries in the trash can. If you have further questions, or if the merchant has no batt around the corner box, you should contact the GRS Info Phone 01800-55111, www.grs-Batterien.de, Stiftung Gemeinsames Rücknahmesystem Batterien, Heidenkampsweg 44, 20097 Hamburg.

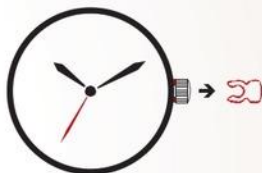

Ziehen Sie den Kronstopper seitlich der Krone heraus,

Pull the crown stopper at the side of the crown out,

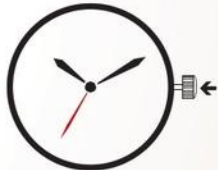

drücken Sie die Krone wieder rein

push back the crown



und der Sekundenzeiger läuft weiter

and the small 2nd hand begins to run.



