

- Be sure to keep all user documentation handy for future reference.
- Your watch may differ somewhat from the one shown in the illustration.

Minute hand

24-hour hand

Hour hand

Second hand

Day

First click (Setting day)

Second click (Setting time)

Crown (Normal position)

A diagram of a watch face with a curved arrow pointing clockwise, indicating the direction of rotation.

- 

Stopwatch minute hand

Stopwatch second hand

- Low battery power is indicated by large timekeeping error, when display contents are dim, or when the display does blank.
- Operation while battery power is low can result in malfunction. Replace the battery as soon as possible.

Note that CASIO COMPUTER CO., LTD. assumes no responsibility for any damage or loss suffered by you or any third party arising through the use of this product or its malfunction.