



取扱説明書
INSTRUCTIONS
G300

 
 
セイコーウォッチ株式会社

 
 
 
SEIKO

 
 
 


 
 
 
取扱説明書
INSTRUCTIONS
G300

 
 
SEIKO

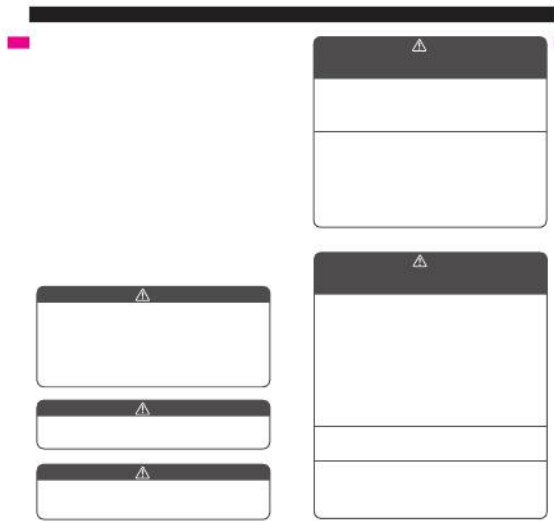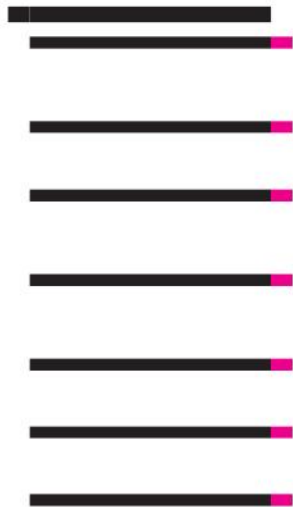 


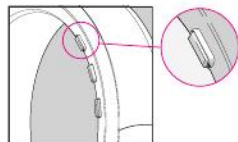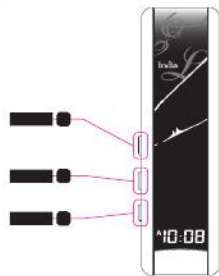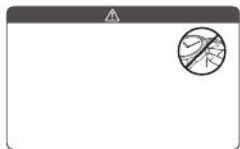 


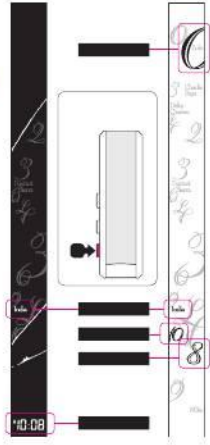

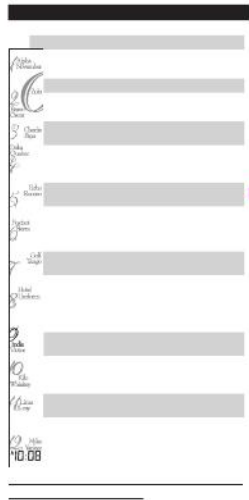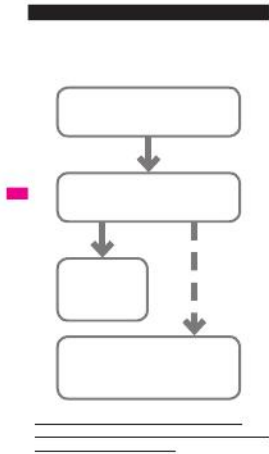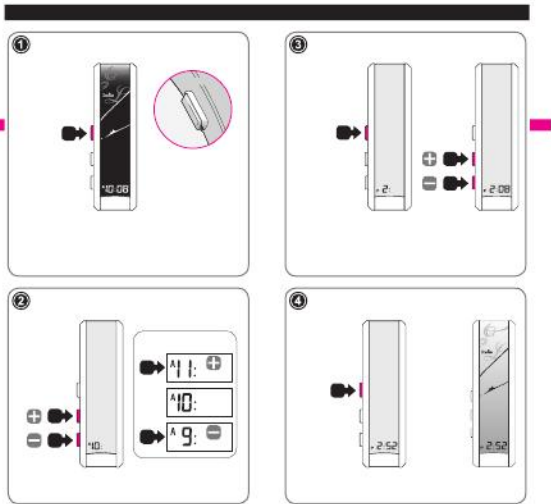

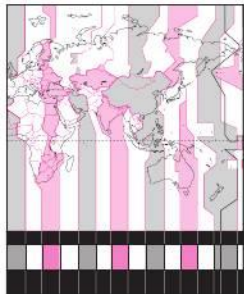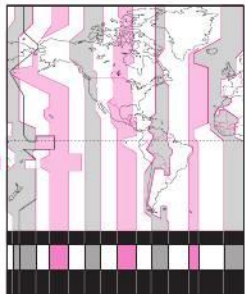

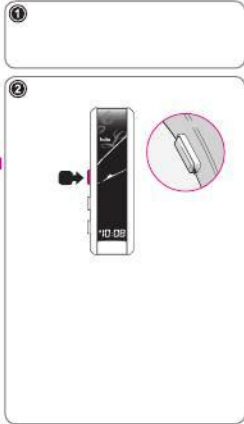

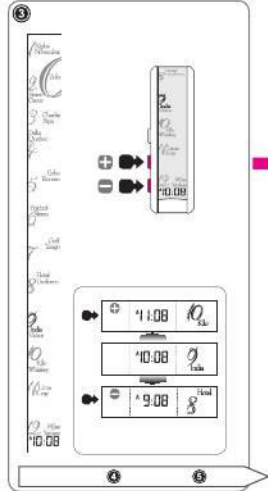


③


④

11 08

12 08

  ⑤

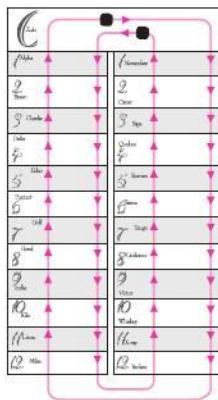



2×10^{-2}
 10^{-2}
 10^{-2}
 2×10^{-2}
 10:08



10 10:08



 
 
t 1 t 21 t 22 t 23 t 24





INSTRUCTIONS

0300

SEIKO

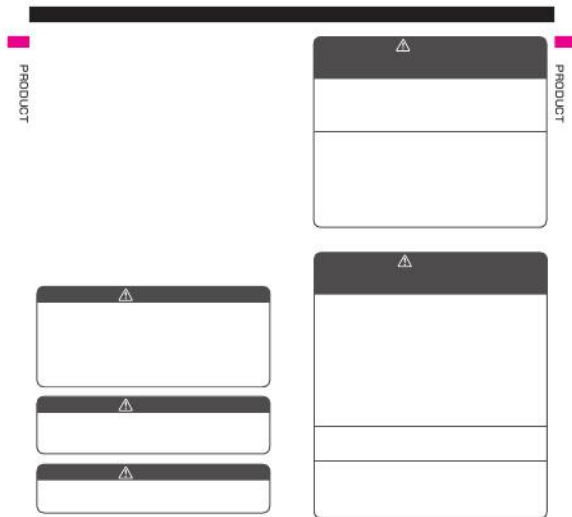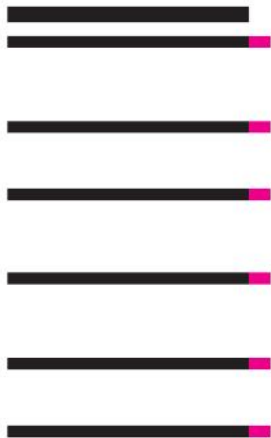


PRODUCT

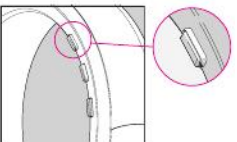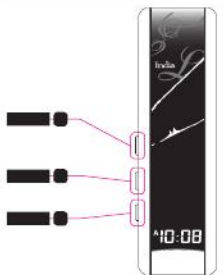  


PRODUCT

 PRODUCT

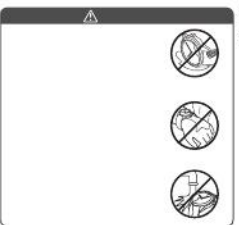

PRODUCT

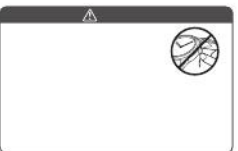 


TIME DISPLAY




TIME DISPLAY

 
TIME DISPLAY




TIME DISPLAY

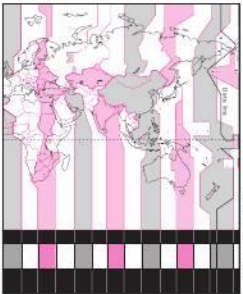 


TIME ZONE ADJUSTMENT

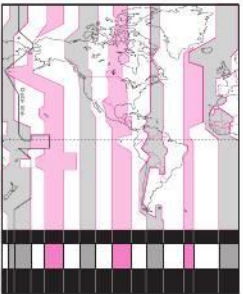 


TIME ZONE ADJUSTMENT

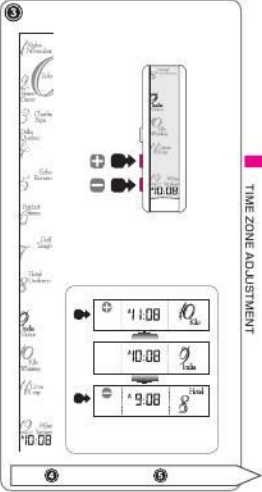 

TIME ZONE ADJUSTMENT

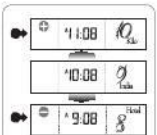 

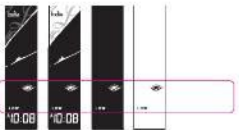 

OTHER FUNCTIONS AND SPECIFICATIONS




OTHER FUNCTIONS AND SPECIFICATIONS


TIME ZONE ADJUSTMENT

	1/16h	1/16h
2/16h	2/16h	2/16h
3/16h	3/16h	3/16h
4/16h	4/16h	4/16h
5/16h	5/16h	5/16h
6/16h	6/16h	6/16h
7/16h	7/16h	7/16h
8/16h	8/16h	8/16h
9/16h	9/16h	9/16h
10/16h	10/16h	10/16h
11/16h	11/16h	11/16h
12/16h	12/16h	12/16h


 
TIME ZONE ADJUSTMENT

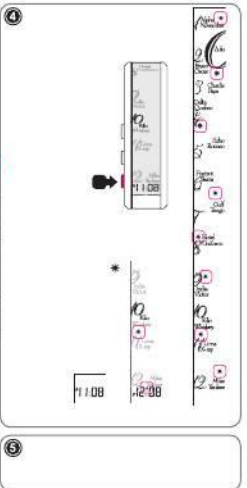

5

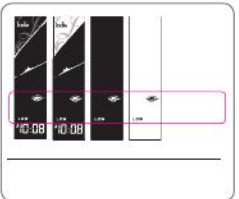 


TROUBLESHOOTING

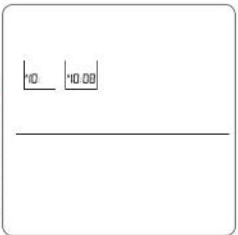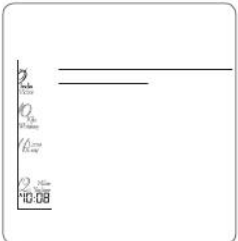  


TROUBLESHOOTING

 OTHER FUNCTIONS AND SPECIFICATIONS



OTHER FUNCTIONS AND SPECIFICATIONS

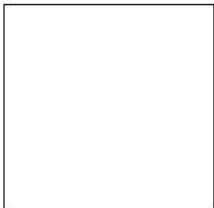 

セイコーウォッチ株式会社

GUARANTEE AND AFTER-SALES SERVICE



GUARANTEE AND AFTER-SALES SERVICE

