



# Module No. 808/809/827/917/927

## READING THE DISPLAY

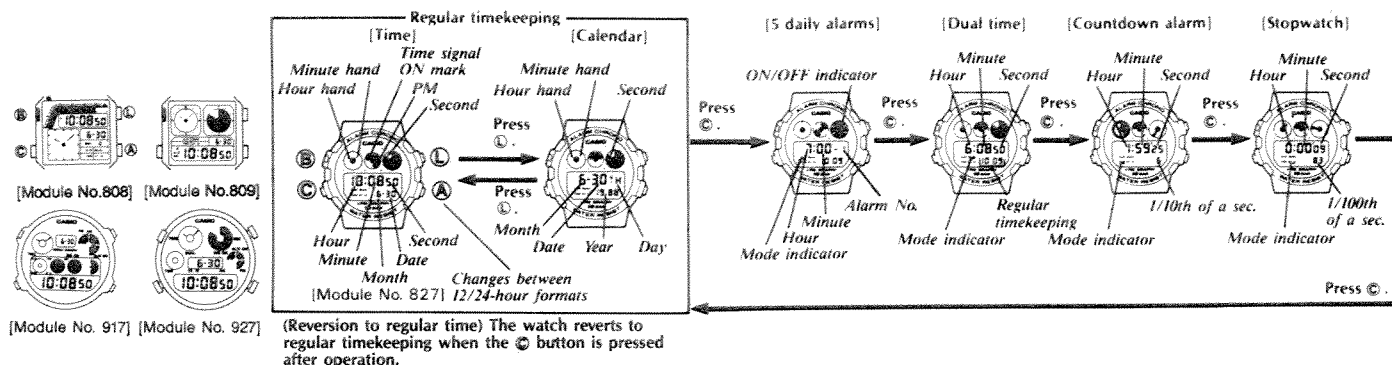


## SETTING TIME AND CALENDAR

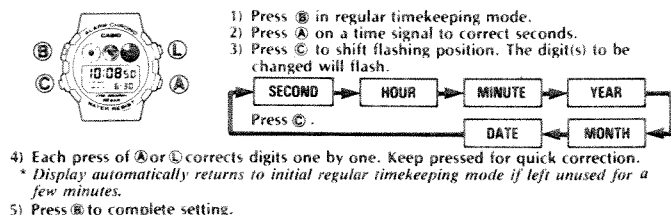


## SETTING DUAL TIME

- Press **B** in the dual time mode
  - Each press of **A** or **L** corrects flashing digits one by one. Keep pressed for quick correction.
  - Press **C** to shift flashing position. The digit(s) to be changed will flash.  
\* Display automatically returns to initial dual time mode if left unused for a few minutes.
  - Press **B** to complete setting.
- \* The **B** button changes 12-/24-hour formats.

## FIVE DAILY ALARMS

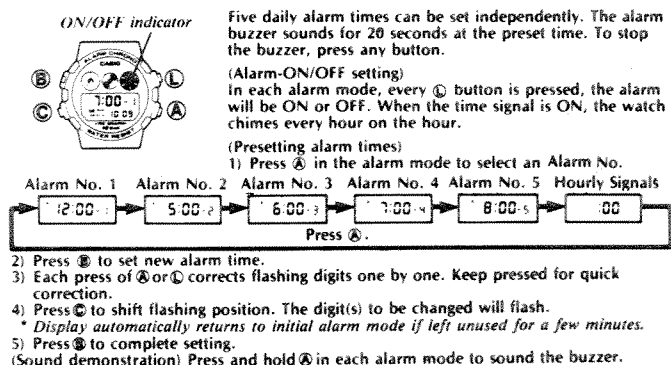

## STOPWATCH OPERATION

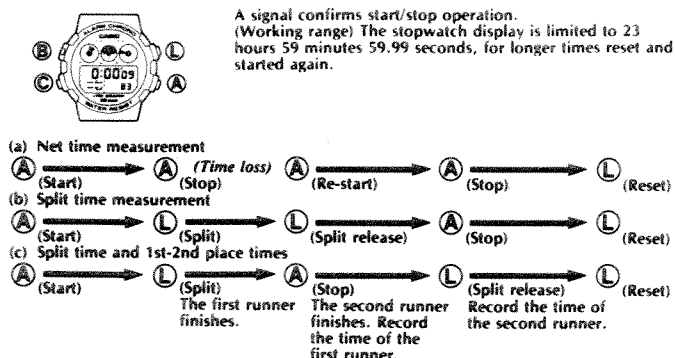

## COUNTDOWN ALARM OPERATION

The countdown can be set from one minute to 24 hours (Display shows 0:00), and times to an accuracy of 1/10th of a second.  
Start/stop operation is possible by pressing the **A** button and is confirmed by a signal.  
When the display reaches zero, the buzzer will sound for 10 seconds unless any button is pressed.



- (Repeat function) When the display reaches zero, the pre-entered time is retrieved automatically.  
(Pre-entering countdown alarm time)
- Press **B** to set new countdown alarm time.
  - Each press of **A** or **L** corrects flashing digits one by one. Keep pressed for quick correction.
  - Press **C** to shift flashing position. The digit(s) to be changed will flash.  
\* Display automatically returns to initial countdown alarm mode if left unused for a few minutes.
  - Press **B** to complete setting.