

 
Abbreviated instruction

ENGLISH

 
- This watch is light-powered. Be sure your watch is fully charged before use.
- For complete instructions for setting, use, charging time and specifications, refer to the full instruction manual:  Instruction Manual of general solar-powered watches

Component identification

3-hand models

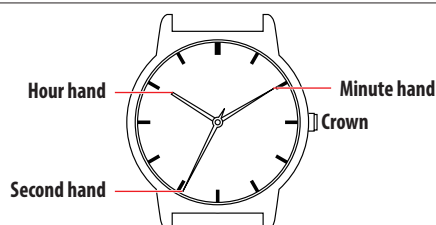

- Illustrations for reference only. Actual appearance of your watch may differ from the illustrations above. Some models do not have the second hand.

Crown's position


Setting the time

1. Pull the crown out when the second hand points to 12:00 (0 second).

The second hand stops.

 
2. Rotate the crown to set the time.

- Move the hands 4 or 5 minutes forward of desired minutes and move them back to the right time to set the time more precisely.

 
3. Push the crown in in accordance with a reliable time source.

The second hand starts moving.

3-hand and date models

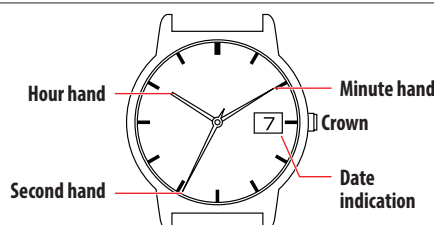

- Illustrations for reference only. Actual appearance of your watch may differ from the illustrations above.

Crown's position


Setting the time

- Do not adjust between 9:00 PM and 1:00 AM. Otherwise the date indication may change incorrectly.

1. Pull the crown out to position 2 when the second hand points to 12:00 (0 second).

The second hand stops.

2. Rotate the crown to set the time.

- Change of date indication shows it just became AM. Set the time to ensure proper AM or PM time is set.
- Move the hands 4 or 5 minutes forward of desired minutes and move them back to the right time to set the time more precisely.

3. Push the crown in to position 0 in accordance with a reliable time source.

The second hand starts moving.

Setting the date indication

- Do not adjust between 9:00 PM and 1:00 AM. Otherwise the date indication may change incorrectly.
- Date indication adjustment is required on the first of the following months: March, May, July, October and December.

 
1. Pull the crown out to position 1 .

2. Rotate the crown counterclockwise to adjust the date indication.

 
- Clockwise rotation moves nothing.

3. Push the crown in to position 0 to finish the procedure.

3-hand and date/day models

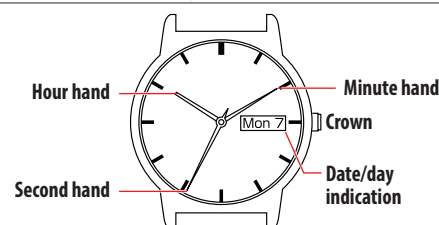

- Illustrations for reference only. Actual appearance of your watch may differ from the illustrations above.

Crown's position


Setting the time

- Do not adjust between 9:00 PM and 4:30 AM. Otherwise the date and day indication may change incorrectly.

1. Pull the crown out to position 2 when the second hand points to 12:00 (0 second).

The second hand stops.

2. Rotate the crown to set the time.

- Change of date indication shows it just became AM. Set the time to ensure proper AM or PM time is set.
- Move the hands 4 or 5 minutes forward of desired minutes and move them back to the right time to set the time more precisely.

3. Push the crown in to position 0 in accordance with a reliable time source.

The second hand starts moving.

Setting the date and day indication

- Do not adjust between 9:00 PM and 4:30 AM. Otherwise the date and day indication may change incorrectly.
- Date indication adjustment is required on the first of the following months: March, May, July, October and December.

1. Pull the crown out to position 1 .

2. Rotate the crown to adjust the date and day indication.

- Rotate it counterclockwise to change the date indication.
- Rotate it clockwise to change the day indication.

3. Push the crown in to position 0 to finish the procedure.