

OPERATING WORLD TIME



 
The current time of any spot in the world (standard time of 24 time zones) can be shown by pressing (F) or (R) in WORLD TIME. Standard time of zone displayed last appears first when mode is shifted from TIME to WORLD TIME.

- For full information on city codes, see the city code table.

Setting world time

When one of any local standard time is set, all other standard times are automatically set.

- Press (F) or (R) in WORLD TIME to select appropriate local time.
- Press (B) to set time.
- Press (C) to shift flashing digit(s). Digit(s) to be changed will flash.



- Each press of (A) advances flashing digits one by one, and (D) to reverse. Keep pressed to move quickly.
- The 12/24-hour format of the World Time matches the format you select in the Time Display.
- The seconds count of the World Time is synchronized with the seconds count in the Time Display.
- Press (B) to complete setting.

Changing to daylight saving time

Hold down (A) for a few seconds while in WORLD TIME to change to daylight saving time (+1 hour). The daylight saving time mark "♦" is shown on the display while this setting is in effect. Repeat this procedure to switch back from daylight saving time to standard time.

- Note that you cannot switch Greenwich Mean Time (GMT) between standard time and daylight saving time.

OPERATING DAILY ALARM

Beeper sounds for 20 seconds at preset time every day until cleared when daily alarm is set. Press any button to stop beeper. Signal sounds every hour on the hour if time signal is set.

Sound demonstration

Press and hold (A) in alarm mode to sound beeper.

 
Setting daily alarm

- Press (B) to set new time.
- Press (C) to shift flashing digit(s). Digit(s) to be changed will flash.




- Each press of (A) advances flashing digits one by one, and (D) to reverse. Keep pressed to move quickly.
- Press (B) to complete setting.
- Display automatically returns to initial daily alarm time if left unused for a few minutes.

On or off setting of daily alarm and time signal

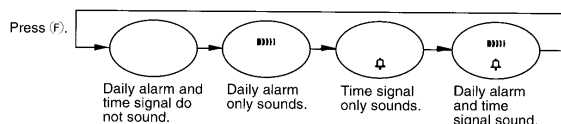

OPERATING COUNTDOWN ALARM

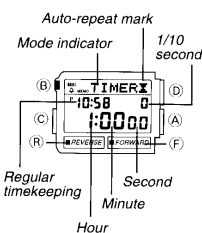 


Countdown can be set from 1 minute to 24 hours (display shows 0:00'00), and times to an accuracy of 1/10 second. Start/stop operation is possible by pressing (F), and is confirmed by a signal. (Stop the timer and then press (R) to reset the countdown time to its starting value.) When display reaches zero, beeper sounds for 10 seconds until any button is pressed.

Setting countdown time

- Press (B) to set new time.
- Each press of (F) selects auto-repeat or repeat function. The mark (X) indicates on setting of auto-repeat function.

 - Press (C) to shift flashing digit(s). Digit(s) to be changed will flash.



- Each press of (A) advances flashing digits one by one, and (D) to reverse. Keep pressed to move quickly.
- Press (B) to complete setting.
- Display automatically returns to initial countdown timer if left unused for a few minutes.

 
Auto-repeat function

Pre-entered time is retrieved and started again when display reaches zero.

Repeat function


Pre-entered time is retrieved when display reaches zero.

OPERATING STOPWATCH

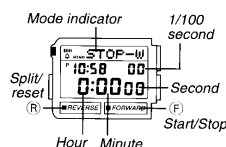


A signal confirms start/stop and split/reset operation. (Working range) Total elapsed time display is limited to 23 hours 59 minutes 59.99 seconds. For longer times reset and start again.

 
a) Net time measurement



 b) Split time measurement




 c) 1st-2nd place times



SETTING TIME AND DATE

 - Press (A) in the TIME display to change to the DAY/YEAR display.
- Press (B) to set time and date.
- Press (A) on a time signal to correct seconds.
- Press (C) to shift flashing digit(s). Digit(s) to be changed will flash.



- Each press of (A) advances flashing digits one by one, and (D) to reverse. Keep pressed to move quickly.

 
* Press (F) to change between 12-hour and 24-hour formats.

** Year digits can be set up to the year 2039 by inputting last two digits.

- Press (B) to complete setting.
- Display automatically returns to TIME if left unused for a few minutes.

About the low battery warning

Power fade indicator



Power fade message

The indicator "BATT" will start to flash whenever battery power drops below a certain level. Once this starts, anytime you try to perform any operation that involves memory contents (data input, editing, deletion, recall), the message "BATT." appears on the display and further operation becomes impossible. Be sure to have the battery replaced as soon as possible whenever the low battery warning appears.

REPLACING BATTERY

ALWAYS LEAVE BATTERY REPLACEMENT UP TO THE DEALER WHERE YOU BOUGHT THE WATCH OR TO AN AUTHORIZED CASIO DISTRIBUTOR. BE SURE TO SHOW THE FOLLOWING INFORMATION TO THE PERSON REPLACING THE BATTERY.

Attention dealer or CASIO distributor!

Be sure to use the following procedure when replacing the battery.

- Open and remove the back cover.
- If "X CLOSE" appears on the display when you open the back cover, replace the back cover. Wait for a few minutes and try again.
- Remove the battery holder.
- Remove the old battery and load a new one.
- Replace the battery holder.
- Touch the AC contact and the battery (+) side with metallic tweezers.
- Close the back cover.
- If display contrast does not appear normal about 15 seconds after you close the back cover, repeat the above operation.
- The WAIT indicator remains on the display while the watch performs an internal check of data in memory. This check may take as long as 12 minutes. Though you can change the time setting of the watch while the WAIT indicator is on the display, other operations are disabled.

Caution!

- Never open the back cover while the message "SORT" is on the display. Doing so will cause data to be deleted.

CITY CODE TABLE

Difference between GMT	City code	City	Other major city in same time zone
-11	---	---	PAGO PAGO
-10	HNL	HONOLULU	PAPEETE
-09	ANC	ANCHORAGE	NOME
-08	LAX	LOS ANGELES	SAN FRANCISCO, LAS VEGAS, VANCOUVER, SEATTLE, DAWSON CITY
-07	DEN	DENVER	EL PASO, EDMONTON
-06	CHI	CHICAGO	HOUSTON, DALLAS, NEW ORLEANS, MEXICO CITY, WINNIPEG
-05	NYC	NEW YORK	MONTREAL, DETROIT, MIAMI, BOSTON, PANAMA CITY, HAVANA, LIMA, BOGOTA
-04	CCS	CARACAS	LA PAZ, SANTIAGO, PORT OF SPAIN
-03	RIO	RIO DE JANEIRO	SAO PAULO, BUENOS AIRES, BRASILIA, MONTEVIDEO
-02	---	---	
-01	---	---	AZORES, PRAIA
+00	GMT	---	
+00	LON	LONDON	DUBLIN, CASABLANCA, DAKAR, ABIDJAN
+01	PAR	PARIS	MILAN, ROME, MADRID, AMSTERDAM, ALGIERS, HAMBURG, FRANKFURT, VIENNA, STOCKHOLM, BERLIN, LISBON
+02	CAI	CAIRO	ATHENS, HELSINKI, ISTANBUL, BEIRUT, DAMASCUS, CAPE TOWN
	JRS	JERUSALEM	
+03	JED	JEDDAH	KUWAIT, RIYADH, ADEN, ADDIS ABABA, NAIROBI
+04	DXB	DUBAI	ABU DHABI, MUSCAT
+05	KHI	KARACHI	
+06	DAC	DHAKA	
+07	BKK	BANGKOK	JAKARTA, PHNOM-PENH, HANOI, VIENTIANE
+08	HKG	HONG KONG	SINGAPORE, KUALA LUMPUR, BEIJING, TAIPEI, MANILA, PERTH, ULAN BATOR
+09	TYO	TOKYO	SEOUL, PYONGYANG
+10	SYD	SYDNEY	MELBOURNE, GUAM, RABAU
+11	NOU	NOUMEA	PORT VILA
+12	WLG	WELLINGTON	CHIRISTCHURCH, SUVA, NAURU ISLAND