

INSTALLATION OF BATTERIES

- Remove the band of the watch from the face.
- On the backside of the watch face piece, open the battery compartment cover by using a small screwdriver to remove the two screws.
- Insert two AG13 (1.5V) batteries with positive (+) and negative (-) ends facing the directions indicated.
- Replace the cover and screws. (see the diagram of battery replacement)
- Replace the watch face onto the watch band.

BATTERY PRECAUTIONS

- Non-rechargeable batteries are not to be recharged.
- Do not use rechargeable batteries.
- Batteries are to be inserted with the correct polarity
- Dead batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Different types of batteries or new and used batteries are not to be mixed.
- Use AG13 alkaline batteries for best performance and longer life.
- Only batteries of the same or equivalent types as recommended are to be used.
- Installation of batteries should be done by an adult.

FUNCTION OF BUTTONS

S1 = ON S6 = RIGHT
S2 = START S7 = UP
S3 = SOUND S8 = SHOOT
S4 = LEFT S9 = RESET
S5 = DOWN S10 = PASS

CLOCK FUNCTION BUTTONS

C1 = ENTER
C2 = ADVANCE

SETTING THE CLOCK FUNCTIONS

1. To adjust the CLOCK and DATE functions, press the ENTER button twice.
2. MONTH SETTING - Set the appropriate MONTH by pressing the ADVANCE button to scroll to the proper MONTH. Select the MONTH by pressing the ENTER button.(you are now taken to day setting)
3. DAY SETTING - Set the appropriate DAY by pressing the ADVANCE button to scroll to the proper DAY. Select the DAY by pressing the ENTER button. (you are now taken to hour setting)
4. HOUR SETTING - Set the appropriate HOUR by pressing the ADVANCE button to scroll to the proper HOUR. Select the HOUR by pressing the ENTER button.(you are now taken to minute setting)
5. MINUTE SETTING - Set the appropriate MINUTE by pressing the ADVANCE button to scroll to the proper MINUTE. Select the MINUTE by pressing the ENTER button.(you are now taken to NORMAL WATCH DISPLAY STATE)
6. Press the ADVANCE button to start the clock function

TO START

- Press the ON(S1) button to turn the unit on. You automatically enter the demonstration mode.
- Press the START(S2) button to begin the game.
- The game will automatically turn off if no buttons are pressed for 3 minutes while in the demonstration mode.

SOUND EFFECT

- Press the SOUND(S3) button to turn the sound on or off. The sound is default on while the unit is turned on.

TO PLAY THE GAME

1. This is a scrolling screen type game where the opponent's goal is located at the right hand side hidden screen while the player's goal is located at the left hand side hidden screen.
2. At the beginning of the game, the player should try to control the flashing player by the 4 direction keys UP(S7), LEFT(S4), DOWN(S5) and RIGHT(S6) to maneuver the puck to the rightmost screen where the player can attempt to make a goal and score.
3. You can pass the puck to your teammate by pressing the PASS(S10) button at any time where your teammate is in a better position.
4. Your opponents will try to steal the puck away from you. If the opponents steal the puck away from you successfully, you will automatically become defense.
5. You can steal the puck from your opponents by pressing the SHOOT(S8) button. This must be done very quickly and accurately in order to gain the puck back.
6. The goal will appear when you are in the right mist screen.
7. Press the SHOOT(S8) button to make a goal and score 2 points.

TIME LIMIT

Each match is 180 seconds and the count down begins when the game is started. The game is over when the time runs out.

NOTE

- Please keep this instruction manual since it contains important information.
- Under the environment with electrostatic discharge, the sample may malfunction and require user to reset the sample.

