

**TIME TAG**  
**THE GAME OF INFRA-RED TAG**



**TIME MODE**


**Functions:**

Time, Date, Stopwatch, Daily Alarm

- Time display will show the Hour, Minute, Seconds, Day of the Week and the Alarm Status.
- To view the date, press Key C. Month, date, day of the week will be shown.
- To view the alarm setting, press Key D. Alarm hour and minute will be shown.
- When pressing Keys C & D simultaneously, it will also toggle the alarm on/off.
- To toggle the hourly chime on/off, in Time display press Key D. While holding Key D also press Key E. You'll see the days of the week appear and disappear as you toggle the chime on/off. When pressing Key D, if all the days of the week are visible the hourly chime is on.
- For every press of Key E in normal time display, user can scroll through stopwatch, alarm setting, time setting function and back to normal time.

**Time Setting:**

Press Key E until you see the seconds flashing in the upper right corner.

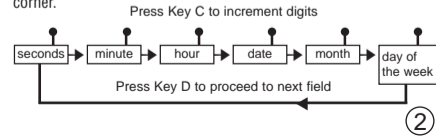

①

②

Press Key E to escape and return to normal time display. (The 12/24 hour system will be selected while incrementing the hour. Adjustable range from 12am – 11am, 12pm – 11pm, 0H – 23H where H stands for international hour display system.)

**Stopwatch Function:**

- From Time Display, press Key E to enter the mode.
- Press Key C to start/stop. Press Key D to split/reset.
- Press Key D to enter the split mode which will display the split time but the chronograph will keep on counting in the background.
- Pressing Key D again will escape from the split mode. Elapsing time will be displayed again.
- When the chronograph is stopped (not in split stop), pressing D will reset it to 00:00 00.

**Alarm Setting:**


- From Time Display, press Key E twice to enter the mode.
- The first field to adjust is the alarm hour, press Key C to increment digits.
- Press Key D to toggle between hour and minute.
- Press Key E to escape and return to normal time display.

**NOTE:** When in Time Display, pressing Keys C & D simultaneously will toggle alarm on/off. The (☉) indicates the alarm is armed.

③

**GAME MODE – Game Set Up**

- Up to 4 players can play at once, but a minimum of 2 players is required.
  - Once the game has begun, no additional players can join that round.
1. Decide which player will be the game's "host". (The host watch will control the game set-up and score calculations.)
  2. All players press Key A once to enter the "game mode". In Game Mode, the LED light will flash green.
  3. Players should be approximately 5 feet away from host during set-up. Each player, one at a time, aims his/her watch at the host's watch. While aiming watch at host's watch, the host will press Key A. The voice-out will be heard: "One - Two - Copy". This indicates successful setup and synchronization.
  4. Once all players are synchronized with the host, all players will simultaneously press Key B. A 5-second countdown will begin. This gives the players time to hide before play begins.

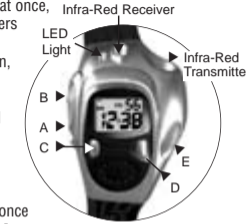

④

**NOTE:** If a synchronization with the host is unsuccessful (the voice-out does not say "copy", instead, a buzzer sound is heard), then the players should exit the game by pressing Key E twice (the LED will flash orange). Then simply repeat steps 1-4 for a fresh game set-up being careful to aim each player's watch, one at a time, at the host's watch. Once in Game Mode, pressing Key E will exit the player from the game. Also, while in Game Mode, pressing Key E will not operate the Time functions.

**GAME MODE – Game Play**

- After the 5-second countdown, the game begins. Each Game lasts for a duration of 5 minutes with a warning tone at the last 30 seconds of the 5 minute game time. However, the players can agree to end the game at any time, all together, to get a score comparison to declare the winner.
- Each player has an endless supply of shots, (Press Key A to shoot), but must reload after every 5 shots by pressing Key B.
- Each player can be hit up to 20 times and still remain in the game. After being "hit" more than 20 times, the player is out of the game.
- The player with the most "hits" is the winner.
- The effective range is approximately 25 feet.

⑤

## Who is the winner?

- The game will automatically end after 5 minutes and will be signaled by a ticking sound.
- Once the game has ended, each player must align the units so watches are pointed at each other, then press Key A or B to determine the winner. The player with the highest score will hear "You Win!" and a green light will flash. The other players will hear nothing and a red light will flash.

## To end the game manually:

- To end the game before the 5 minutes are up, each player must hold Key E for approximately 3 seconds until you hear "Game Over".
- Once "Game Over" is heard, each player must align the units and press Key A or B to determine the winner.

6

## Battery Replacement

- The two larger batteries operate the watch functions and the smaller battery operates the game functions. Replace each battery as appropriate.
- Replace the battery when watch starts to lose sound. Do not wait until your watch stops functioning to replace the battery.
- Weak or dead batteries left in your watch for an extended time may damage the movement.

## Caution

- This is not a water-resistant watch. Don't press the buttons under water or with excessive moisture/water on the watch surface.
- Avoid long-term exposure to extreme temperature or direct sunlight. This can cause the plastic coloring to fade or discolor.
- Avoid rough use or dropping the watch.
- Do not fasten the band too tight. You should be able to insert your finger between band and your wrist.
- To clean the watch and band, use a dry soft cloth or a soft cloth moistened with water and a mild neutral detergent. Never use volatile agents (such as benzine thinner, spray cleaners, etc.) Chemical reactions with such agents will destroy seals, case and strap finishing.
- Painted finishes such as silk screen painting or spray color can be discolored and worn by very strong pressure, long-term rubbing, scraping, friction and long exposure to sun light.
- Store your watch in a dry cool place when you are not using it.

7

## TIMEX INTERNATIONAL WARRANTY

Your TIMEX® watch is warranted against manufacturing defects by Timex Corporation for a period of ONE YEAR from the original purchase date. Timex and its worldwide affiliates will honor this International Warranty. Please note that Timex may, at its option, repair your watch by installing new or thoroughly reconditioned and inspected components or replace it with an identical or similar model.

**IMPORTANT:** PLEASE NOTE THAT THIS WARRANTY DOES NOT COVER DEFECTS OR DAMAGES TO YOUR WATCH:

- 1) after the warranty period expires;
- 2) if the watch was not originally purchased from an authorized Timex retailer;
- 3) from repair services not performed by Timex;
- 4) from accidents, tampering or abuse; and
- 5) lens or crystal, strap or band, watch case, attachments or battery.

Timex may charge you for replacing any of these parts. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM COUNTRY TO COUNTRY AND STATE TO STATE. IN THE U.K., NOTHING IN THIS WARRANTY WILL AFFECT YOUR STATUTORY RIGHTS. To obtain warranty service, please return your watch to Timex, one of its affiliates or the Timex retailer where the watch was purchased, together with a completed original Watch Repair Coupon or, in the U.S. and Canada only, the completed original Watch Repair Coupon or a written statement identifying your

8

name, address, telephone number and date and place of purchase. To cover Timex' cost of returning the watch to you (this is not a repair charge), please include with your watch a US\$ 7.00 check or money order in the U.S., a \$6.00 cheque or money order in Canada and a UK£ 2.50 cheque or money order in the U.K. In other areas, Timex may charge you for postage and handling.

NEVER INCLUDE A SPECIAL WATCHBAND OR ANY OTHER ARTICLE OF PERSONAL VALUE IN YOUR SHIPMENT. For the U.S., please call 1-800-448-4639 for additional warranty information. For Canada, call 1-800-263-0981. For Brazil, call 0800-168787. For Mexico, call 91-800-01-060. For Central America, the Caribbean, Bermuda and the Bahamas, call (501) 370-5775 (U.S.). For Asia, call 852-2815-0091. For the U.K., call 44 181 754 9494. For Portugal, call 35 1 295 22 57. For France, call 33 3 81 63 42 00. For Germany, call 49 7 231 494140. For the Middle East and Africa, call 971-4-310850. For other areas, please contact your local Timex retailer or Timex distributor for warranty information. In Canada, the U.S. and in certain other locations, participating Timex retailers can provide you with a postage-paid, pre-addressed Watch Repair Mailer for your convenience in obtaining factory service.

9

## TIMEX INTERNATIONAL WARRANTY WATCH REPAIR COUPON

Original Purchase Date:

(Attach copy of sales receipt, if available)

Purchased By:

(Name, address and telephone number)

Place of Purchase:

(Name and address)

Reason for Return

THIS IS YOUR WATCH REPAIR COUPON. PLEASE KEEP IT IN A SAFE PLACE.

TMX and TIME TAG are trademarks of Timex Corp. TIMEX, TIMEXPO, and IT TAKES A LICKING AND KEEPS ON TICKING are registered trademarks of Timex Corp. ©2002 Timex Corp.