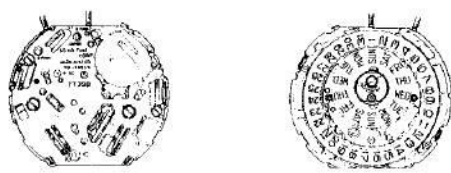


PARTS CATALOGUE/TECHNICAL GUIDE

Cal. 7T39B

[SPECIFICATIONS]

Item		Cal. No.	7T39B		
Movement					
Movement size	Outside diameter	ø27.6mm 24.0mm between 3 o'clock and 9 o'clock sides			
	Casing diameter	ø27.0mm 24.0mm between 3 o'clock and 9 o'clock sides			
	Height	4.0mm			
Time indication		Main time	Stopwatch	Alarm	
		Hour, minute, small second and 24-hour hands	Hour hand (12-hour indication system) Minute hand (30-minute indication system) 1/5-second hand	Hour and minute hands	
Driving system		Step motor, 4 pieces			
Additional mechanism		<ul style="list-style-type: none"> • Electronic circuit reset switch • Train wheel setting device • Battery life indicator • Day and date calendar • Instant setting device for day and date calendar • Independent adjustment of hour hand • Stopwatch function with 1/5-second hand • Dual time function • Regular alarm and single-time alarm functions 			
Loss/gain		Monthly rate at normal temperature range: less than 15 seconds			
Regulation system		Nil			
Measuring gate by quartz tester		Use 10-second gate.			
Battery		SEIKO SR927W, Maxell SR927W, SONY SR927W, EVEREADY 399 Battery life is approximately 2 years. Voltage: 1.55V			
Jewels		0 jewel			

SEIKO CORPORATION

PARTS CATALOGUE

Cal. 7T39B

Disassembling procedures Figs. :

① → ⑨④

Reassembling procedures Figs. :

⑨④ → ①

Lubricating: Types of oil

● Moebius A


∞ SEIKO Watch Oil S-6

∞ Silicone oil 500,000 c.s.

Oil quantity

∞ Normal quantity


∞ Extremely small

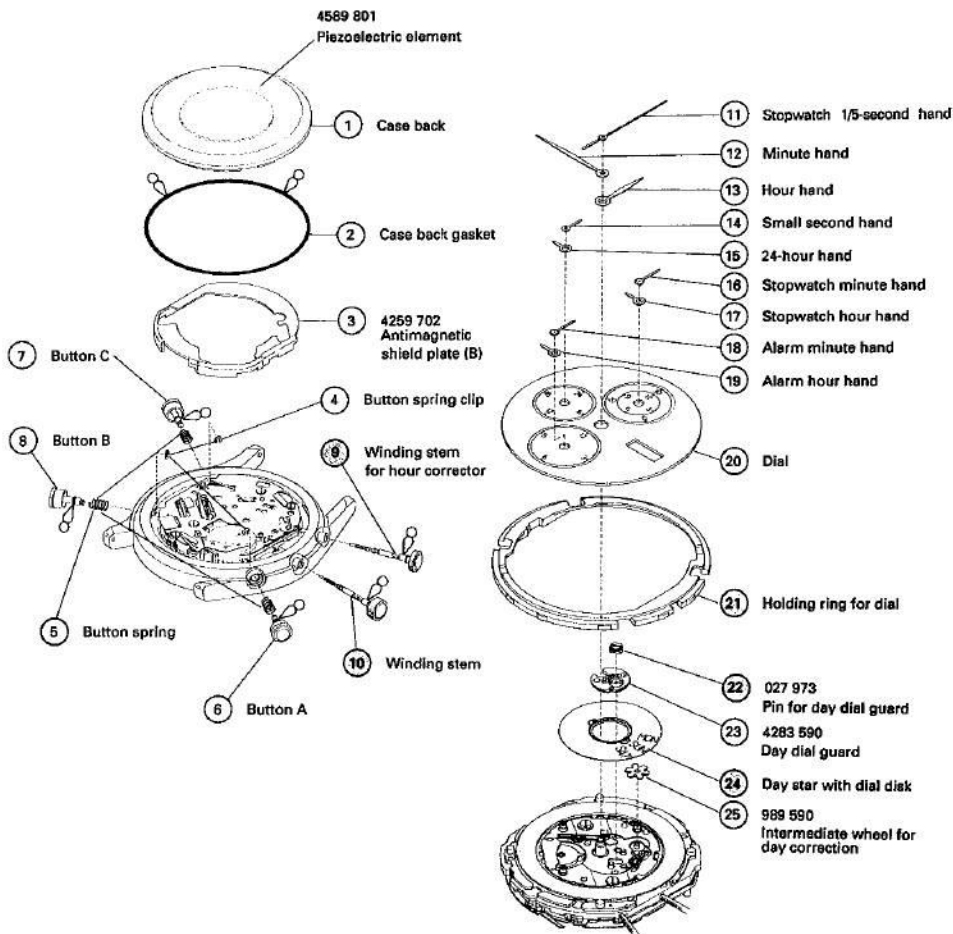

⊙ ➡ Please see the remarks on the following pages.

PARTS CATALOGUE


Cal. 7T39B

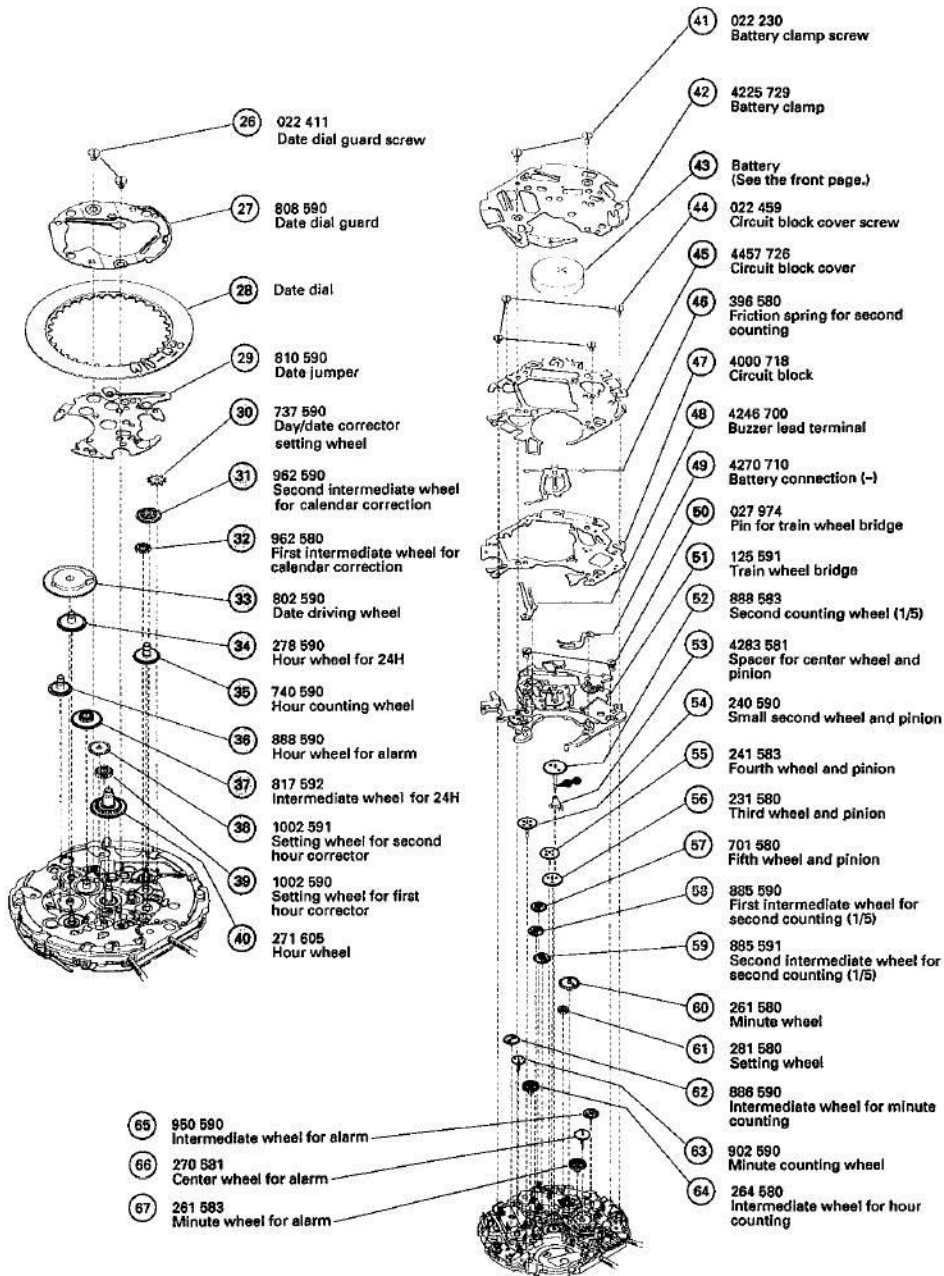

○ ➞ Please see the remarks on the following pages.

PARTS CATALOGUE

Cal. 7T39B

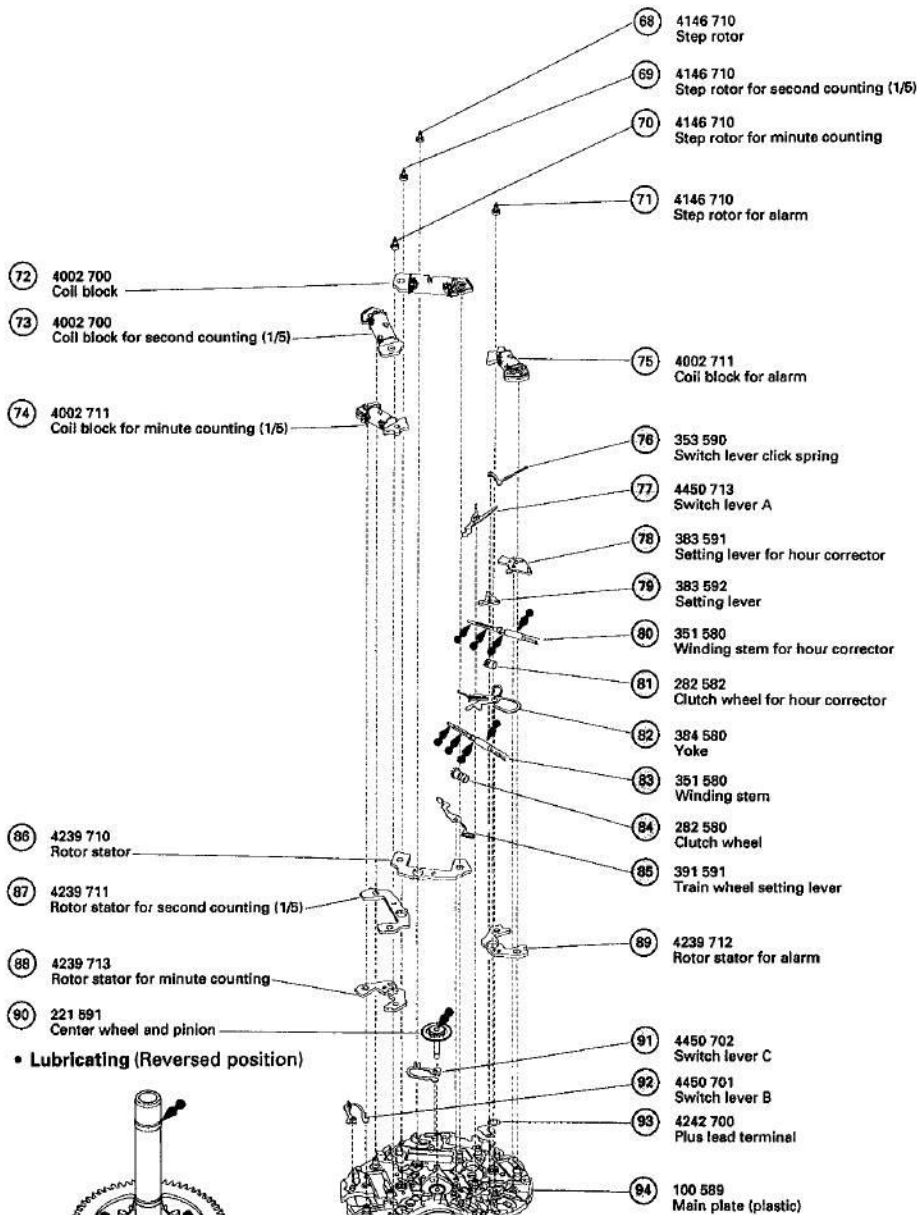

○ ➔ Please see the remarks on the following pages.

PARTS CATALOGUE

Cal. 7T39B

Remarks

⑨ Winding stem for hour corrector

⑩ Winding stem

The type of winding stem for hour corrector and winding stem is determined based on the design of cases. Check the case number and refer to "SEIKO Casing Parts Catalogue" to choose a corresponding winding stem for hour corrector or winding stem.

⑪ Holding ring for dial

The type of holding ring for dial is determined based on the design of cases. Check the case number and refer to "SEIKO Casing Parts Catalogue" to choose a corresponding holding ring for dial.

⑫ Pin for day dial guard

 
⑬ Pin for train wheel bridge

For distinction between the pins, see the illustration below.

[Pin for day dial guard]



[Pin for train wheel bridge]

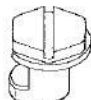

⑭ Day star with dial disk

Part code	Language	Color of figure	Color of background
150 581	English	Black	White
150 586	English	White	Black

If any other type of day star with dial disk is required, please specify the number printed on the disk or refer to the "List of Day Star with Dial Disk".


⑮ Date dial

Part code	Position of crown	Color of figure	Color of background
878 659	3 o'clock	Black	White
878 662		White	Black
878 663		Gold	Black

The type of date dial is determined based on the design of cases. Check the case number and refer to "SEIKO Casing Parts Catalogue" to choose a corresponding date dial.


- The explanation here is only for the particular points of Cal. 7T39B.
- For the repairing, checking and measuring procedures, refer to the "TECHNICAL GUIDE, GENERAL INSTRUCTIONS".

I. STRUCTURE OF THE CIRCUIT BLOCK

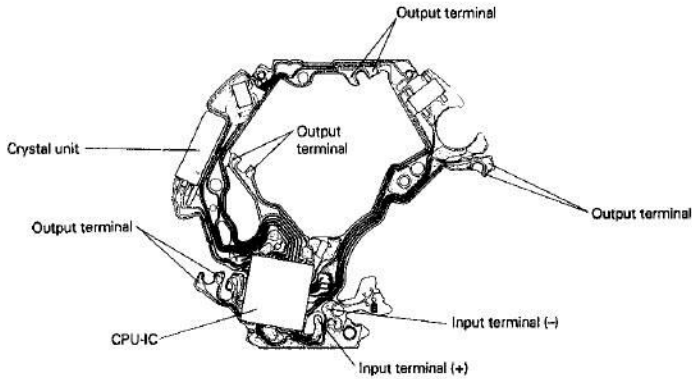


II. REMARKS ON INSTALLING THE BATTERY

- **A necessary step after installing the battery**
- After the battery is replaced with a new one, or after the battery is re-installed following the repairing procedures, be sure to short-circuit the AC terminal and the circuit block cover with conductive tweezers to reset the circuit as shown in the illustration below.

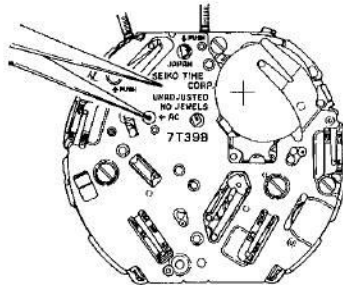

- After resetting the circuit, be sure to reset the stopwatch hands to the 12 o'clock position.

- 1) Pull out the crown at the 3 o'clock side to the second click.
- 2) Press button "A" to reset the stopwatch hour and minute hands to "0".
- 3) Press button "B" to reset the stopwatch second hand to "0".
- 4) Press button "C" to set the alarm hour and minute hands to the current time.
 - * The hands move quickly by keeping the respective buttons pressed.

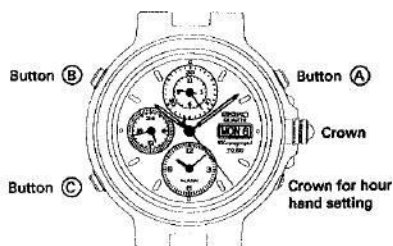

- Demonstration movement of the alarm and stopwatch hands

Check the movement of the alarm and stopwatch hands following the procedure below.

- 1) Press button "B" to reset the stopwatch hands to the 12 o'clock position.
- 2) Pull out the crown at the 3 o'clock side to the first click.
- 3) Pull out the crown at the 4 o'clock side to the first click.
- 4) Press button "B" for more than 2 seconds. The alarm and stopwatch hands start to show the demonstration movement.
 - * The hands will automatically stop the demonstration in 6 seconds.

III. REMARKS ON DISASSEMBLING AND REASSEMBLING

- 9 Winding stem for hour corrector
- 10 Winding stem


• How to remove

- Winding stem with crown at the 3 o'clock side:

Pull out the crown to the first click, and then push the setting lever by inserting the tip of tweezers into hole "A" in the illustration below.

- Winding stem with crown for hour hand setting at the 4 o'clock side:

With the crown set at the normal position, push the setting lever for hour corrector by inserting the tip of tweezers into hole "B" in the illustration below.

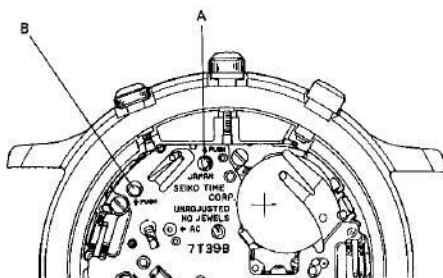


- **Remarks on setting the winding stems**


The winding stems at the 3 o'clock and 4 o'clock sides can be used interchangeably. However, note that the length of winding stem and the type of crown differ depending on the design of cases.

②② Pin for day dial guard

- **How to remove**

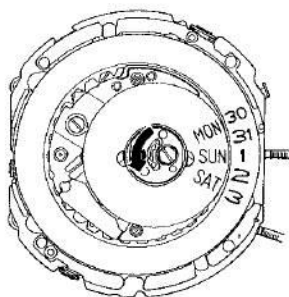

- **How to install**

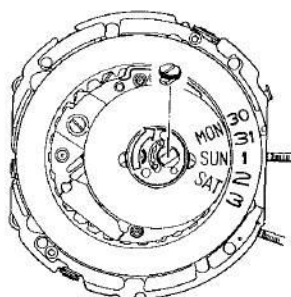


- 1) Turn the pin 90° counterclockwise to loosen it using a screwdriver.
- 2) Pick up the pin using rodico.

- 1) Set the pin properly into the groove.
- 2) Turn the pin 90° clockwise using a screwdriver to fix it.

- Notes:**
- Never turn the pin more than 90° clockwise or counterclockwise.
 - Never apply undue force to the pin in turning it using a screwdriver.
 - Be sure to use a screwdriver that fits in with the slot of the pin head.

- **Lubricating**

Lubricate the date jumper as shown in the illustration.

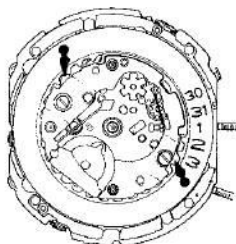


TECHNICAL GUIDE

Cal. 7T39B

③① Day/date corrector setting wheel ~ ④① Hour wheel

• **Setting positions of the wheels for calendar function**

Check the setting positions of the wheels for calendar function referring to the illustration below.

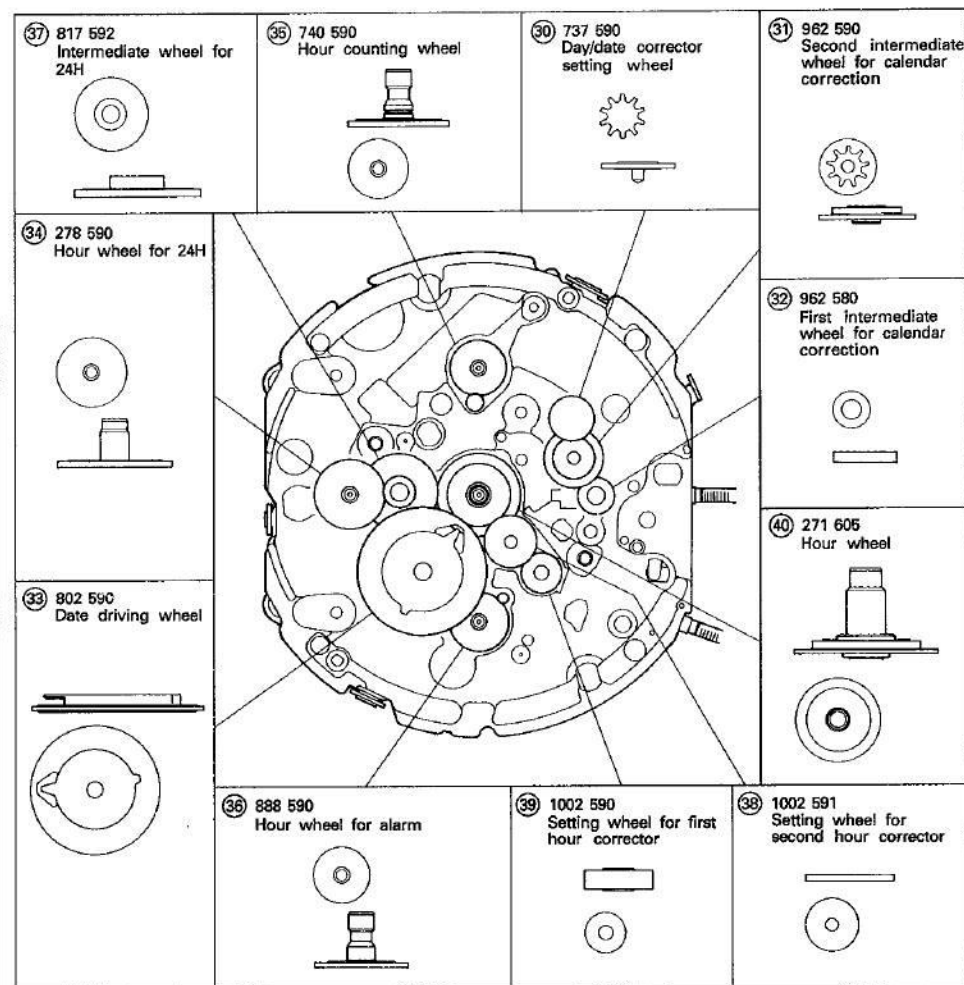

- 31 Second intermediate wheel for calendar correction
- 32 First intermediate wheel for calendar correction
- 40 Hour wheel

• **Lubricating**

Lubricate the hour wheel jumper, first intermediate wheel for calendar correction and second intermediate wheel for calendar correction as shown in the illustrations.

Hour wheel jumper



First intermediate wheel for calendar correction




Second intermediate wheel for calendar correction



- 43 Battery

• **Remarks on installing**


After installing the battery, be sure to reset the circuit with tweezers as shown in the illustration.

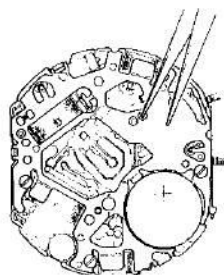

45) Circuit block cover


• How to remove

- 1) Loosen the four screws and remove them.
- 2) Release the click portion of the setting lever for hour corrector.
- 3) Release the three hooking portions of the circuit block cover by prying them up with the tip of a screwdriver as shown in the illustration at right.

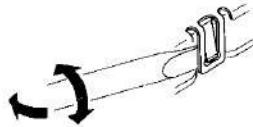


• Installing and lubricating

- 1) Set the hooking portion ①
- 2) Check that the circuit block cover is securely set to the guide tube (a) and (b).
- 3) Set the hooking portions in the order of ② and ③ in the illustration.
- 4) Tighten the screw (c).
- 5) Hook the yoke spring (d).
- 6) Tighten the other three screws.
- 7) Lubricate the click portion of the setting lever for hour corrector.

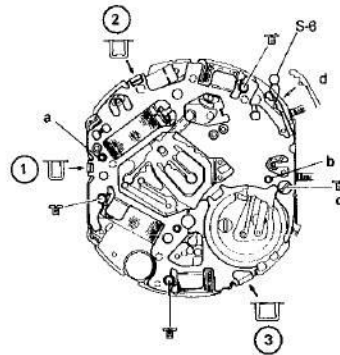


46) Friction spring for second counting

• Setting position

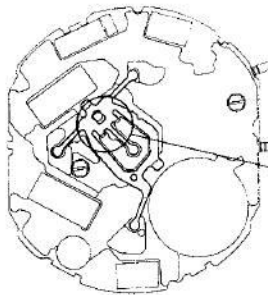

Enlarged

Slip the friction spring for second counting into the gap under the train wheel bridge.

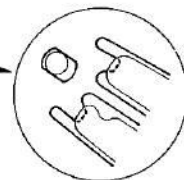


50 Pin for train wheel bridge

• How to remove

Turn the pins 90° counterclockwise to loosen them, and pick them up using rodico.

• How to install

Set the pins properly into the groove as shown in the illustration, and turn them 90° clockwise with a screwdriver to fix them.

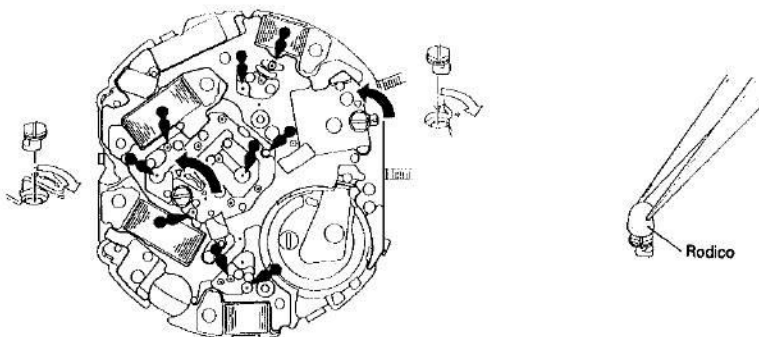

• Lubricating of the upper pivots for wheels and rotors

After installing the train wheel bridge, lubricate the step rotor, step rotor for minute counting, step rotor for second counting (1/5), step rotor for alarm, minute wheel, minute counting wheel, center wheel for alarm, second counting wheel (1/5) and small second wheel and pinion.

- Notes:**
- Never turn the pins more than 90° clockwise or counterclockwise.
 - Never apply undue force to the pins in turning them using a screwdriver.
 - Be sure to use a screwdriver that fits the slot of the pin head.


TECHNICAL GUIDE

Cal. 7T39B

51 Train wheel bridge


• Remarks on installing

- Before installing the train wheel bridge, check if the wheels are set in the proper position, referring to the illustration below. Also, check their lower pivots are securely set in the axle holes.

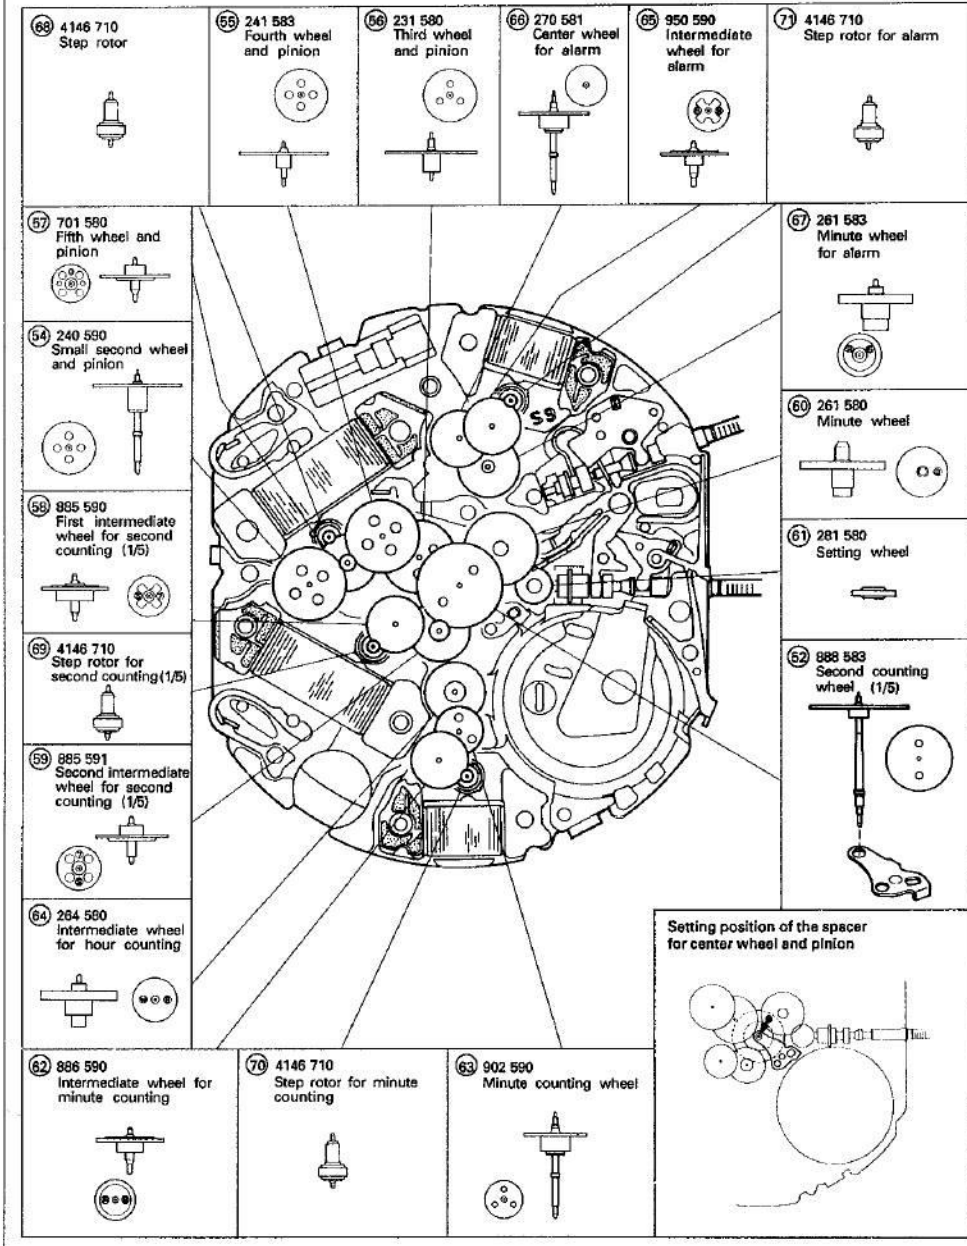

76 Switch lever click spring ~ 85 Train wheel setting lever



• **Setting position and lubricating**

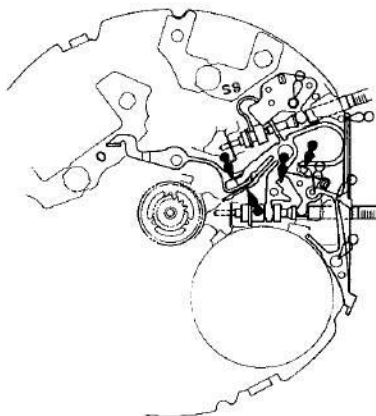

91 Switch lever C ~ 93 Plus lead terminal


• **Setting position**

Set the switch levers B and C and the plus lead terminal as shown in the illustration.

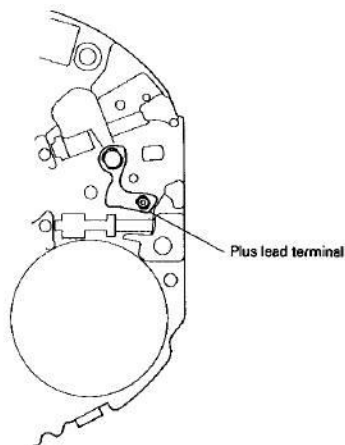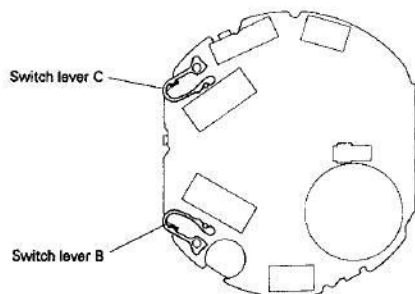

94 Main plate

• **Lubricating**

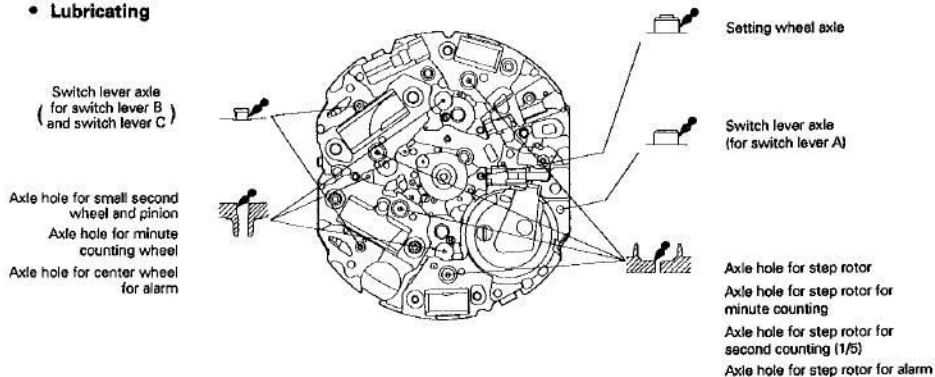

IV. VALUE CHECKING

• **Coil block resistance**

Coil block for second counting (1/5)	: 1.7K Ω ~ 2.3K Ω
Coil block for minute counting	: 1.8K Ω ~ 2.4K Ω
Coil block for alarm	: 1.8K Ω ~ 2.4K Ω
Coil block	: 1.7K Ω ~ 2.3K Ω

• **Current consumption**

Before measuring current consumption, be sure to reset the circuit.

* Refer to "A necessary step after installing the battery".

For the whole of the movement	: less than 2.5 μ A
For the circuit block alone	: less than 1.8 μ A

• **Time accuracy**

When measuring the accuracy, pull out the crowns to the first click and set the gate of the quartz tester to "10".

(Before measuring the accuracy, be sure to reset the stopwatch to "0".)