

LIMITED WARRANTY

This watch of electronic quartz watch module from the Manufacturer is warranted to the original purchaser for a period of two year from the original purchase date under normal use and service against defective materials or workmanship.

This warranty is void if the watch has been damaged by accident or unreasonable use neglect improper service or other causes not arising out of defects in material or workmanship.

During the above two year period the manufacturer will repair adjust and/or replace (at manufacturer's options) defective parts without charge to the purchaser when the watch is returned prepaid postage and insured with proof of purchase date. Unit returned without proof of purchase date will be repaired at the service rates in effect at the time of return.

This warranty does not apply to case, crystal, bracelets or battery cells. Should you need servicing send it carefully wrapped and insured prepaid together with \$5.95(for handling) to

MEDANA WATCH CORP.
44 East 32nd Street.
New York, N.Y. 10016

BLACK JACK GAME WATCH INSTRUCTION MANUAL

Feature List :

1. Hour/Minute Time Display (User selectable - 12/24 Hour Display format)
2. Black Jack Game

Function and Mode Operation :




A) Normal Time Setting Mode

1. Press and hold (S2) button for 3 seconds, "Minute" digits will flash.
2. To set the Minute, advance by pressing (S3) button.
3. Press (S2), "Hour" digits will flash.
4. To set the Hour, advance by pressing (S3) button.
5. Press (S1) button once to set and return to Normal Time Display.
6. Press (S3) button for 12/24 hour display selection.
7. Press 4 buttons for power reset, Normal Time will reset to 12:00 AM.

B) Black Jack Machine Game Mode

1. Press (S1) button to start Black Jack Game, 5,000 points will be granted.
2. Press (S2) button to toggle the sound. The Sound indicator * will appear. To deactivate the sound function, pressing (S2) button once more. The Sound indicator * will disappear.
3. Press (S3) button to start the Black Jack Game.
4. The "PLAYER" digits are shown flashing. The number display shown underneath the "PLAYER" digits is the summation of the Player's cards. The Dealer deals 2 cards face-up to the Player and are shown at the lower display. The number display shown underneath the "DEALER" digits is the points of the Dealer's exposed card at the upper left display.

C) Special Conditions

1. If player gets Black Jack, "BLACK JACK" indicator  will be flashing with special sound effect and 300 points will be granted.
2. Player can also choose among HIT, STAND, SURRENDER, or DOUBLE BET.
HIT (HIT) : Player can hit until he decides to stand or 21 points or blast.
STAND (STD) : Player can stand and change to the Dealer side.
SURRENDER (SUR) : Player can surrender on any initial two cards and half of the bet will be lost.
DOUBLE BET (DBL) : Player can double his bet on any initial 2 cards combination. After Double Bet, only one more card can be taken.
3. Press (S2) button once to select and pointer * will point to DBL. If Double Bet is chosen, Player will get one more card automatically. Score will be adjusted subject to the conditions of Win or Draw or Loss.
4. Press (S2) button once again to select "SUR" and a pointer will point to SUR. Player will lose half of the bet when choosing "SURRENDER".
5. Press (S3) button to select Hit function. Player has the right to choose 3 more cards maximum. If Player satisfies with the summation points, press (S4) button to change to the Dealer side.
6. The Dealer must draw on any hand showing 16 points or less and must stand on all totals 17 to 21 points.
7. Score will be added or subtracted for the Player. "WIN" or "DRAW" or "LOSS" indicator will be shown flashing accordingly. Player can then press (S3) button to start the next playing round again.

D) Scores

1. 200 points is the default bet. If the points are less than 200 but more than zero, the last bet also equals to 200 points.
2. Scores for Black Jack is 300 points.
3. Scores for 6,7,8 and 7,7,7 is 400 points.

E) To End The Game

1. Press (S1) MODE button to return Normal Time Display Mode.
2. If there is no key press for 2 minutes, then it will automatically return to Normal Time Display.
3. Score mark for last playing will be recorded when starting the game.

F) Battery

1. When the display becomes dim, it is time to replace the battery. Open the case back and use one fresh 3 volt CR 2016 battery or equivalent for replacement.
2. Assuming you play the Black Jack Game 15 minute everyday with the sound indicator on, the battery will last for over 18 months.
3. If you play the Black Jack Game with the sound indicator off, the watch will be in the power-safe mode and it can last for at least 24 months.

CHINA
CARD PRINTED IN HONG KONG.

