

Watch Operation Guide 5686

Contents

Precautions

- Operating Precautions
- User Maintenance
- Battery Replacement
- Mobile Link Precautions

Before Getting Started...

- General Guide
- Watch Face and Display Indicators
- Mode Hand
- Navigating Between Modes
- Cycling Between Timekeeping Mode Digital Display Contents
- Shifting Hands to Read the Digital Display
- Viewing the Face in the Dark
- Useful Features

Linking with a Phone

- Getting Ready
- Auto Time Adjustment
- Using the Schedule Timer
- Viewing Stopwatch Data
- Configuring Timer Settings
- Setting the Alarm
- Configuring World Time Settings
- Adjusting Hand Alignment
- Phone Finder
- Configuring Watch Settings
- Changing the Home City Summer Time Setting
- Connection
 - Connecting with a Phone
 - Unpairing
 - If you purchase another phone

Time Adjustment

- Using Watch Operations to Adjust the Time Setting
- Using the Watch in a Medical Facility or Aircraft

World Time

- Using CASIO WATCHES to Configure World Time City Settings
- Checking World Time
- World Time City Setting
- Swapping Your Home Time and World Time

Alarm

- Using CASIO WATCHES to Configure Alarm Settings
- Configuring Alarm Settings
- Enabling the Hourly Time Signal
- Turning Off an Alarm or the Hourly Time Signal

Moving to Another Time Zone

Stopwatch

- Lap Times
- Measuring Elapsed Time
- Measuring Lap Times
- Example: Recording a Race Lap Time

Timer

- Using CASIO WATCHES to Configure Timer Settings
- Setting the Countdown Start Time
- Using the Timer

Hand Alignment Adjustment

- Using CASIO WATCHES to Adjust Hand Alignment
- Adjusting Hand Alignment

Other Settings

- Changing the Date Display Format
- Specifying the Day of the Week Language
- Enabling or Disabling the Schedule Timer Notification Sound
- Enabling the Button Operation Tone
- Resetting Watch Settings

Other Information

- City Table
- Summer Time Table
- Supported Phones
- Specifications
- Copyrights and Registered Copyrights

Troubleshooting

Precautions

Operating Precautions

● Water Resistance

- The information below applies to watches with WATER RESIST or WATER RESISTANT marked on the back cover.

Water Resistance Under Daily Use

Marking on watch front or on back cover	No BAR mark
---	-------------

Example of Daily Use

Hand washing, rain	Yes
Water-related work, swimming	No
Windsurfing	No
Skin diving	No

Enhanced Water Resistance Under Daily Use

5 Atmospheres

Marking on watch front or on back cover	5BAR
---	------

Example of Daily Use

Hand washing, rain	Yes
Water-related work, swimming	Yes
Windsurfing	No
Skin diving	No

10 Atmospheres

Marking on watch front or on back cover	10BAR
---	-------

Example of Daily Use

Hand washing, rain	Yes
Water-related work, swimming	Yes
Windsurfing	Yes
Skin diving	Yes

20 Atmospheres

Marking on watch front or on back cover	20BAR
---	-------

Example of Daily Use

Hand washing, rain	Yes
Water-related work, swimming	Yes
Windsurfing	Yes
Skin diving	Yes

- Do not use your watch for scuba diving or other types of diving that requires air tanks.
- Watches that do not have WATER RESIST or WATER RESISTANT marked on the back cover are not protected against the effects of sweat. Avoid using such a watch under conditions where it will be exposed to large amounts of sweat or moisture, or to direct splashing with water.
- Even if a watch is water resistant, note the usage precautions described below. Such types of use reduce water resistance performance and can cause fogging of the glass.
 - Do not operate the crown or buttons while your watch is submersed in water or wet.
 - Avoid wearing your watch while in the bath.
 - Do not wear your watch while in a heated swimming pool, sauna, or any other high temperature/high humidity environment.
 - Do not wear your watch while washing your hands or face, while doing housework, or while performing any other task that involves soaps or detergents.
- After submersion in seawater, use plain water to rinse all salt and dirt from your watch.
- To maintain water resistance, have the gaskets of your watch replaced periodically (about once every two or three years).
- A trained technician will inspect your watch for proper water resistance whenever you have its battery replaced. Battery replacement requires the use of special tools. Always request battery replacement from your original retailer or from an authorized CASIO service center.
- Some water-resistant watches come with fashionable leather bands. Avoid swimming, washing, or any other activity that causes direct exposure of a leather band to water.
- The inside surface of the watch glass may fog when the watch is exposed to a sudden drop in temperature. No problem is indicated if the fogging clears up relatively quickly. Sudden and extreme temperature changes (such as coming into an air conditioned room in the summer and standing close to an air conditioner outlet, or leaving a heated room in the winter and allowing your watch to come into contact with snow) can cause it to take longer for glass fogging to clear up. If glass fogging does not clear up or if you notice moisture inside of the glass, immediately stop using your watch and take it to your original retailer or to an authorized CASIO service center.
- Your water-resistant watch has been tested in accordance with International Organization for Standardization regulations.
- Band**
 - Tightening the band too tightly can cause you to sweat and make it difficult for air to pass under the band, which can lead to skin irritation. Do not fasten the band too tightly. There should be enough room between the band and your wrist so you can insert your finger.
 - Deterioration, rust, and other conditions can cause the band to break or come off of your watch, which in turn can cause band pins to fly out of position or to fall out. This creates the risk of your watch falling from your wrist and becoming lost, and also creates the risk of personal injury. Always take good care of your band and keep it clean.
 - Immediately stop using a band if you even notice any of the following: loss of band flexibility, band cracks, band discoloration, band looseness, band connecting pin flying or falling out, or any other abnormality. Take your watch to your original retailer or to a CASIO service center for inspection and repair (for which you will be charged) or to have the band replaced (for which you will be charged).

● Temperature

- Never leave your watch on the dashboard of a car, near a heater, or in any other location that is subject to very high temperatures. Do not leave your watch where it will be exposed to very low temperatures. Temperature extremes can cause your watch to lose or gain time, to stop, or otherwise malfunction.
- Leaving your watch in an area hotter than +60 °C (140 °F) for long periods can lead to problems with its LCD. The LCD may become difficult to read at temperatures lower than 0 °C (32 °F) and greater than +40 °C (104 °F).

● Impact

- Your watch is designed to withstand impact incurred during normal daily use and during light activity such as playing catch, tennis, etc. Dropping your watch or otherwise subjecting it to strong impact, however, can lead to malfunction. Note that watches with shock-resistant designs (G-SHOCK, BABY-G, G-MS) can be worn while operating a chain saw or engaging in other activities that generate strong vibration, or while engaging in strenuous sports activities (motocross, etc.).

● Magnetism

- The hands of analog and combination (analog-digital) watches are moved by a motor that uses magnetic force. When such a watch is close to a device (audio speakers, magnetic necklace, cell phone, etc.) that emits strong magnetism, the magnetism can cause timekeeping to slow down, speed up, or stop, resulting in the incorrect time being displayed.
- Very strong magnetism (from medical equipment, etc.) should be avoided because it can cause malfunction of your watch and damage to electronic components.

● Electrostatic Charge

- Exposure to very strong electrostatic charge can cause your watch to display the wrong time. Very strong electrostatic charge even can damage electronic components.
- Electrostatic charge can cause the display to go blank momentarily or cause a rainbow effect on the display.

● Chemicals

- Do not allow your watch to come into contact with thinner, gasoline, solvents, oils, or fats, or with any cleaners, adhesives, paints, medicines, or cosmetics that contain such ingredients. Doing so can cause discoloration of or damage to the resin case, resin band, leather, and other parts.

● Storage

- If you do not plan to use your watch for a long time, thoroughly wipe it free of all dirt, sweat, and moisture, and store it in a cool, dry place.

● Resin Components

- Allowing your watch to remain in contact with other items or storing it together with other items for long periods while it is wet can cause color on resin components to transfer to the other items, or the color of the other items to transfer to the resin components of your watch. Be sure to dry off your watch thoroughly before storing it and make sure it is not in contact with other items.
- Leaving your watch where it is exposed to direct sunlight (ultraviolet rays) for long periods or failure to clean dirt from your watch for long periods can cause it to become discolored.
- Friction caused by certain conditions (strong external force, sustained rubbing, impact, etc.) can cause discoloration of painted components.
- If there are printed figures on the band, strong rubbing of the printed area can cause discoloration.
- Leaving your watch wet for long periods can cause fluorescent color to fade. Wipe the watch dry as soon as possible after it becomes wet.
- Semi-transparent resin parts can become discolored due to sweat and dirt, and if exposed to high temperatures and humidity for long periods.
- Daily use and long-term storage of your watch can lead to deterioration, breaking, or bending of resin components. The extent of such damage depends on usage conditions and storage conditions.

● Leather Band

- Allowing your watch to remain in contact with other items or storing it together with other items for long periods while it is wet can cause the color of the leather band to transfer to the other items or the color of the other items to transfer to the leather band. Be sure to dry off your watch thoroughly with a soft cloth before storing it and make sure it is not in contact with other items.
- Leaving a leather band where it is exposed to direct sunlight (ultraviolet rays) for long periods or failure to clean dirt from a leather band for long periods can cause it to become discolored.

CAUTION:

Exposing a leather band to rubbing or dirt can cause color transfer and discoloration.

● Metal Components

- Failure to clean dirt from metal components can lead to formation of rust, even if components are stainless steel or plated. If metal components exposed to sweat or water, wipe thoroughly with a soft, absorbent cloth and then place the watch in a well-ventilated location to dry.
- Use a soft toothbrush or similar tool to scrub the metal with a weak solution of water and a mild neutral detergent, or with soapy water. Next, rinse with water to remove all remaining detergent and then wipe dry with a soft absorbent cloth. When washing metal components, wrap the watch case with kitchen plastic wrap so it does not come into contact with the detergent or soap.

● Bacteria and Odor Resistant Band

- The bacteria and odor resistant band protects against odor generated by the formation of bacteria from sweat, which ensures comfort and hygiene. In order to ensure maximum bacteria and odor resistance, keep the band clean. Use an absorbent soft cloth to thoroughly wipe the band clean of dirt, sweat, and moisture. A bacteria and odor resistant band suppresses the formation of organisms and bacteria. It does not protect against rash due to allergic reaction, etc.

● Liquid Crystal Display

- Display figures may be difficult to read when viewed from an angle.

● Watch with Data Memory

- Allowing the battery to go dead, replacing the battery, or having your watch repaired can cause all data in watch memory to be lost. Note that CASIO Computer Co., Ltd. assumes no responsibility for any damages or losses caused by data lost due to malfunction or repair of your watch, replacement of the battery, etc. Be sure to keep separate written copies of all important data.

Note that CASIO Computer Co., Ltd. assumes no responsibility for any damage or loss suffered by you or any third party arising through the use of your watch or its malfunction.

User Maintenance

● Caring for Your Watch

Remember that you wear your watch next to your skin, just like a piece of clothing. To ensure your watch performs at the level for which it is designed, keep it clean by frequently wiping with a soft cloth to keep your watch and band free of dirt, sweat, water and other foreign matter.

- Whenever your watch is exposed to sea water or mud, rinse it off with clean fresh water.
- For a metal band or a resin band with metal parts, use a soft toothbrush or similar tool to scrub the band with a weak solution of water and a mild neutral detergent, or with soapy water. Next, rinse with water to remove all remaining detergent and then wipe dry with a soft absorbent cloth. When washing the band, wrap the watch case with kitchen plastic wrap so it does not come into contact with the detergent or soap.
- For a resin band, wash with water and then wipe dry with a soft cloth. Note that sometimes a smudge like pattern may appear on the surface of a resin band. This will not have any effect on your skin or clothing. Wipe with a cloth to remove the smudge pattern.
- Clean water and sweat from a leather band by wiping with a soft cloth.
- Not operating a watch crown, buttons, or rotary bezel could lead to later problems with their operation. Periodically rotate the crown and rotary bezel, and press buttons to maintain proper operation.

● Dangers of Poor Watch Care

Rust

- Though the metal steel used for your watch is highly rust-resistant, rust can form if your watch is not cleaned after it becomes dirty.
 - Dirt on your watch can make it impossible for oxygen to come into contact with the metal, which can lead to breakdown of the oxidization layer on the metal surface and the formation of rust.
- Rust can cause sharp areas on metal components and can cause band pins to fly out of position or to fall out. If you ever notice any abnormality immediately stop using your watch and take it to your original retailer or to an authorized CASIO service center.
- Even if the surface of the metal appears clean, sweat and rust in crevasses can soil the sleeves of clothing, cause skin irritation, and even interfere with watch performance.

Premature Wear

- Leaving sweat or water on a resin band or bezel, or storing your watch in an area subject to high moisture can lead to premature wear, cuts, and breaks.

Skin Irritation

- Individuals with sensitive skin or in poor physical condition may experience skin irritation when wearing a watch. Such individuals should keep their leather band or resin band particularly clean. Should you ever experience a rash or other skin irritation, immediately remove your watch and contact a skin care professional.

Battery Replacement

- Leave battery replacement up to your original retailer or authorized CASIO service center.
- Have the battery replaced only with the type specified in the “Specifications”. Use of a different battery type can cause malfunction.
- When replacing the battery, also request a check for proper water resistance.
- Ornamental resin components may become worn, cracked, or bent over time when subjected to normal daily use. Note that if cracking or any other abnormality indicating possible damage is noticed in a watch submitted for battery replacement, your watch will be returned with an explanation of the abnormality, without the requested servicing being performed.

● Initial Battery

- The battery that comes loaded in your watch when you purchase it is used for function and performance testing at the factory.
- The test battery may go dead quicker than the normally rated battery life noted in the “Specifications”. Note that you will be charged for replacement of this battery, even if replacement is required within your watch’s warranty period.

● Low Battery Power

- Low battery power is indicated by large timekeeping error, by dim display contents, or by a blank display.
- Operation while battery power is low can result in malfunction. Replace the battery as soon as possible.

Mobile Link Precautions

● Legal Precautions

- This watch complies with or has received approval under the radio laws of various countries and geographical areas. Using this watch in an area where it does not comply with or has not received approval under applicable radio laws may be a criminal offense. For details, visit the CASIO Website.
<https://world.casio.com/ce/BLE/>

- Use of this watch inside of aircraft is restricted under the aviation laws of each country. Be sure to follow the instructions of airline personnel.

● Precautions when using Mobile Link

- When using this watch in combination with a phone, keep the watch and phone close to each other. A range of two meters is recommended as a guideline, but the local environment (walls, furniture, etc.), the structure of a building, and other factors may require a much closer range.
- This watch can be affected by other devices (electrical devices, audio-visual equipment, office equipment, etc.) In particular, it can be affected by operation of a microwave oven. The watch may not be able to communicate normally with a phone if a microwave oven is operating nearby. Conversely, this watch may cause noise in radio reception and the video image of a TV.
- Bluetooth of this watch uses the same frequency band (2.4 GHz) as wireless LAN devices, and use of such devices in close proximity of this watch may result in radio interference, slower communication speeds and noise for the watch and the wireless LAN device, or even communication failure.

● Stopping Radio Wave Emission by This Watch

The ✂ on the display indicates that the watch is emitting radio waves.

When in a hospital, on an aircraft, or in any other area where the use of radio waves is not allowed, use the operation below to stop radio wave generation.

- Enter the watch Airplane Mode
[Using the Watch in a Medical Facility or Aircraft](#)

Before Getting Started...

This section provides an overview of the watch and introduces convenient ways it can be used.

Watch Features

- **Phone Linking**

The watch supports connection and communication with a Bluetooth capable phone.

- **World Time**

Display the current time in any one of 38 time zones* around the globe.

* Subject to being updated when connected with a phone.

- **Alarm**

An alarm sounds whenever a time specified by you is reached.

- **Stopwatch**

The stopwatch measures elapsed time in 1/1000-second units for the first hour, and in 1/10-second units after that for up to 24 hours.


- **Timer**

Countdown from a start time specified by you. An alarm sounds when the countdown reaches zero.

Note

- The illustrations included in this operation guide have been created to facilitate explanation. An illustration may differ somewhat from the item it represents.

General Guide

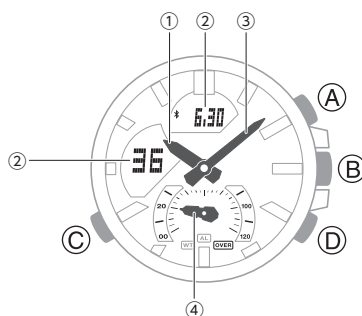

- ① Hour hand
- ② LCD
- ③ Minute hand
- ④ Mode hand
Graphic display area operation is linked with operations in each watch mode.

A button

Press to turn on illumination.

B button

Pressing this button in the Timekeeping Mode cycles between displays.


C button

Each press cycles between watch modes. In any mode, hold down this button for at least two seconds to return to the Timekeeping Mode.

D button

Pressing this button while any setting screen is displayed will change the setting.

Watch Face and Display Indicators

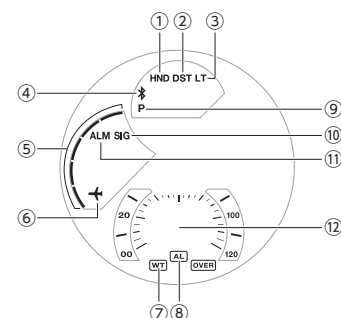


- ① Flashes while the watch's hands are shifted for easier reading.
- ② Displayed while the watch is indicating summer time.
- ③ Displayed while Auto Light is enabled.
- ④ Displayed while there is connection between the watch and a phone.
- ⑤ In the Stopwatch Mode or Timer Mode, this indicator shows elapsed seconds.
- ⑥ Displayed while the Airplane Mode is enabled.
- ⑦ In the World Time Mode, the mode hand points to [WT].
- ⑧ In the Alarm Mode, the mode hand points to [AL].
- ⑨ Displayed during p.m. times while 12-hour timekeeping is being used.
- ⑩ Displayed while the hourly time signal is enabled.
- ⑪ Displayed while an alarm is turned on.
- ⑫ Mode hand movement depends on the current watch mode.

Battery Replacement

When battery power goes low, will start to flash and some functions will become disabled. If continues to flash, replace the battery.


Request battery replacement from a CASIO service center or your original retailer.

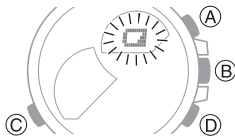

Mode Hand

Mode hand movement depends on the current watch mode.

- In the Alarm Mode and World Time Mode, the mode hand indicates the current mode.

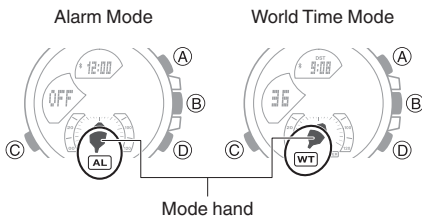

Timekeeping Mode

In the Timekeeping Mode, the mode hand indicates the number of minutes remaining in the currently ongoing event. The mode hand points to [OVER] when there are more than 120 minutes remaining.

If you do not have scheduled events which will finish within 24 hours, the mode hand points to [00].

[Using the Schedule Timer](#)

Stopwatch Mode

In the Stopwatch Mode, the mode hand indicates the lap time seconds.


Timer Mode

In the Timer Mode, the mode hand indicates the minutes, which are also shown on the digital display.

Navigating Between Modes


Each press of (C) cycles between watch modes.

- In any mode, hold down (C) for at least two seconds to return to the Timekeeping Mode.

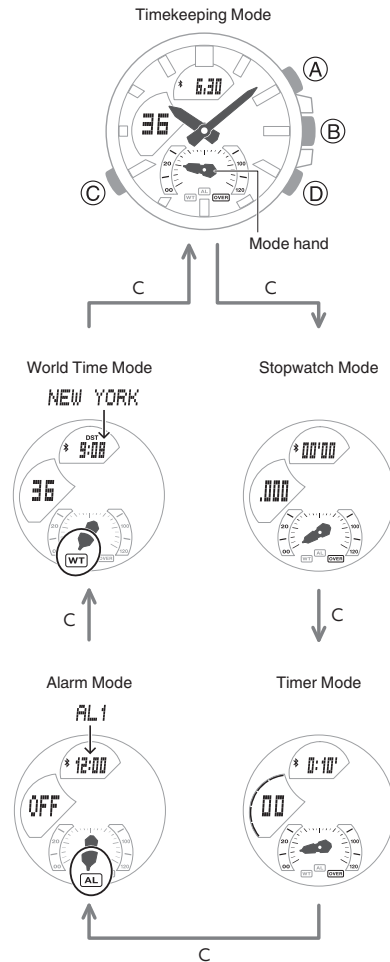

Cycling Between Timekeeping Mode Digital Display Contents

Each press of (B) in the Timekeeping Mode cycles the display information as shown below.

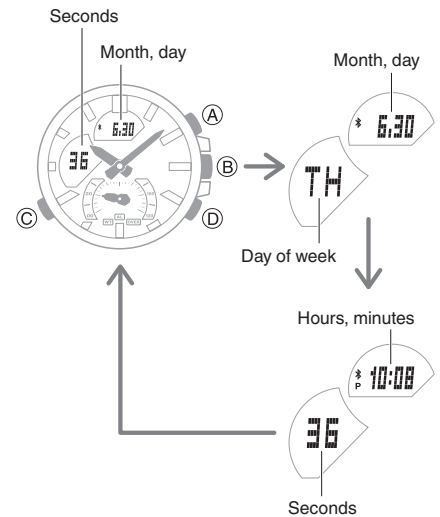


Press (D) to display the Schedule Timer.

[Using the Schedule Timer](#)

Shifting Hands to Read the Digital Display

Hand shift moves the hands out of the way for easy viewing of display information.

- While holding down (A), press (C).
 - This will shift the analog hands to allow easy viewing of display information.

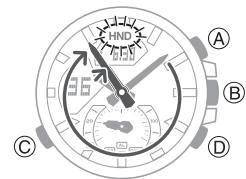

- To return the hands to their normal timekeeping positions, hold down (A) as you press (C) again or press (C) to change to another mode.

Note


- If you leave the watch with its hands shifted and do not perform any operation for about one hour, the hands will resume normal timekeeping automatically.

Viewing the Face in the Dark

The watch has an LED light that you can turn on for reading in the dark.

To illuminate the face manually


Press (A) to turn on illumination.

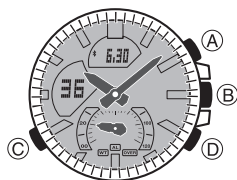

- Illumination will turn off automatically if an alarm starts to sound.

To illuminate the face when Auto Light is enabled

If Auto Light is enabled, face illumination will turn on automatically whenever the watch is positioned at an angle of 40 degrees or more.

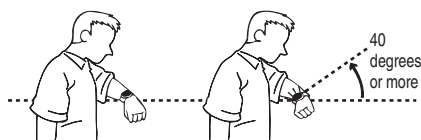

Important!

- Auto Light may not operate properly when the watch is at a horizontal angle of 15 degrees or greater from horizontal as shown in the illustration below.



- Electro-static charge or magnetism can interfere with proper auto light operation. If this happens, try lowering your arm and then angle it towards your face again.
- When moving the watch you may note a slight rattling sound. This is due to operation of the auto light switch, which determines the current orientation of the watch. It does not indicate malfunction.


Note

- Auto Light is disabled when any one of the conditions below exists.
 - Alarm, timer alert, or other beeper sounding

Configuring the Auto Light Setting

1. Enter the Timekeeping Mode.
[Navigating Between Modes](#)
2. Hold down (B) for at least two seconds. Release the button when the name of the currently selected Home City appears on the display.

- This is the setting mode. The hands automatically shift out of the way for easy viewing of the display and other indicators.

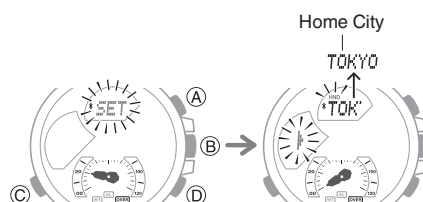


3. Press (C) 13 times to display [AUTO].



4. Press (D) to toggle Auto Light between enable and disable.
 [ON]: Illumination turns on when the watch is angled towards the face.

[OFF]: Illumination does not turn on when the watch is angled towards the face.

5. Press (B) to complete the setting operation.
 - [LT] is displayed while Auto Light is enabled.
 - If you do not disable it manually, Auto Light remains enabled for approximately six hours. After that, it becomes disabled automatically.

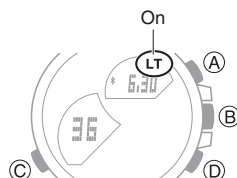


Note

- While the setting is being configured, the watch will exit the setting operation automatically after about two or three minutes of non-operation.

Specifying the Illumination Duration

You can select either 1.5 seconds or three seconds as the illumination duration.

1. Enter the Timekeeping Mode.
[Navigating Between Modes](#)
2. Hold down (B) for at least two seconds. Release the button when the name of the currently selected Home City appears on the display.
 - This is the setting mode. The hands automatically shift out of the way for easy viewing of the display and other indicators.

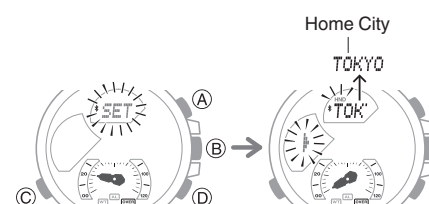


3. Press (C) 14 times to display [LIGHT].



4. Press (D) to select an illumination duration.

- [1]: 1.5-second illumination
- [3]: 3-second illumination

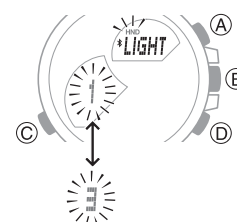

5. Press (B) to exit the setting screen.

Note


- While the setting is being configured, the watch will exit the setting operation automatically after about two or three minutes of non-operation.

Useful Features

Pairing the watch with your phone makes a number of the watch's features easier to use.


Auto time adjustment

[Auto Time Adjustment](#)

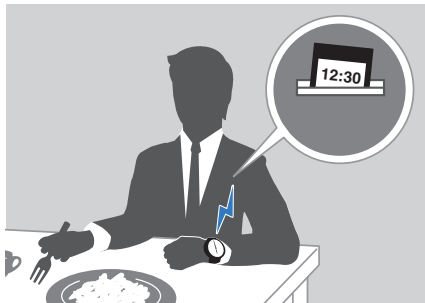

Selection of More Than 300 World Time cities

[Configuring World Time Settings](#)

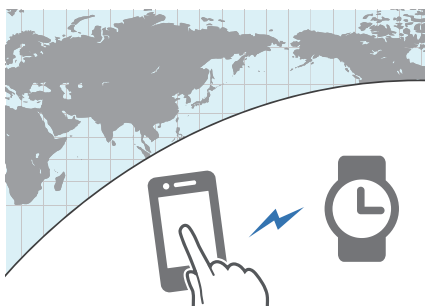

Stopwatch Data Transfer to the Phone

[Viewing Stopwatch Data](#)



In addition, a number of other watch settings can be configured using your phone.

To transfer data to a watch and to configure settings, you first need to pair the watch with your phone.

[Getting Ready](#)

- Your phone needs to have the CASIO "CASIO WATCHES" app installed to pair with the watch.

Linking with a Phone

While there is a Bluetooth connection between the watch and phone (Mobile Link), the watch's current time setting is adjusted automatically. You can also change the watch's other settings.

Note

- This function is available only while CASIO WATCHES is running on the phone.
- This section describes watch and phone operations.
- : Watch operation
- : Phone operation

Getting Ready

To use your watch in combination with a phone, you first need to pair them. Perform the steps below to pair the watch with a phone.

● ① Install the app on your phone.

In Google Play or the App Store, search for the CASIO "CASIO WATCHES" app and install it on your phone.

● ② Configure Bluetooth settings.

Enable the phone's Bluetooth.

Note

- For details about setting procedures, see your phone documentation.


● ③ Pair the watch with a phone.

Before you can use the watch in combination with a phone, you first need to pair them.

- Move the phone to be paired with close to (within one meter of) the watch.
- Tap the "CASIO WATCHES" icon.
 - Tap on the "My Watch" tab. Next, select the applicable product name.
- Hold down (D) for at least two seconds. Release the button when [CNCT] changes from high speed flashing to slow flashing.

- Perform the operation shown on the screen of the phone to be paired with. [OK] is shown on the display while there is a connection between the watch and phone.

- If pairing fails for some reason, [ERR] appears on the display momentarily and then the watch returns to the Timekeeping Mode. Perform the pairing procedure again from the beginning.

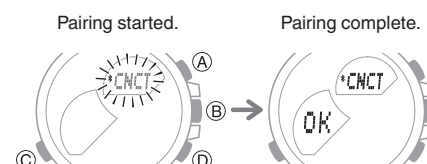

Note

- The first time you start up CASIO WATCHES, a message will appear on your phone asking if you want to enable location information acquisition. Configure settings to allow background use of location information.

Auto Time Adjustment

Your watch can connect with your phone to adjust the watch's time setting.

If you leave your watch in the Timekeeping Mode, it will perform the adjustment operation automatically as you go about your daily life, without any operation required by you.



Important!

- The watch may not be able to perform auto time adjustment under the conditions described below.
 - While the watch is too far away from its paired phone
 - While communication is not possible due to radio interference, etc.
 - While the phone is updating its system
 - While CASIO WATCHES is not running on the phone


Note

- If the watch does not indicate the correct time even if is able to connect with a phone, adjust the hand positions.
 - [Adjusting Hand Alignment](#)
- If there is a World Time City specified with CASIO WATCHES, its time will also be adjusted automatically.
- Auto time adjustment is performed at the times described below.
 - After your phone's time zone or summer time setting is changed
 - After 24 hours or more have passed since the last time adjustment using Bluetooth connection
 - After 24 hours or more have passed since city swapping using CASIO WATCHES or watch operation
 - After 24 hours or more have passed since the last home city change or time adjustment using watch operation
- Watch operation can be performed even while it is connected with your phone.

● Triggering Immediate Time Adjustment

The watch's time setting is adjusted automatically whenever you pair it with a phone. Whenever you want to adjust the watch's time setting based on your phone's time, perform the procedure below to connect with a phone.

1. Enter the Timekeeping Mode.
 - [Navigating Between Modes](#)
2. Move the phone close to (within one meter of) the watch.
3. Hold down (D) for at least two seconds. [CNCT] flashes to indicate that the watch has started the connection operation. Once the watch and phone are connected, [OK] appears, and then the watch adjusts its time setting based on information from the phone.

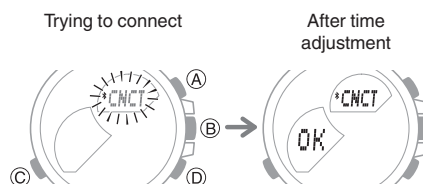

Note

- Connection with your phone is not possible while the watch's Airplane Mode is enabled. To connect with your phone, disable the Airplane Mode.
 - [Using the Watch in a Medical Facility or Aircraft](#)
- The watch remains connected with your phone even after time adjustment is complete.
- If time adjustment fails for some reason, [ERR] appears.

Using the Schedule Timer

The schedule timer can be linked with the calendar of a paired phone, so the watch can display the remaining time of the currently ongoing scheduled event and/or its ending time.

Important!

- The schedule timer becomes disabled if you manually adjust the watch's time setting. Before using the Schedule Timer, connect the watch with your phone and sync their time settings.
 - [Connecting with a Phone](#)

Note

- The schedule timer corresponds to the built-in calendar of your phone's OS and Google calendar.
- When a scheduled start time or end time is reached, the watch will beep and display an indication for one or two seconds. You can enable or disable the beep sound as required.
 - [Enabling or Disabling the Schedule Timer Notification Sound](#)
- Up to five scheduled events can be sent from your phone to the watch.

● Transferring Scheduled Event

Scheduled events can be transferred from your phone to the watch.

- While the watch is connected with your phone, scheduled events are periodically transferred to the watch automatically.

Check the connection


- Make sure that the symbol is shown on the watch display when you perform the procedure below. If is not displayed, refer to the information at the link below.
 - [Connecting with a Phone](#)

1. Tap the "CASIO WATCHES" icon.
2. Perform the operation shown on the phone screen to transfer phone scheduled events to the watch.


● Displaying an Scheduled Event

1. Enter the Timekeeping Mode.
[Navigating Between Modes](#)
2. Press (D).
 - This causes the display to change from the current time to an event.

Each press of (B) switches between the information as described below.

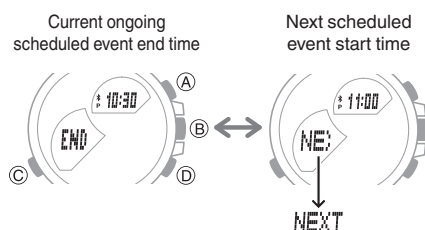

- The mode hand indicates the time remaining until the currently ongoing event is complete. The mode hand points to [OVER] when the remaining time exceeds 120 minutes. If you do not have scheduled events which will finish within 24 hours, the mode hand points to [00].

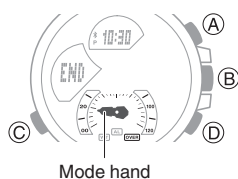

- When a scheduled start time or end time is reached, the watch will beep and display an indication for one or two seconds.
 You can enable or disable the beep sound as required.
[Enabling or Disabling the Schedule Timer Notification Sound](#)
- When the remaining time of the currently ongoing scheduled event is 10 minutes or less, the watch display shows the remaining time, and counts it down in one-second units.

Viewing Stopwatch Data

This section explains how to send lap times (up to 200 records) from watch memory to your phone, and view it on your phone for with CASIO WATCHES.

● Sending Stopwatch Data to a Phone

Use the procedure below to send data from the watch to a phone.

- While the watch is connected with your phone, lap times being recorded by the watch are periodically transferred to the phone automatically.

Check the connection

- Make sure that the symbol is shown on the watch display when you perform the procedure below. If is not displayed, refer to the information at the link below.
[Connecting with a Phone](#)

1. Tap the “CASIO WATCHES” icon.
2. Perform the operation shown on the phone screen to transfer data measured by the watch to the phone.

After data transfer is complete, a list of the measurement data will appear on the phone display.

- Tapping a stopwatch data item displays its details.

● Checking a Lap Time

Use CASIO WATCHES to check the data you sent to the phone.

1. Tap the “CASIO WATCHES” icon.
2. Perform the operation shown on the phone screen to view the measurement data you want.

Note

- Tapping “Edit” displays a screen that you can use to change the data item title and to delete lap time data.

Configuring Timer Settings

Check the connection

- Make sure that the symbol is shown on the watch display when you perform the procedure below. If is not displayed, refer to the information at the link below.
[Connecting with a Phone](#)

1. Tap the “CASIO WATCHES” icon.
2. Perform the operation shown on the phone screen to configure the timer time setting.

Setting the Alarm

Check the connection

- Make sure that the symbol is shown on the watch display when you perform the procedure below. If is not displayed, refer to the information at the link below.
[Connecting with a Phone](#)


1. Tap the “CASIO WATCHES” icon.
2. Perform the operation shown on the phone screen to configure alarm time settings.

Configuring World Time Settings

Specifying a World Time City with CASIO WATCHES causes the watch's World Time City to change accordingly. Settings can be configured to perform auto summer time switching for the World Time City.

Check the connection

- Make sure that the symbol is shown on the watch display when you perform the procedure below. If is not displayed, refer to the information at the link below.
[Connecting with a Phone](#)

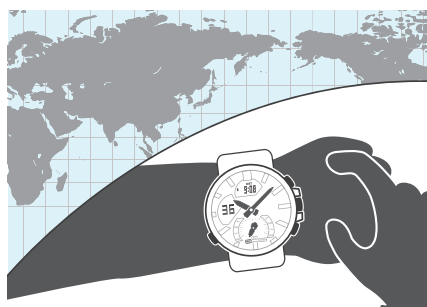

Note

- CASIO WATCHES World Time lets you select from among approximately 300 cities as the World Time City.

● Selecting a World Time City

1. Tap the "CASIO WATCHES" icon.
2. Perform the operation shown on the phone screen. The World Time setting will be reflected on the watch.

Note

- You can use CASIO WATCHES to configure settings for user cities that are not included in the watch's built-in World Time Cities. You must use CASIO WATCHES to select a user city as your World Time City.

● Configuring the Summer Time Setting

1. Tap the "CASIO WATCHES" icon.
2. Perform the operation shown on the phone screen to select a summer time setting.
 - "Auto"
The watch switches between standard time and summer time automatically.
 - "OFF"
The watch always indicates standard time.
 - "ON"
The watch always indicates summer time.

Note

- While the summer time setting is "Auto", the watch will switch between standard time and summer time automatically. You do not need to switch between standard time and summer time manually. Even if you are in an area that does not observe summer time, you can leave the watch's summer time setting as "Auto".
- For information about summer time periods, refer to the "Summer Time Table" or CASIO WATCHES.

● Swapping Your World Time and Home Time

1. Tap the "CASIO WATCHES" icon.
2. Perform the operation shown on the phone screen to swap your Home Time with your World Time.

Note

- Auto time adjustment does not work for 24 hours after swapping of the Home Time and World Time.

Adjusting Hand Alignment

If the hands are out of alignment even though the watch is connected with your phone, use CASIO WATCHES to adjust them.

Check the connection

- Make sure that the symbol is shown on the watch display when you perform the procedure below. If is not displayed, refer to the information at the link below.
[Connecting with a Phone](#)

1. Tap the "CASIO WATCHES" icon.
2. Perform the operation shown on the phone screen to correct hand alignment.


Phone Finder

You can use phone finder to trigger a tone on the phone to make it easy to find. The tone is forced to sound even if the phone is in vibrate mode.

Important!

- Phone finder will not sound the tone unless CASIO WATCHES is running on the phone.
- Do not use this function in areas where phone call tones are restricted.
- The tone sounds at a high volume. Do not use this function when listening to phone output over earphones.

1. If the watch is in any mode besides the Timekeeping Mode, hold down (C) for at least two seconds to enter the Timekeeping Mode.
2. Hold down (D) for at least five seconds. The phone will sound a tone when it establishes a connection with the watch.
 - It will take a few seconds before the phone tone sounds.

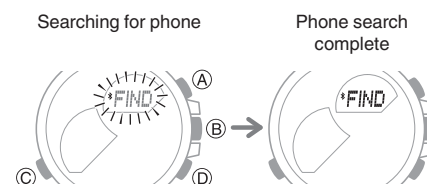

3. Press any button to stop the tone.
 - You can press any watch button to stop the phone tone only during the first 30 seconds after it starts to sound.

Note

- Connection with your phone is not possible while the watch's Airplane Mode is enabled. To connect with your phone, disable the Airplane Mode.

[Using the Watch in a Medical Facility or Aircraft](#)

Configuring Watch Settings

You can use CASIO WATCHES to specify the interval for acquiring the latest schedule from your phone, to enable or disable the watch operation tone, and to configure other settings.

Check the connection

- Make sure that the is shown on the watch display when you perform the procedure below. If is not displayed, refer to the information at the link below.

[Connecting with a Phone](#)

1. Tap the "CASIO WATCHES" icon.
2. Select the setting you want to change and then perform the operation shown on the phone screen.

Changing the Home City Summer Time Setting

Check the connection

- Make sure that the is shown on the watch display when you perform the procedure below. If is not displayed, refer to the information at the link below.

[Connecting with a Phone](#)

1. Tap the "CASIO WATCHES" icon.
2. Perform the operation shown on the phone screen to change your Home City summer time setting.

Connection

Connecting with a Phone

Your watch can connect with a phone that is paired with it.

- If the watch is not paired with the phone you want to connect with, refer to the information below and pair them.

[Pair the watch with a phone.](#)

Connecting with a Phone

If does not appear on the watch display even though it is paired with your phone, hold down (D) for at least two seconds to connect with your phone.

- Once the watch and phone are connected, the connection is maintained.



Important!

- If you have problems establishing a connection, it could mean that CASIO WATCHES is not running on your phone. On the phone's home screen, tap the "CASIO WATCHES" icon. After the app starts up, hold down the watch's (D) button for at least two seconds.

Unpairing

Unpairing the watch from a phone requires both CASIO WATCHES and watch operations.

Note


- If you are using an iPhone, also delete the pairing information stored on the phone.

Deleting Pairing Information from CASIO WATCHES

1. Tap the "CASIO WATCHES" icon.
2. Perform the operation shown on the phone screen to unpair.


Deleting Pairing Information from the Watch

1. Hold down (C) for at least two seconds to enter the Timekeeping Mode.
2. Hold down (B) for at least two seconds. Release the button when the name of the currently selected Home City appears on the display.
 - This is the setting mode. The hands automatically shift out of the way for easy viewing of the display and other indicators.

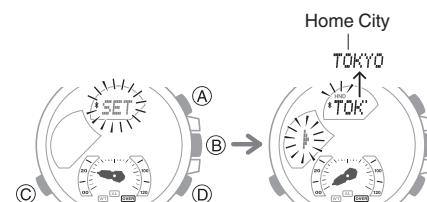

3. Press (C) three times.

This causes the seconds to flash.

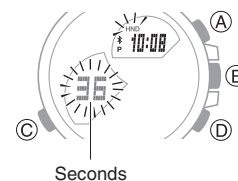

4. Hold down (A) for at least two seconds. Release when [CLR] stops flashing.

This deletes the pairing information from the watch.



5. Press (B) to return to the Timekeeping Mode.

Note

- While the setting is being configured, the watch will exit the setting operation automatically after about two or three minutes of non-operation.

● **iPhone Only**

Deleting the phone's pairing information

For details about setting procedures, see your phone documentation.

"Settings" → "Bluetooth" → Cancel the watch's device registration.

▮ **If you purchase another phone**

You need to perform the pairing operation whenever you want to establish a Bluetooth connection with a phone for the first time.

🔗 [Deleting Pairing Information from the Watch](#)

🔗 ③ [Pair the watch with a phone.](#)

Time Adjustment

Your watch can connect with a phone to obtain information that it uses to adjust its date and time setting.

Important!


- When you are on an aircraft or in any other location where radio signals area may cause problems, enable the watch's Airplane Mode to disable connection with your phone.
- 🔗 [Using the Watch in a Medical Facility or Aircraft](#)

Referring to the information below, configure the time setting in accordance with the method that suits your own lifestyle.

Do you use a phone?

Time adjustment by connecting with your phone is recommended.

- 🔗 [Getting Ready](#)
- 🔗 [Auto Time Adjustment](#)

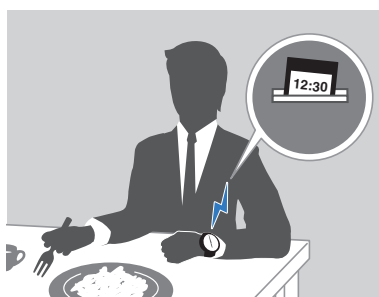

If your phone cannot connect with the watch

You can adjust time settings by performing operations on the watch.

🔗 [Using Watch Operations to Adjust the Time Setting](#)



Using Watch Operations to Adjust the Time Setting

If your watch cannot connect with a phone for some reason, you can use watch operations to adjust date and time settings.


● **Setting a Home City**

Use the procedure in this section to select a city to use as your Home City. If you are in an area that observes summer time, you can also configure a summer time setting.

Note

- The initial factory default summer time setting for all cities is [AUTO]. In many cases, the [AUTO] setting lets you use the watch without switching between summer time and standard time.
- While the setting is being configured, the watch will exit the setting operation automatically after about two or three minutes of non-operation.

1. Enter the Timekeeping Mode.
🔗 [Navigating Between Modes](#)
2. Hold down (B) for at least two seconds. Release the button when the name of the currently selected Home City appears on the display.
 - This is the setting mode. The hands automatically shift out of the way for easy viewing of the display and other indicators.

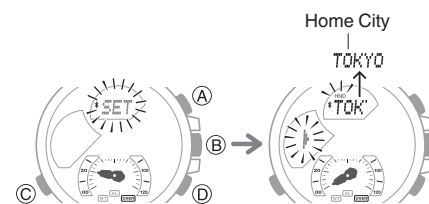

3. Use (A) and (D) to change the Home City setting.
 - Holding down (A) or (D) scrolls through settings at high speed.
 - For details refer to the information below.
🔗 [City Table](#)

4. Press (C).
5. Use (D) to select a summer time setting.
Each press of (D) cycles through available settings in the sequence shown below.


- [AUTO]
The watch switches between standard time and summer time automatically.
- [OFF]
The watch always indicates standard time.
- [ON]
The watch always indicates summer time.




6. Press (B) to complete the setting operation.

● Setting the Time/Date

1. Enter the Timekeeping Mode.
[🔍 Navigating Between Modes](#)
2. Hold down (B) for at least two seconds. Release the button when the name of the currently selected Home City appears on the display.
 - This is the setting mode. The hands automatically shift out of the way for easy viewing of the display and other indicators.

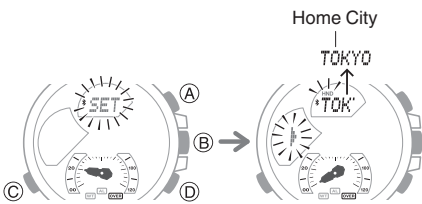

3. Keep pressing (C) until the setting you want to change is flashing.
 - Each press of (C) moves the flashing to the next setting in the sequence shown below.

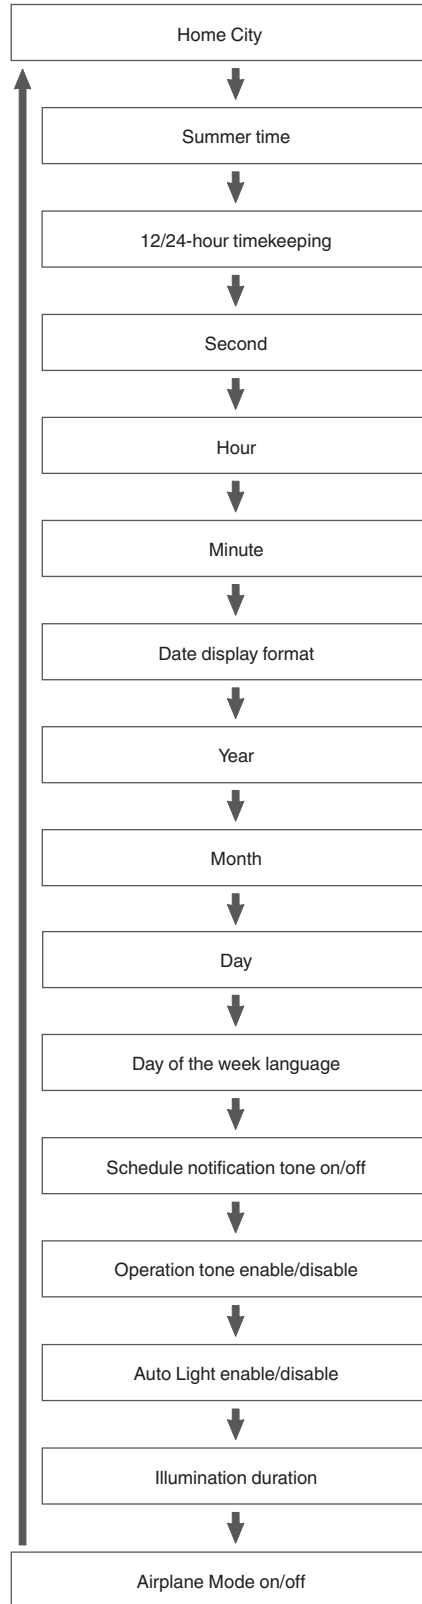

4. Configure the date and time settings.
 - To reset the seconds to 00: Press (D). 1 is added to the minutes when the current count is between 30 and 59 seconds.
 - For all the other settings, use (A) and (D) to change the flashing setting. Holding down (A) or (D) scrolls through settings at high speed.
5. Repeat steps 3 and 4 to select time and date settings.
6. Press (B) to complete the setting operation.

Note


- While the setting is being configured, the watch will exit the setting operation automatically after about two or three minutes of non-operation.

● Switching between 12-hour and 24-hour Timekeeping

You can specify either 12-hour format or 24-hour format for the time display.

1. Enter the Timekeeping Mode.
[🔗 Navigating Between Modes](#)
2. Hold down (B) for at least two seconds. Release the button when the name of the currently selected Home City appears on the display.

- This is the setting mode. The hands automatically shift out of the way for easy viewing of the display and other indicators.

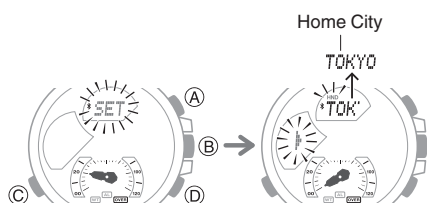


3. Press (C) twice.

This causes [12H] or [24H] to flash on the display.



4. Press (D) to toggle the setting between [12H] (12-hour timekeeping) and [24H] (24-hour timekeeping).

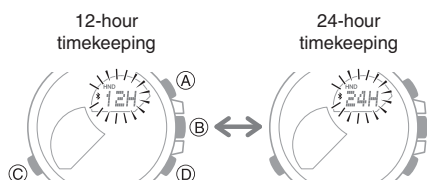

5. Press (B) to complete the setting operation.

Note


- While the setting is being configured, the watch will exit the setting operation automatically after about two or three minutes of non-operation.

Using the Watch in a Medical Facility or Aircraft

When you are in a hospital, on an aircraft, or in any other location where radio signals may cause problems, you can perform the procedure below to disconnect the watch from your phone so they can't communicate with each other (Airplane Mode). Use the same procedure when you want to disable the Airplane Mode.


1. Enter the Timekeeping Mode.
[🔗 Navigating Between Modes](#)
2. Hold down (B) for at least two seconds. Release the button when the name of the currently selected Home City appears on the display.

- This is the setting mode. The hands automatically shift out of the way for easy viewing of the display and other indicators.

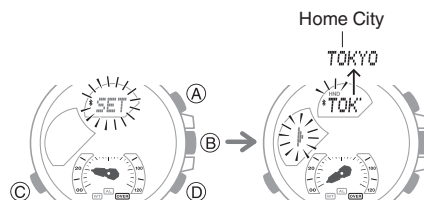

3. Press (C) 15 times.

This displays [✈️].

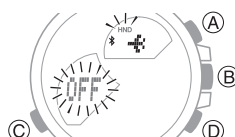

4. Press (D) to toggle between the Airplane Mode settings.

[ON]: Airplane Mode enabled.

[OFF]: Airplane Mode disabled.


5. Press (B) to complete the setting operation.

Note

- While the setting is being configured, the watch will exit the setting operation automatically after about two or three minutes of non-operation.

World Time

World Time lets you look up the current time in any one of 38 cities around the globe, and UTC (Coordinated Universal Time).

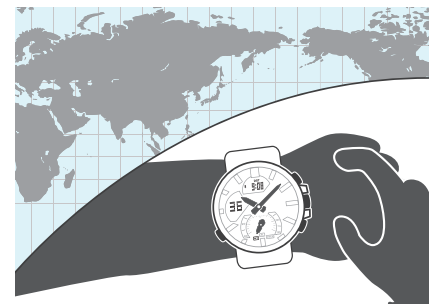

Using CASIO WATCHES to Configure World Time City Settings

If the watch is paired with a phone, you can also use CASIO WATCHES to set the World Time city.

[🔗 Configuring World Time Settings](#)

Note

- World Time cities that can be selected only by using CASIO WATCHES cannot be selected using watch operations.


Checking World Time

1. Enter the World Time Mode.

[🔗 Navigating Between Modes](#)

After the currently selected World Time City name appears, the watch will display the current time in that city.

- While in World Time Mode, you can display the World Time City by pressing (B).

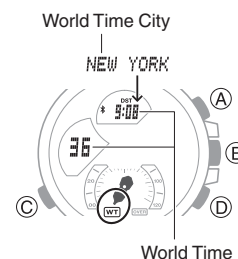

World Time City Setting

Use the procedure in this section to select a World Time city. If you are in an area that observes summer time, you can also configure a summer time setting.

Note

- The initial factory default summer time setting for all cities is [AUTO]. In many cases, the [AUTO] setting lets you use the watch without switching between summer time and standard time.

- Enter the World Time Mode.
[Navigating Between Modes](#)
- Use (D) to display the city you want.
 - Holding down (D) scrolls through settings at high speed.



- To change the summer time setting, hold down (B) for at least two seconds. Release the button when [AUTO] starts to flash.
 - This is the setting mode. The hands automatically shift out of the way for easy viewing of the display and other indicators.



- Use (D) to change the summer time setting.

Each press of (D) cycles through settings in the sequence shown below.

 - [AUTO]

The watch switches between standard time and summer time automatically.
 - [OFF]

The watch always indicates standard time.
 - [ON]


The watch always indicates summer time.
- Press (B) to complete the setting operation.

Note

- While the setting is being configured, the watch will exit the setting operation automatically after about two or three minutes of non-operation.
- While [UTC] is selected as the city, you will not be able to change or check the summer time setting.
- If you select a World Time City with CASIO WATCHES and then change to a different city with a watch operation, the CASIO WATCHES city information is deleted from the watch.
[Configuring World Time Settings](#)

Swapping Your Home Time and World Time


In the World Time mode, hold down (A) for at least two seconds to swap your Home City time with your World Time.

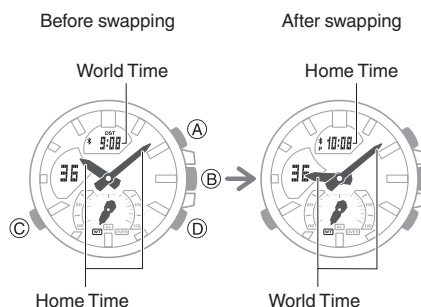

Alarm

The watch will beep when an alarm time is reached. You can set up to five different alarms. The hourly time signal causes the watch to beep every hour on the hour.

- The beeper will not sound if battery power is low.

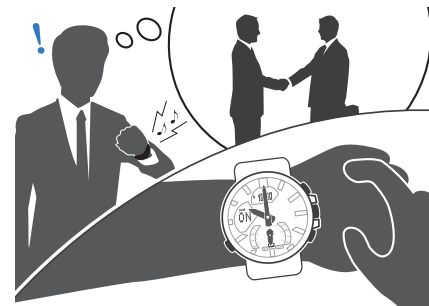


Using CASIO WATCHES to Configure Alarm Settings

If the watch is paired with a phone, you can also use CASIO WATCHES to set alarms.

- [Setting the Alarm](#)


Configuring Alarm Settings

- Enter the Alarm Mode.
[Navigating Between Modes](#)
- Press (D) to scroll through alarm numbers ([AL1] to [AL5]) until the alarm you want to configure is displayed.

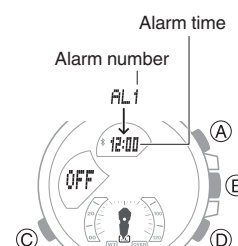

3. Hold down (B) for at least two seconds. Release the button when the hour setting starts to flash.

- This is the setting mode. The hands automatically shift out of the way for easy viewing of the display and other indicators.
- While the setting is being configured, the watch will exit the setting operation automatically after about two or three minutes of non-operation.

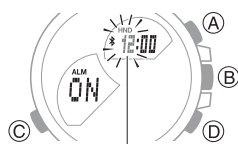

Alarm hour


4. Use (A) and (D) to change the hour setting.

- Holding down (A) or (D) scrolls through settings at high speed.
- If you are using 12-hour timekeeping, [P] indicates p.m.



5. Press (C).

This causes the minutes digits to flash.

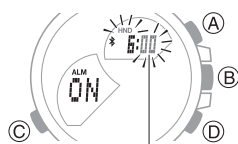

Alarm minute

6. Use (A) and (D) to set the minute setting.

7. Press (B) to complete the setting operation.

● To stop the alarm

Pressing any button while the beeper is sounding stops it.

Note


- A beeper sounds for 10 seconds when an alarm time is reached.
- The watch will automatically return from the Alarm Mode to the Timekeeping Mode if you do not perform any operation for about two or three minutes.

Enabling the Hourly Time Signal

1. Enter the Alarm Mode.


🔗 [Navigating Between Modes](#)

2. Press (D) to display the hourly time signal screen ([SIG]).

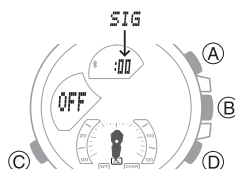

3. Press (B) to toggle the hourly time signal between enabled (on) and disabled (off).

- [SIG] is displayed while the hourly time signal is enabled.

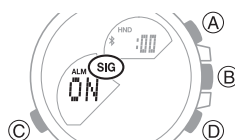


Turning Off an Alarm or the Hourly Time Signal

To stop an alarm or the hourly time signal from sounding, perform the steps below to turn it off.

- To have an alarm or hourly time signal sound again, turn it back on.

Note

- Indicators are displayed while any of the alarms or the hourly time signal is turned on.
- The applicable indicators are not displayed while all of the alarms are turned off and/or the hourly time signal is turned off.

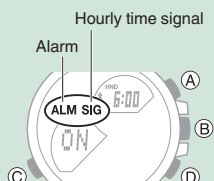


1. Enter the Alarm Mode.

🔗 [Navigating Between Modes](#)

2. Use (D) to scroll through the alarm ([AL1] to [AL5]) and hourly time signal ([SIG]) screens until the one you want to turn off is displayed.

Alarm or hourly time signal

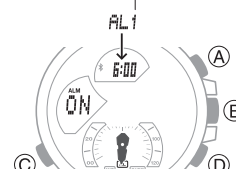

3. Press (B) to turn off the displayed alarm or the hourly time signal.

- Each press of (B) toggles between on and off.
- Turning off all of the alarms and the hourly time signal causes [ALM] and [SIG] to disappear from the display.



Note

- If [ALM] remains on the display, it means that at least one alarm is still turned on. To turn off all of the alarms, repeat steps 2 and 3 until the [ALM] indicator is no longer displayed.

Moving to Another Time Zone

When you enter another time zone, the watch will adjust its time setting to your current location in accordance with the time zone of your phone. When you reach your destination, disable the watch Airplane Mode.



1. When you reach your destination, establish a connection between the watch and your phone.

[Using the Watch in a Medical Facility or Aircraft](#)

After you disable the watch's Airplane Mode, it will adjust its time setting to the time in your current location.


- If you want to trigger immediate time adjustment, refer to the information at the link below.

[Triggering Immediate Time Adjustment](#)

Stopwatch

The stopwatch measures elapsed time in 1/1000-second units for the first hour, and in 1/10-second units after that for up to 24 hours.

In addition to normal elapsed time measurements, the stopwatch also lets you measure lap times.

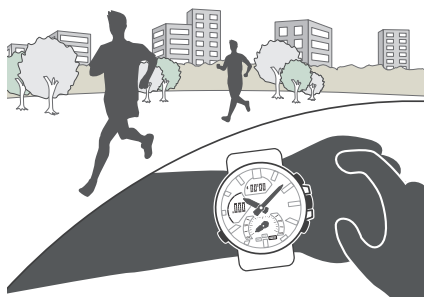


Note

- Up to 200 lap time records can be stored in watch memory. Performing a split time operation while there are already 200 records in memory will cause the oldest record to be deleted automatically to make room for the new one.
- You can use CASIO WATCHES to view past measurement data.

Lap Times

A lap time is the time elapsed during a specific lap or segment. Lap times are recorded internally by the watch. The watch displays the elapsed time of the current lap.

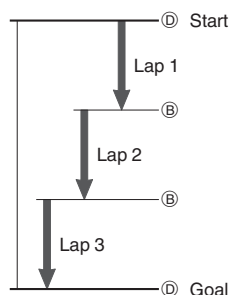

Note

- Lap times can be viewed with CASIO WATCHES after measurement is complete.


[Viewing Stopwatch Data](#)

Measuring Elapsed Time

1. Enter the Stopwatch Mode.
[Navigating Between Modes](#)
2. Use the operations below to measure elapsed time.



- Elapsed time is shown in 1/1000-second units for the first hour of the measurement session. After the first hour, elapsed time is shown in 1/10-second units.

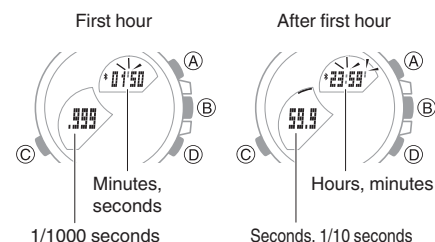

3. Press (B) to reset the stopwatch to all zeros.

Measuring Lap Times

 
1. Enter the Stopwatch Mode.

[Navigating Between Modes](#)


- If a stopwatch timing operation is in progress, press (D) to stop it and then press (B) to reset the stopwatch to all zeros before performing the operation in step 2.

2. Use the operations below to measure elapsed time.

- Each press of (B) displays, for about eight seconds, the time elapsed (lap time) since the last lap time operation.



- Elapsed time is shown in 1/1000-second units for the first hour of the measurement session. After the first hour, elapsed time is shown in 1/10-second units.
- The mode hand points to the seconds of the lap time. If more than 120 seconds have elapsed since timing was started, the mode hand points to [OVER].

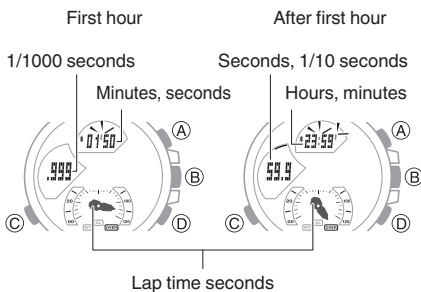


3. Press (B) to reset the stopwatch to all zeros.

Example: Recording a Race Lap Time

This section explains how to record lap times while watching a race. It also shows how you can view lap times with CASIO WATCHES after the race is over.

[Lap Times](#)

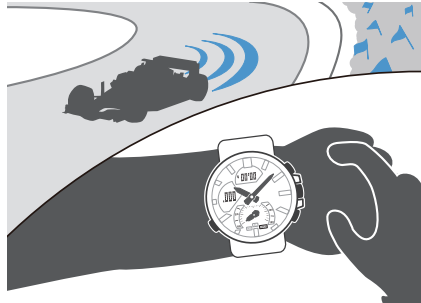


During a race

Measure lap times.

1. Enter the Stopwatch Mode.

[Navigating Between Modes](#)

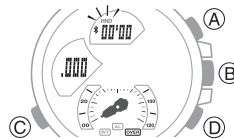

2. Use the operations below to perform a timer operation.



Pressing (B) at the end of each lap will record them in watch memory.

- Lap times are recorded in 1/1000-second units during the first hour of an elapsed time measurement session. After one hour, times are recorded in 1/10-second units.
3. Press (B) to reset the elapsed time to all zeros.
 4. Hold down (C) for at least two seconds to return to the Timekeeping Mode.

After a race


You can view the measured lap times with CASIO WATCHES.

- [Sending Stopwatch Data to a Phone](#)
- [Checking a Lap Time](#)

Timer

The timer counts down from a start time specified by you. A beeper sounds when the end of the countdown is reached.

- The beeper will not sound if battery power is low.

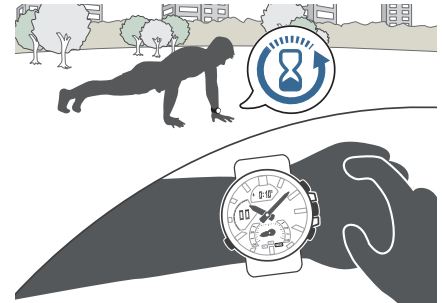

Using CASIO WATCHES to Configure Timer Settings

If the watch is paired with a phone, you can also use CASIO WATCHES to set the timer start time.

[Configuring Timer Settings](#)

Setting the Countdown Start Time

The countdown start time can be set in 1-second units up to 24 hours.

- If a timer countdown operation is in progress, reset the timer to its current start time before performing this operation.


[Using the Timer](#)

1. Enter the Timer Mode.

[Navigating Between Modes](#)

2. Hold down (B) for at least two seconds. Release the button when the hour setting starts to flash.

- This is the setting mode. The hands automatically shift out of the way for easy viewing of the display and other indicators.

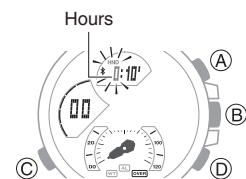


3. Use (A) and (D) to change the timer hours setting.

- Holding down (A) or (D) scrolls through settings at high speed.

4. Press (C).


This causes the minutes digits to flash.

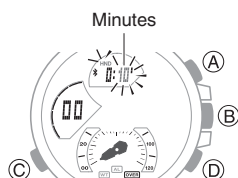

5. Use (A) and (D) to change the timer minutes setting.

6. Press (C).

This causes the seconds to flash.

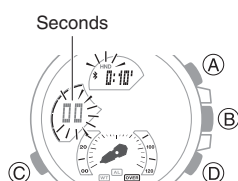

7. Use (A) and (D) to change the timer seconds setting.

8. Press (B) to complete the setting operation.


Note

- Setting a start time of [0:00'00] performs a countdown of 24 hours.
- While the setting is being configured, the watch will exit the setting operation automatically after about two or three minutes of non-operation.

Using the Timer


1. Enter the Timer Mode.

[Navigating Between Modes](#)

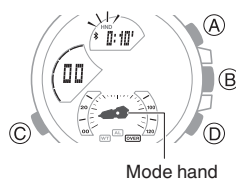

- The mode hand points the remaining timer time. The mode hand points to [OVER] when the remaining time exceeds 120 minutes.

2. Use the operations below to perform a timer operation.

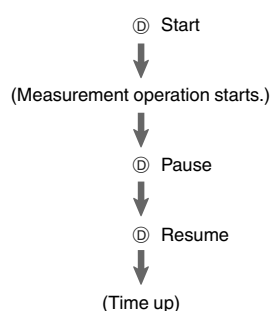

- A beeper will sound for 10 seconds to let you know when the end of a countdown is reached.
- You can reset a paused countdown to its start time, by pressing (B).

3. Press any button to stop the tone.

Hand Alignment Adjustment

Strong magnetism or impact can cause the time indicated by the analog hands to become different from the time on the digital display. If this happens, adjust hand alignment.

Using CASIO WATCHES to Adjust Hand Alignment

If the watch is paired with a phone, you can also use CASIO WATCHES to adjust hand alignment.

[Adjusting Hand Alignment](#)

Adjusting Hand Alignment

1. Enter the Timekeeping Mode.


[Navigating Between Modes](#)

2. Hold down (B) for at least five seconds. Release the button when [00] starts to flash.

This enables adjustment of mode hand alignment.

After 3.5 seconds

After five seconds

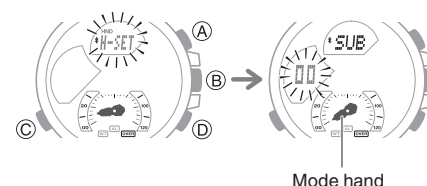


3. If the mode hand is not aligned with [00], use (A) and (D) to align it with [00].

- Holding down (A) or (D) moves the hand at high speed.

- Press (C).

This enables adjustment of the hour and minute hands.

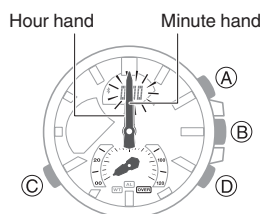

- If the hour and minute hands are not at 12 o'clock, use (A) and (D) to align them.

Note

- The hour hand moves in accordance with minute hand movement. Your button operations control movement of the minute hand only.

- Press (B) to complete the setting operation.

Note


- During hand alignment adjustment, the watch automatically returns to the Timekeeping Mode after two or three minutes of non-operation.

Other Settings

This section explains other watch settings you can configure.

Changing the Date Display Format

- Enter the Timekeeping Mode.
[Navigating Between Modes](#)
- Hold down (B) for at least two seconds. Release the button when the name of the currently selected Home City appears on the display.
 - This is the setting mode. The hands automatically shift out of the way for easy viewing of the display and other indicators.

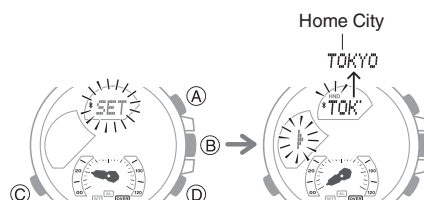

- Press (C) six times. This displays a screen for selecting the date display format.



- Press (D) to select a date display format.
[M.DD]: Month, day
[DD.M]: Day, month
- Press (B) to complete the setting operation.


Note

- While the setting is being configured, the watch will exit the setting operation automatically after about two or three minutes of non-operation.

Specifying the Day of the Week Language

You can select any one of six languages for the day of the week display in the Timekeeping Mode.

- Enter the Timekeeping Mode.
[Navigating Between Modes](#)
- Hold down (B) for at least two seconds. Release the button when the name of the currently selected Home City appears on the display.
 - This is the setting mode. The hands automatically shift out of the way for easy viewing of the display and other indicators.

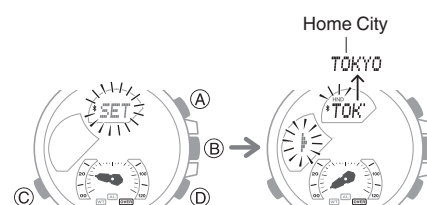

- Press (C) 10 times. This causes the language setting to flash.



- Use (D) to select a language.
[ENG]: English
[ESP]: Spanish
[FRA]: French
[DEU]: German
[ITA]: Italian
[PyC]: Russian
- Press (B) to complete the setting operation.


Note

- While the setting is being configured, the watch will exit the setting operation automatically after about two or three minutes of non-operation.


Enabling or Disabling the Schedule Timer Notification Sound

Use the procedure below to enable or disable the schedule timer notification sound.


1. Enter the Timekeeping Mode.
[🔍 Navigating Between Modes](#)
2. Hold down (B) for at least two seconds. Release the button when the name of the currently selected Home City appears on the display.
 - This is the setting mode. The hands automatically shift out of the way for easy viewing of the display and other indicators.

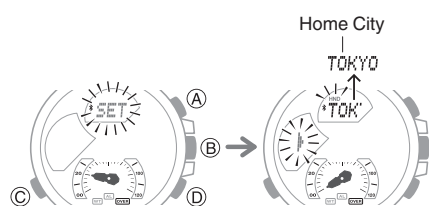

3. Press (C) 11 times.
 This causes [BEEP] or [OFF] to flash on the display.

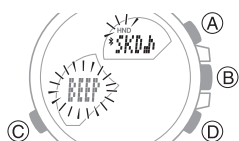

4. Use (D) to select [BEEP] or [OFF].
 [BEEP]: Beep enabled.
 [OFF]: Beep disabled.

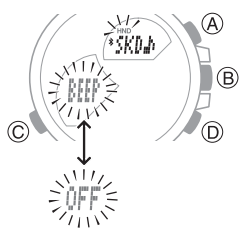

5. Press (B) to complete the setting operation.


Note

- While the setting is being configured, the watch will exit the setting operation automatically after about two or three minutes of non-operation.

Enabling the Button Operation Tone

Use the procedure below to enable or disable the tone that sounds when you press a button.


1. Enter the Timekeeping Mode.
[🔍 Navigating Between Modes](#)
2. Hold down (B) for at least two seconds. Release the button when the name of the currently selected Home City appears on the display.
 - This is the setting mode. The hands automatically shift out of the way for easy viewing of the display and other indicators.

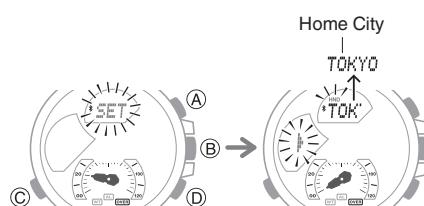

3. Press (C) 12 times.
 This causes [KEY] or [MUTE] to flash on the display.



4. Press (D) to select [KEY] or [MUTE].
 [KEY]: Operation tone enabled.
 [MUTE]: Operation tone muted.

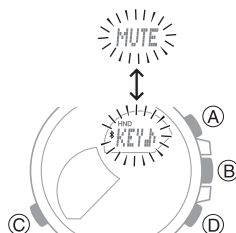

5. Press (B) to complete the setting operation.

Note


- While the setting is being configured, the watch will exit the setting operation automatically after about two or three minutes of non-operation.
- Note that alarm and timer tones will still sound even while the operation tone is muted.

Resetting Watch Settings


This section explains how to return the watch settings below to their initial factory defaults.

- Watch Settings
- Stopwatch
- Timer
- Alarm

1. Enter the Timekeeping Mode.
[🔍 Navigating Between Modes](#)
2. Hold down (B) for at least two seconds. Release the button when the name of the currently selected Home City appears on the display.
 - This is the setting mode. The hands automatically shift out of the way for easy viewing of the display and other indicators.

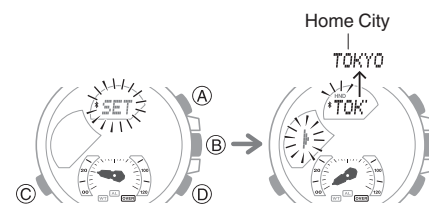

3. Press (C) three times.
 This causes the seconds to flash.

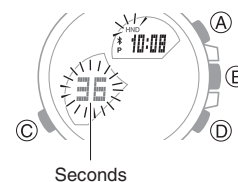

4. Hold down (A) for at least five seconds. Release the button when [RESET] stops flashing.



5. Press (B) to complete the setting operation.

Note

- While the setting is being configured, the watch will exit the setting operation automatically after about two or three minutes of non-operation.
- Resetting the watch will also delete information for pairing the watch with a phone, and unpair them.

Other Information

This section provides non-operational information you also need to know. Refer to this information as required.

City Table

City	City	Offset
UTC	Coordinated Universal Time	0
LONDON	London	0
PARIS	Paris	+1
ATHENS	Athens	+2
JEDDAH	Jeddah	+3
TEHRAN	Tehran	+3.5
DUBAI	Dubai	+4
KABUL	Kabul	+4.5
KARACHI	Karachi	+5
DELHI	Delhi	+5.5
KATHMANDU	Kathmandu	+5.75
DHAKA	Dhaka	+6
YANGON	Yangon	+6.5
BANGKOK	Bangkok	+7
HONG KONG	Hong Kong	+8
EUCLA	Eucla	+8.75
TOKYO	Tokyo	+9
ADELAIDE	Adelaide	+9.5
SYDNEY	Sydney	+10
LORD HOWE ISLAND	Lord Howe Island	+10.5
NOUMEA	Noumea	+11
WELLINGTON	Wellington	+12
CHATHAM ISLAND	Chatham Islands	+12.75
NUKU'ALOFA	Nuku'alofa	+13
KIRITIMATI	Kiritimati	+14
BAKER ISLAND	Baker Island	-12
PAGO PAGO	Pago Pago	-11
HONOLULU	Honolulu	-10
MARQUESAS ISLANDS	Marquesas Islands	-9.5
ANCHORAGE	Anchorage	-9
LOS ANGELES	Los Angeles	-8
DENVER	Denver	-7
CHICAGO	Chicago	-6
NEW YORK	New York	-5
HALIFAX	Halifax	-4
ST. JOHN'S	St. John's	-3.5
RIO DE JANEIRO	Rio de Janeiro	-3
F. DE NORONHA	Fernando de Noronha	-2
PRAIA	Praia	-1

- The information in the above table is current as of July 2021.
- Time zones may change and UTC differentials may become different from those shown in the table above. If this happens, connect the watch with a phone to update the watch with the latest time zone information.

Summer Time Table

When [AUTO] is selected for a city that observes summer time, switching between standard time and summer time will be performed automatically at the timing shown in the table below.

Note

- Summer time start and end dates for your current location may be different from those shown below. If this happens, you can have new summer time information for your Home City and World Time city sent to the watch by connecting the watch with a phone. If the watch is not connected with a phone, you can change the summer time setting manually.

City Name	Summer Time Start	Summer Time End
London	01:00, last Sunday in March	02:00, last Sunday in October
Paris	02:00, last Sunday in March	03:00, last Sunday in October
Athens	03:00, last Sunday in March	04:00, last Sunday in October
Tehran	00:00, March 22 or 21	00:00, September 22 or 21
Sydney, Adelaide	02:00, first Sunday in October	03:00, first Sunday in April
Lord Howe Island	02:00, first Sunday in October	02:00, first Sunday in April
Wellington	02:00, last Sunday in September	03:00, first Sunday in April
Chatham Islands	02:45, last Sunday in September	03:45, first Sunday in April
Anchorage	02:00, second Sunday in March	02:00, first Sunday in November
Los Angeles	02:00, second Sunday in March	02:00, first Sunday in November
Denver	02:00, second Sunday in March	02:00, first Sunday in November
Chicago	02:00, second Sunday in March	02:00, first Sunday in November
New York	02:00, second Sunday in March	02:00, first Sunday in November
Halifax	02:00, second Sunday in March	02:00, first Sunday in November
St. John's	02:00, second Sunday in March	02:00, first Sunday in November
Rio de Janeiro*	Midnight, first Sunday in November	00:00, third Sunday in February or 00:00, fourth Sunday in February

* Though summer time was discontinued in Rio de Janeiro as of July 2021, this watch does not reflect this change.

- The information in the above table is current as of July 2021.

Supported Phones

For information about phones that can connect with the watch, visit the CASIO website.

https://world.casio.com/os_mobile/wat/

Specifications

Accuracy at normal temperature :

±15 seconds per month average when time adjustment by communication with a phone is not possible.

Timekeeping :

Analog

Hour, minute (moves every 20 seconds)

Digital

Hour, minute, second, month, day, day of the week

a.m./p.m.(P)/24-hour timekeeping

Full Auto Calendar (2000 to 2099)

Summer Time

Stopwatch :

Measurement unit:

1/1000 seconds (first hour)

1/10 seconds (after first hour)

Measurement range: 23 hours 59 minutes

59.9 seconds

Measurement Functions:

Elapsed time, lap times

Timer :

Measuring unit: 1 second

Range: 24 hours

Time setting unit: 1 second

10-second beeper when the end of the countdown is reached

Alarm :

Time alarms

Number of alarms

5

Setting units

Hours, minutes

Alarm tone duration: 10 seconds

Hourly time signal: Beep every hour on the hour

World Time :

38 cities (38 time zones) and Coordinated

Universal Time (UTC)

Summer time

Home Time swapping

Mobile Link :

Auto Time Correction

Phone finder

Watch operation sounds the alert sound of the mobile phone.

World Time

Current time for approximately 300 cities selected for the watch

Home Time/World Time swapping

Stopwatch data transfer

200 lap time records (date and time, lap time, lap number)

Auto Summer Time Switching

Automatic switching between standard time and summer time.

Timer Settings

Alarm Settings

Hand alignment correction

Schedule timer

Links with your phone's calendar, and uses the watch's hands and digital display to show time remaining to an event, ending time, etc.

Data Communication Specifications

Bluetooth®

Frequency Band: 2400MHz to 2480MHz

Maximum Transmission: 0 dBm (1 mW)

Communication range: Up to 2 meters (depends on environment)

Double LED light :

Face LED light and LCD LED backlight (Auto Light, Super Illuminator, afterglow, selectable afterglow duration: 1.5 seconds or 3 seconds)

Other :

Operation tone on/off, schedule notification tone on/off, month/day order, day of the week language, airplane mode, hand shift, low battery indicator

Power Supply :

CR2016 x 1

Battery life: Approximately 2 years

Conditions:

Bluetooth Connection Time: 12 hours/day

Alarm: Once (10 seconds)/day

Illumination: Once (1.5 seconds)/day

Specifications are subject to change without notice.

Copyrights and Registered Copyrights

- The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by CASIO Computer Co., Ltd. is under license.
- iPhone and App Store are trademarks of Apple Inc. in the United States and other countries.
- iOS is a trademark or registered trademark of Cisco Systems, Inc.
- GALAXY is a registered trademark of Samsung Electronics Co., Ltd.
- Android and Google Play™ are trademarks or registered trademarks of Google LLC.
- Other company names and product names used herein are trademarks or registered trademarks of their respective companies.

Troubleshooting

I can't pair the watch with a phone.

Q1 I've never been able to establish a (pairing) connection between the watch and phone.

Are you using a supported phone model?

Check if the phone model and its operating system are supported by the watch.
For information about supported phone models, visit the CASIO Website.

https://world.casio.com/os_mobile/wat/

Did you install CASIO WATCHES on your phone?

CASIO WATCHES needs to be installed on your phone in order to connect with the watch.

🔗 ① [Install the app on your phone.](#)

Are your phone's Bluetooth settings configured correctly?

Configure the phone's Bluetooth settings. For details about setting procedures, see your phone documentation.

iPhone Users

- "Settings" → "Bluetooth" → On
- "Settings" → "Privacy" → "Bluetooth" → "CASIO WATCHES" → On

Android Users

- Enable Bluetooth.

Other than the above.

Some phones need to have BT Smart disabled to use CASIO WATCHES. For details about setting procedures, see your phone documentation.


On the Home Screen, tap: "Menu" → "Settings" → "Bluetooth" → "Menu" → "BT Smart settings" → "Disable".

I can't reconnect the watch and phone.

Q1 The watch will not re-connect with the phone after they are disconnected.

Is CASIO WATCHES running?

The watch cannot re-connect with your phone unless CASIO WATCHES is running on the phone. On your phone's Home Screen, tap the "CASIO WATCHES" icon. Next, on the watch, hold down (D) for at least two seconds.

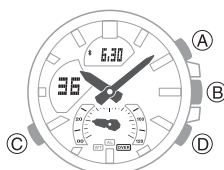

Have you tried turning your phone off and then back on again?

Turn your phone off and back on, and then tap the "CASIO WATCHES" icon. Next, on the watch, hold down (D) for at least two seconds.



Q2 I can't connect while my phone is in the Airplane Mode.

Connection with the watch is not possible while your phone is in the Airplane Mode. After disabling the phone's Airplane Mode, go to the phone's Home Screen and tap the "CASIO WATCHES" icon. Next, on the watch, hold down (D) for at least two seconds.



Q3 I changed the phone's Bluetooth from enabled to disabled, and now I can't connect anymore.

On your phone, enable Bluetooth, and then go to the Home Screen and tap the "CASIO WATCHES" icon. Next, on the watch, hold down (D) for at least two seconds.



Q4 I can't connect after turning off the phone.

Turn your phone off and back on, and then tap the "CASIO WATCHES" icon. Next, on the watch, hold down (D) for at least two seconds.



Q5 ✖ Is not displayed, and the watch is not connected with my phone.

Is a setting operation in progress?

Bluetooth connection is temporarily disabled while any setting operation (time setting, alarm setting, etc.) is in progress. Exit the setting operation to re-connect.

Have you performed some watch operation within the past hour?


To preserve battery power, the watch will automatically terminate Bluetooth connection with your phone temporarily if it detects the connection has been unused for approximately one hour. Auto Time Adjustment is disabled while there is no connection. To reconnect, press any watch button or angle the watch towards your face.

Phone-Watch Connection

Q1 I can't establish a connection between the phone and watch.

Have you tried turning your phone off and then back on again?

Turn your phone off and back on, and then tap the "CASIO WATCHES" icon. Next, on the watch, hold down (D) for at least two seconds.

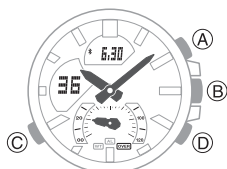

Is the watch's Airplane Mode enabled?

Connection with your phone is not possible while the watch's Airplane Mode is enabled. To connect with your phone, disable the Airplane Mode.

🔗 [Using the Watch in a Medical Facility or Aircraft](#)

Has the watch been re-paired with the phone?

Delete the pairing information from CASIO WATCHES and your phone (iPhone only), and then re-pair them.

🔗 [Deleting Pairing Information from CASIO WATCHES](#)

🔗 [iPhone Only](#)

[Deleting the phone's pairing information](#)

🔗 ③ [Pair the watch with a phone.](#)

If you are unable to establish a connection...

After deleting pairing information from the watch, re-pair it with your phone.

🔗 [Deleting Pairing Information from the Watch](#)

🔗 ③ [Pair the watch with a phone.](#)

Changing to a Different Phone Model

Q1 Connecting the current watch to another phone.

Delete the pairing information from your watch and then pair it with the phone you want to connect with.

🔗 [If you purchase another phone](#)

Auto Time Adjustment by Bluetooth Connection (Time Adjustment)

Q1 When does the watch adjust its time?

Your watch can connect with a paired phone to adjust its time setting. Auto time adjustment is performed at the times described below.

- After your phone's time zone or summer time setting is changed
- After 24 hours or more have passed since the last time adjustment using Bluetooth connection
- After 24 hours or more have passed since city swapping using CASIO WATCHES or watch operation
- After 24 hours or more have passed since the last home city change or time adjustment using watch operation

Q2 Auto time setting is not correct.

Is ✂ displayed?

To preserve battery power, the watch will automatically terminate Bluetooth connection with your phone temporarily if it detects the connection has been unused for approximately one hour. Auto Time Adjustment is disabled while there is no connection. To reconnect, press any watch button or angle the watch towards your face.

Have 24 hours or more passed since the last time adjustment using Bluetooth connection?

Time adjustment using Bluetooth connection is performed once every 24 hours. Auto time adjustment will be performed when 24 hours or more have elapsed since the last time adjustment operation.

Have 24 hours or more has passed since the last manual time adjustment, city change, or city swapping operation?

Auto time adjustment is not performed for 24 hours after a manual time adjustment, city change, or city swapping operation. Auto time adjustment will resume after 24 hours or more have elapsed after either of the above operations is performed.

Is the watch's Airplane Mode enabled?

Connection with your phone is not possible while the watch's Airplane Mode is enabled. To connect with your phone, disable the Airplane Mode.

🔗 [Using the Watch in a Medical Facility or Aircraft](#)

Q3 The watch does not synchronize its time setting with my phone when I hold down (D) for at least two seconds.

Connection with your phone is not possible while the watch's Airplane Mode is enabled. To connect with your phone, disable the Airplane Mode.

🔗 [Using the Watch in a Medical Facility or Aircraft](#)

Q4 Time is not displayed correctly.

The phone's time setting may be incorrect because it is unable to connect with its network due to being out of range, etc. If this happens, connect the phone to its network and then adjust the time setting.

Schedule timer

Q1 How do I disable the schedule timer notification sound?

Use the procedure below to disable the schedule timer notification sound.

[Enabling or Disabling the Schedule Timer Notification Sound](#)

Q2 The schedule timer notification sound does not sound.

Is schedule timer notification sound turned on? If it isn't, turn it on so it will sound.

[Enabling or Disabling the Schedule Timer Notification Sound](#)

Q3 The schedule timer function does not work.

The schedule timer becomes disabled if you manually adjust the watch's time setting. Before using the Schedule Timer, connect the watch with your phone and sync their time settings.

[Connecting with a Phone](#)

Q4 [--:-- END] remains on the display and I cannot use the schedule timer even though settings are configured to allow use of the schedule timer.



Have you adjusted time settings manually?

The schedule timer becomes disabled if you manually adjust the watch's time setting. Before using the Schedule Timer, connect the watch with your phone and sync their time settings.

[Connecting with a Phone](#)

Is the scheduled event within 24 hours from your current time?

Up to five scheduled events, scheduled within 24 hours from your current time are sent from your phone to the watch.

Alarm and Hourly Time Signal

Q1 An alarm does not sound.

The alarm's settings may not be configured. Configure the alarm settings.

[Configuring Alarm Settings](#)

Q2 The hourly time signal does not sound.

The hourly time signal may be disabled. Enable the hourly time signal.

[Enabling the Hourly Time Signal](#)

Battery

Q1 is flashing on the digital display.

flashes on the display when battery voltage goes low.

Have the battery replaced.

Request battery replacement from a CASIO service center or your original retailer.

[Battery Replacement](#)

Q2 [R] is flashing on the digital display.

[R] may appear on the display when the watch's battery power is low, or if you use the light or other function a number of times during a short period, which momentarily causes the battery level to go low. If this happens, all watch functions, except for timekeeping, are disabled.

If [R] remains on the display or if it keeps appearing, it may indicate that the battery needs to be replaced.


Request battery replacement from a CASIO service center or your original retailer.

Hand Movement and Indications

Q1 I don't know what mode the watch is in.

To return to the Timekeeping Mode, hold down (C) for at least two seconds.

[Navigating Between Modes](#)

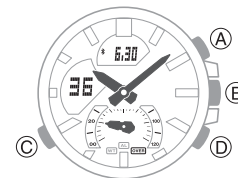

Q2 All hands are stopped and buttons do not work.

The battery is dead. Request battery replacement from a CASIO service center or your original retailer.

[Battery Replacement](#)

Q3 The hands suddenly start moving at high speed.

This is due to the reason (or one of the reasons) below, and does not indicate malfunction. Simply wait until normal hand movement resumes.

- Watch is connected with a phone to adjust its time setting.

[Auto Time Adjustment](#)

Q4 Why is the current time indicated by the watch is off by a certain amount of time (nine hours, three hours and 15 minutes, etc.)?

The city setting is not correct. Select the correct setting.

[Setting a Home City](#)

Q5 The current time indicated by the watch is off by one hour or 30 minutes.

The summer time setting is not correct. Select the correct setting.

🔗 [Setting a Home City](#)

Q6 The time indicated by the hands is different from the digital time.

Strong magnetism or impact can cause the hands to go out of alignment. Adjust hand alignment.

🔗 [Adjusting Hand Alignment](#)

- Check the information below to find out how to align the hands manually.

🔗 [Adjusting Hand Alignment](#)

Other

Q1 I can't find the information I need here.

Visit the website below.

<https://world.casio.com/support/>