

ES

M

# CASIO

## Module No. 240


User's Guide/Warranty Certificate ..... 1/18  
 Guia del propietario ..... 19  
 CASIO U.K. WARRANTY ..... 34  
 CASIO U.S.A. WARRANTY ..... 36

U

Dear Customer,  
 Congratulations on your purchase of this Casio Digital Quartz Watch. Although highly sophisticated, this watch is delightfully simple to use, and by referring to this guide you will enjoy all the features of this reliable ultra-precise timepiece.


*Notice: As this watch contains precise electronic components, it is suggested that the back cover be removed only by authorized personnel.*

### Reading the display

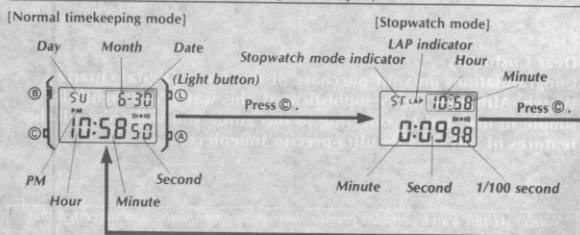

(Changeover between 12-hour and 24-hour formats) In normal timekeeping mode, with every push of (A), the display is switched between 12-hour and 24-hour formats.


2

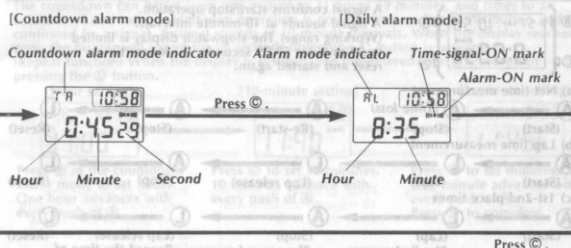

SU: Sunday MO: Monday TU: Tuesday WE: Wednesday TH: Thursday FR: Friday SA: Saturday


3

### Stopwatch operation

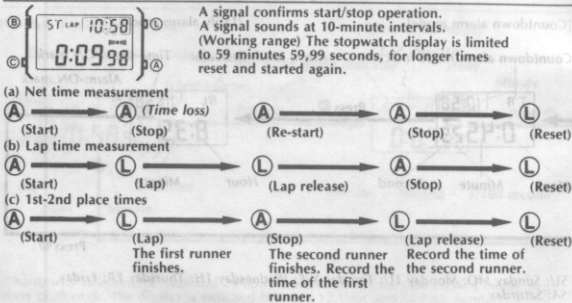


4

### Countdown alarm operation

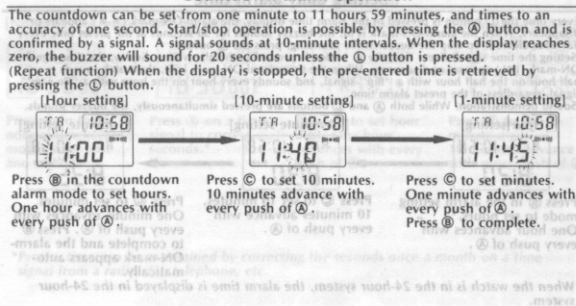


5

### Setting daily alarm time

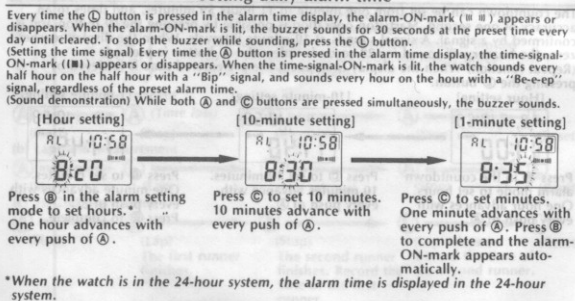


6

### Setting time and calendar

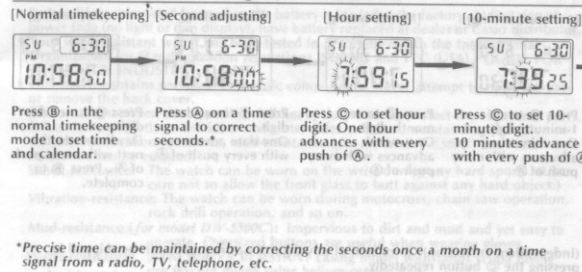

7

**IMPORTANT: Setting sequence MUST BE FOLLOWED when making any new setting.**

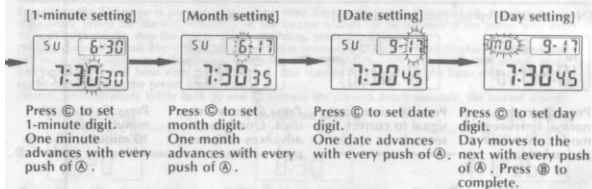

(Independent correction) Correction of any digit, if not required, can be skipped by pressing the (A) button repeatedly. (Reversion to normal timekeeping mode) The watch reverts to the normal timekeeping mode if the (A) button is pressed, regardless of the digit setting mode.

8

### Care of your watch

- Battery life is calculated from when the battery is loaded at the factory. At first sign of power fade (no light or dim display), have battery replaced at dealer or Casio distributor.
- Your water resistant watch has been tested in accordance with the International Organization for Standardization regulations ISO2281 and FTC (USA) "GUIDE FOR THE WATCH INDUSTRY", Guide 5.
- This watch contains precision electronic components. Never attempt to open the case or remove the back cover.
- This watch has been developed for full heavy duty use. To protect the electronic parts, it has dampers both on the inner and outer sides and thus, outstanding shock-resistance, vibration-resistance, mud-resistance (for model DW-5500C) and water-resistance can be ensured. Shock-resistance: The watch can be worn on the wrist during any hard sports. (Use care not to allow the front glass to butt against any hard object.) Vibration-resistance: The watch can be worn during motorcross, chain saw operation, rock drill operation, and so on. Mud-resistance (for model DW-5500C): Impervious to dirt and mud and yet easy to operate. Oversized buttons are useful when wearing gloves. Water-resistance: 200M WATER RESISTANT casing model withstands scuba diving use (except diving using helium-oxygen gas). Should the watch be exposed to sea water, wash it well with fresh water and wipe dry.

9

- A waterproof rubber seal is used to guard against water and dust. As rubber deteriorates with time, the seal should be replaced periodically (every 2–3 years).
- Should water or condensation appear in the watch, immediately have the watch checked. Water can corrode electronic parts inside the case.
- Avoid exposing the watch to temperature extremes.
- Although the watch is designed to withstand impact under normal use, it is inadvisable to subject it to severe impact, rough usage or drops onto hard surfaces.
- Avoid fastening the band too tightly. You should be able to insert your finger inside the band.
- Clean the watch and bracelet with a soft cloth, dry or moistened with mild soap.
- Never use volatile chemicals (such as benzene, thinners, spray cleaners, etc.).
- Gold plated surfaces can be kept in good condition by regular wiping with a soft damp cloth. Discoloration can be removed with detergent.
- *Always store your watch in a dry place.*
- Avoid exposing the watch to strong chemicals such as gasoline, cleaning solvent, aerosol spray, adhesive agent, paints, etc. The chemical action caused by such liquids will destroy the seals, case and finish.

### Specifications

Accuracy at normal temperature:  $\pm 15$  seconds a month

Display capacity:

- Normal timekeeping mode
  - Hours, minutes, seconds, am/pm, month, date and day
  - Time system: Changeover between 12-hour and 24-hour formats
  - Calendar system: Auto-calendar set at 28 days for February
- Stopwatch mode
  - Measuring capacity: 59 minutes 59.99 seconds
  - Measuring unit: 1/100th of a second
- Measuring modes: Normal time, net time, lap time and 1st-2nd place times
- Countdown alarm mode
  - Input range: From 1 minute to 11 hours 59 minutes
  - Measuring unit: Second
  - Measuring modes: Normal time and net time
  - Repeat function: The pre-entered time is retained for re-use.
- Daily alarm mode
  - Hours, minutes, am/pm
- Half-hourly/hourly time signal function

Battery: One lithium battery (Type: CR-2320)  
 Approx. 7 years operation on type CR-2320 (under following conditions: light—1 second/day, alarm—20 seconds/day)

NOTE: THERE IS NO WAY unit components can be damaged or malfunction, due to misoperation of buttons. If confusing information appears on the display it means entry sequence was incorrect. Please read the manual and try again.

- Display capacity
- Accuracy
- Time system: Changeover between 12-hour and 24-hour formats
- Calendar system: Auto-calendar set at 28 days for February
- Stopwatch mode
  - Measuring capacity: 59 minutes 59.99 seconds
  - Measuring unit: 1/100th of a second
- Measuring modes: Normal time, net time, lap time and 1st-2nd place times
- Countdown alarm mode
  - Input range: From 1 minute to 11 hours 59 minutes
  - Measuring unit: Second
  - Measuring modes: Normal time and net time
  - Repeat function: The pre-entered time is retained for re-use.
- Daily alarm mode
  - Hours, minutes, am/pm
- Half-hourly/hourly time signal function

### Warranty Certificate

THIS WARRANTY CERTIFICATE IS VALID ONLY FOR SERVICE IN THE COUNTRY OF PURCHASE.




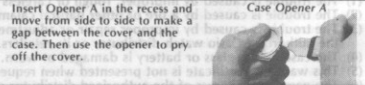

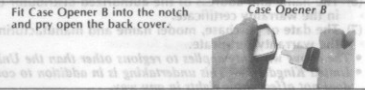
Should this watch malfunction under normal use, it will be repaired without charge for a period of one year from the date of purchase. If the watch requires service within the warranty period, request repair or adjustment at the store where purchased or the authorized Casio watch distributor, presenting the watch together with this warranty certificate. The customer shall not have any claim under this warranty for repair or adjustment expenses if:

- (1) The trouble is caused by improper, rough or careless treatment.
  - (2) The trouble is caused by a fire or other natural calamity.
  - (3) The trouble is caused by improper repair or adjustment made by anyone other than the authorized Casio watch distributor or its retailers.
  - (4) The case, band, glass or battery is damaged or worn.
  - (5) This warranty certificate is not presented when requesting service.
  - (6) The name and address of the authorized distributor or the retailer are not stamped in the warranty certificate.
  - (7) The date of purchase, model name and manufacturing number are not entered in the warranty certificate.
- The above warranty applies to regions other than the United States of America.
  - United Kingdom — This undertaking is in addition to consumers statutory rights and does not affect those rights in any way.

### [How to replace the battery]





CAUTION: Battery replacement should not be attempted without use of the correct tools.

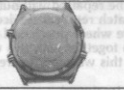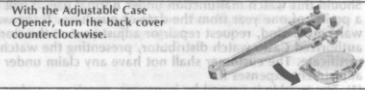1. Check the type of back cover
2. Removing the back cover Place the watch on soft material, like buckskin, and hold it firmly.

|  |   |
|--|---|
| <p><b>Screw-in type</b></p>      | <p>With the Adjustable Case Opener, turn the back cover counterclockwise.</p>   |
| <p><b>Snap-on type (A)</b></p>  | <p>Insert Opener A in the recess and move from side to side to make a gap between the cover and the case. Then use the opener to pry off the cover.</p>  |
| <p><b>Snap-on type (B)</b></p>  | <p>Fit Case Opener B into the notch and pry open the back cover.</p>   |

BATTERY LIFE: Battery life is calculated from when the battery is loaded at the factory. At first sign of power fade (no light or dim display), have battery replaced at dealer or Casio distributor.

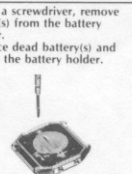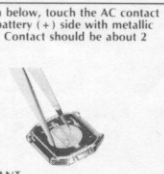3. Replacing the battery
4. AC (ALL CLEAR)
5. Fitting the back cover

|   |  |   |
|---|--|---|
| <p>Using a screwdriver, remove screw(s) from the battery holder. Replace dead battery(s) and attach the battery holder.</p>  | <p>As shown below, touch the AC contact and the battery (+) side with metallic tweezers. Contact should be about 2 seconds.</p>    | <p>Using the Adjustable Case Opener, tighten the back cover.</p>  |
| <p>CAUTION</p> <ul style="list-style-type: none"> <li>• Avoid touching the contact (—) of the battery.</li> <li>• Never hold the contacts with metallic tweezers.</li> </ul>                                    | <p>IMPORTANT</p> <ol style="list-style-type: none"> <li>a) Contacting AC (ALL CLEAR) is necessary, when a new battery has been put in, because the memories/counters may cause erratic displays.</li> <li>b) On some models, pushing the light button will turn on the display.</li> </ol> | <p>Hold the watch horizontally and snap-fit the back cover.</p>  |