

WATCH SETTING INSTRUCTIONS

MODELS – BL5*** PERPETUAL CALENDAR CHRONOGRAPH

Mvmt. Cal. No. E82*

FEATURES

- Light Powered
- Rechargeable Battery
- Time
- Calendar
- Chronograph
- Dual Time
- Alarm

BENEFITS

- Environmentally Clean Energy Source
- No Battery Changes
- Displays 12/24 Hour Systems
- Programmed to Year 2100
- 1/20 Second Accuracy
- Second Time Zone
- Daily (24 Hour) Setting



 Please view our interactive setting instructions @ www.citizenwatch.com

IMPORTANT NOTE: If you suspect a malfunction or the hands are in an incorrect position, first check the 0-position of the hands by pulling the crown out one click and rotate it to move the mode hand (6:00 sub dial) to indicate (CHR). Pull the crown out an additional 'click' to the setting position. If the hands and date do not move to the correct 0-positions (pointing straight up to 12:00 with the date at '1'), it will be necessary to perform the all reset and 0-position procedures.

After a full recharge from complete power loss or if abnormal operation is noted, an ALL RESET and 0-POSITIONING CORRECTION will be needed prior to setting the time and calendar.

ALL RESET AND 0-POSITION PROCEDURE

- Pull the crown out 1 'click'. Turn the crown to set the mode hand (6:00 sub dial) to the chronograph [CHR] position.
- Pull the crown out an additional 'click' (0-position correction mode). Each of the hands and date moves to their respective 0-positions stored in memory and then stop. (note: this may take a few minutes to complete)
- Simultaneously press and hold the upper right (B) and lower right (A) buttons for two seconds then release. Following a confirmation tone, the minute, chronograph second, and chronograph minute hands will move back and forth slightly indicating the ALL RESET procedure was successful.
- Press and release the upper right button (B). The minute hand will move slightly indicating the hour, minute and 24-hour hands may now be set to their 0-position.
- Rotate the crown so that the hour, minute and 24-hour hands are pointing straight up (12:00). (note: the 24-hour hand moves in conjunction with the hour hand.)
- Press and release the upper right button (B). The second hand will move slightly indicating it may now be set to its 0-position. Rotate the crown to move the chronograph second hand to the 12:00 position.
- Press and release the upper right button (B). The chronograph minute hand (upper right sub dial) will move slightly indicating it and the date are active for 0-positioning.
- Rotate the crown to set date of the date of month to '31'. (Rotating the crown quickly will engage the rapid advance function. To stop the rapid advance function, rotate the crown one 'click'.)
- Continue to rotate the crown slowly until '1' is shown in the center of the date window and the chronograph minute hand (upper right sub dial) indicates 12:00.
- Push the crown in two 'clicks' to the closed position next to the case. This completes the 0-positioning procedure. You must now set the time and calendar.

TO SET THE TIME AND CALENDAR

- Pull the crown out 1 'click' and rotate the crown clockwise or counterclockwise to move the mode hand (6:00 sub dial) to the time (TME) position.
- Pull the crown out one additional 'click' (two 'clicks' out) to the time/calendar setting position.

 
- Press and release the upper right button (B). The second hand will move to the 0-position set in memory then stop. The minute hand will move slightly indicating it is active for setting.

NOTE: If the second hand stops at any other position, you must perform an ALL RESET and 0-POSITIONING CORRECTION.

- Rotate the crown clockwise (right) to set the current time. Pay particular attention to the position of the 24-hour hand (upper left sub dial) to ensure the correct A.M. or P.M. time is set. (Rotating the crown quickly will engage the rapid advance function. To stop the rapid advance function, rotate the crown one 'click'.)

- Press and release the upper right button (B). The chronograph minute hand (upper right sub dial) will move slightly indicating the leap year designation may be set.

- Rotate the crown clockwise (right) to adjust the chronograph minute hand (upper right sub dial) to indicate the current leap year designation.



- Press and release the upper right button (B). The second hand will make a full rotation and stop at the last month of year in memory indicating the month of year may now be set.

- Rotate the crown clockwise to align the second hand to indicate the current month of the year. Each hour location will correspond to a month.



- Press and release the upper right button (B). The chronograph minute hand (2:00 sub dial) will make one rotation counterclockwise then return indicating the date of month may be set.

- Rotate the crown clockwise to set the current date of the month. (NOTE: the function hand (upper right sub dial) will rotate 4 revolutions for each date change).

- Press the crown in two 'clicks' to the closed position next to the case. This completes setting the time and calendar.

TO USE THE CHRONOGRAPH

The chronograph will measure up to a maximum of 59 minutes and 59.99 seconds in 1/20 second increments and then stop at the 0-position. NOTE: Be sure to reset the chronograph after each use to conserve power.

- Pull the crown out one 'click' and rotate it to move the mode hand (6:00 sub dial) to the chronograph (CHR) position. The second hand will move to the 12:00 position indicating the watch is in chronograph mode.

- Push the crown in one 'click' to the closed position next to the case.

- Press and release the upper right button (B) to start or stop the chronograph. A confirmation beep will signal when the upper right button (B) is pressed. While measuring the elapsed time, the chronograph minute hand (2:00 sub dial) records elapsed minutes and 1/20th of a second. After the chronograph is stopped, if the lower right button (A) is pressed and held, the chronograph minute hand will indicate the 1/20 of a second.

- To return the chronograph hands to 12:00 after the chronograph is stopped, press and hold down the upper right button (B) for approximately 2 seconds.

TO USE THE ALARM

Once set and activated, the alarm will sound for 15 seconds at the set time every 24-hours based on the time set. It cannot be set for the travel (LTM) time.

- Pull the crown out 1 'click' and rotate the crown clockwise or counterclockwise to move the mode hand (6:00 sub dial) to the alarm (ALM) position. The hands will move to the following positions:

Second hand: moves to the 30-second (6:00) position
Hour, Minute and 24-hour hands: moves to indicate the last set alarm time.

- Pull the crown out an additional 'click' (two 'clicks' out) to activate the alarm setting mode.

- Rotate the crown clockwise (right) to set the desired alarm time. Be sure to pay particular attention to the 24-hour hand (upper left sub dial) to ensure the correct A.M. or P.M. time is set.

- To activate the alarm, press and release the upper right button (B) to change the position of the chronograph second hand to indicate 'on' (8:30) or 'off' (7:30).

- Push the crown in two 'clicks' to the closed position next to the case. This completes the alarm setting.

TO ACTIVATE OR DEACTIVATE THE ALARM

Once the alarm time is set, you may wish to activate or deactivate the alarm.

- Pull the crown out 1 'click' and rotate the crown clockwise or counterclockwise to move the mode hand (6:00 sub dial) to the alarm (ALM) position.

- Pull the crown out an additional 'click' (two 'clicks' out) to activate the alarm setting mode.

- Press and release the upper right button (B) to change the position of the second hand to indicate 'on' (8:30) or 'off' (7:30)

- Press the crown in two 'clicks' to the closed position next to the case. This completes the alarm activation/deactivation procedure.

For more in depth instructions please refer to the complete instruction manual or the technical support section of our website at www.citizenwatch.com