




ALBA




 **INSTRUCTION
BOOKLET**





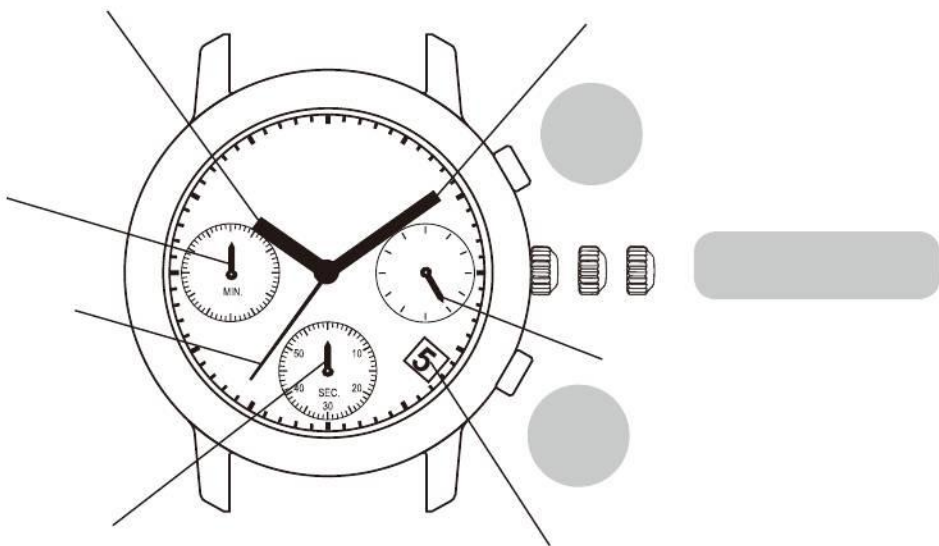

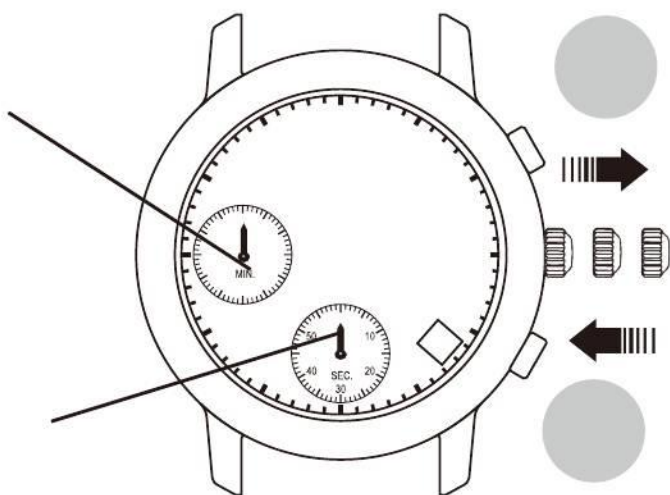

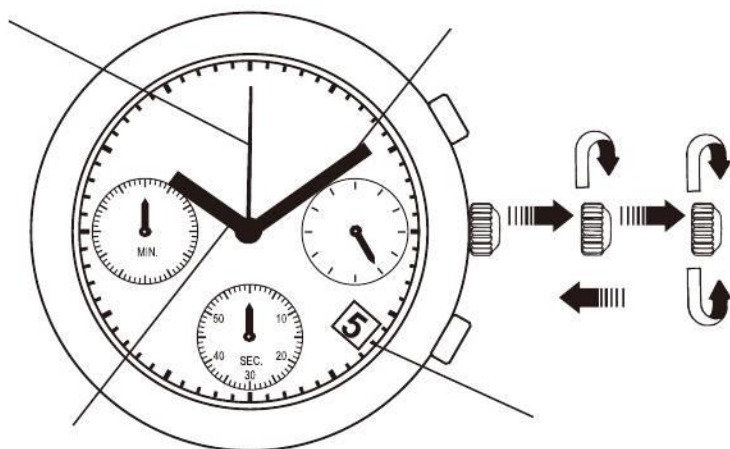





 
Pull out to first click, and turn clockwise until the

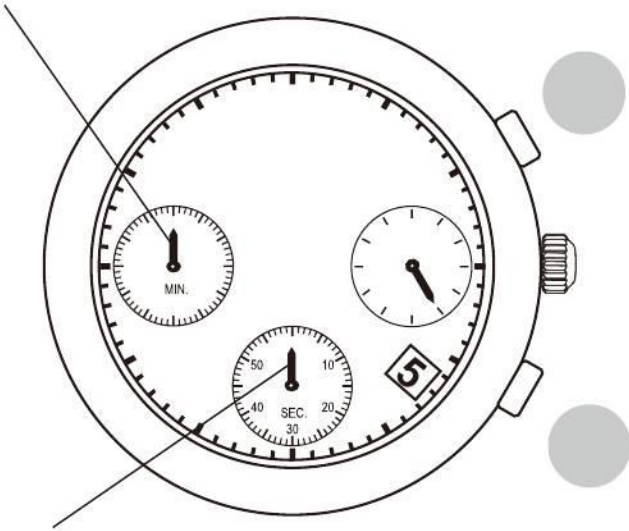



   -
-
-
- When setting the minute hand, first advance it 4 to
- It is necessary to adjust the date on the first day after
-
- sary to set the date during that period of time, first

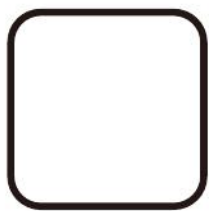

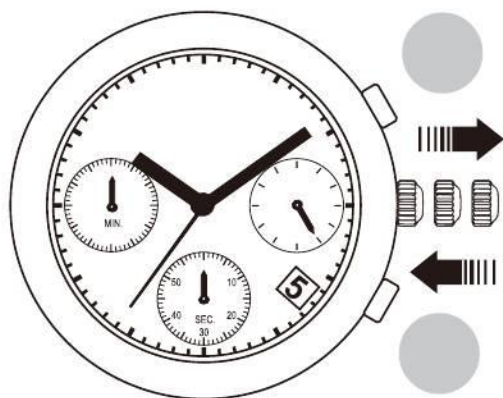




battery, and never expose it to fire. The battery may burst, become very hot or catch fire.








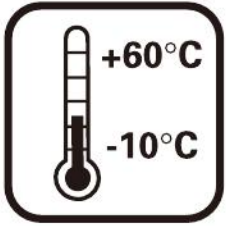





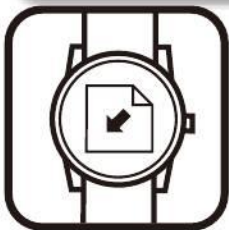

If your watch has a protective film and/or