

CAESARS PALACE™

WATCH OWNER'S
GUIDE

SLOT MACHINE GAME WATCH

FIVE YEARS
LIMITED WARRANTY

GENERAL DESCRIPTION

This game watch provides with a slot machine game and a real time clock function. For the slot machine game, you can press a lever button to spin the "values" in all nines of the slot machine's window. You can win money if one of the line you bet has the same "values" in a row.

This product is for entertainment purposes only. Any use for gambling or wagering is prohibited.

FEATURES

- Time mode
 - Calendar
 - Alarm Time mode
 - Game mode
- Basic clock functions : Hour and Minute.
 - Month and Date.
 - Daily alarm with Hours and Minutes.
 - Game sound ON/OFF selectable.
 - Realistic Casino Slot Machine action.



MODE OPERATION

There are total 5 modes in operation which are Normal Time, Calendar mode, Alarm Time mode, and Game mode. Press SPIN key for quick change from Normal Time mode to Game mode

NORMAL TIME MODE

Normal Time mode presents Hours, Minutes, P (PM) flag and Normal Time mode flag. Time is displayed in 12Hr format. The Slot machine spin automatically every 5 minutes i.e. 0, 5, 10, 15,.....45, 50, 55,..... .The final pattern will always has 3 "7" at the top row while others is random.



Normal Time Setting

In Normal Time mode, press & hold key SET /START key to enter the setting mode. The hour and minute digits start to flash in 2 Hz rate. No auto spin function in

setting mode.

Press key **LINE** to advance the hour digits and press key **BET** to advance the minute digits. Press & hold for fast setting.

Press **SET / START** key to exit the setting mode and return back to Normal Time mode.

CALENDAR MODE

Calendar mode presents Month, Date and Calendar mode flag. Calendar is displayed in "Month-Date" format. The Slot machine spin automatically every 5 minutes i.e. 0, 5, 10, 15,.....45, 50, 55,..... .The final pattern will always has 3 "7" at the middle row while others is random.



Calendar Setting

In Calendar mode, press & hold key **SET / START** key to enter the setting mode. The month and date digits start to flash in 2 Hz rate. No auto spin function in setting mode.

Press key LINE to advance the month digits and press key BET to advance the date digits. Press & hold for fast setting.

Press SET / START key to exit the setting mode and return back to Calendar mode.

ALARM TIME MODE

Alarm Time mode presents Hours, Minutes, P (PM) flag and Alarm Time mode flag. Time is displayed in 12HR format. The Slot machine spin automatically every 5 minutes i.e. 0, 5, 10, 15,.....45, 50, 55,..... .The final pattern will always has 3 "7" at the lower row while others is random.



Alarm function

Alarm sound is activated everyday on the alarm time if the alarm mark ")))" is on. Alarm function is disabled if alarm mark is "off". No auto spin function in setting mode.

Alarm Time Setting

In Alarm Time mode, press & hold key SET / START key to enter the setting mode. The hour and minute digits start to flash in 2 Hz rate.

Press key LINE to advance the hour digits and press key BET to advance the minute digits. Press & hold for fast setting.

Press SET / START key to exit the setting mode and return back to Alarm Time mode.

GAME MODE

In Alarm Time mode, press MODE key to change to Game mode. The "Slot Machine" and the money "0" will be displayed.



Press SET /START key to start the game (enter Game Play mode). The highest score recorded will be displayed and the game's start melody is activated. The Slot Machine is ready for operation after the melody. Player has

\$1000 dollars when he/she start to play the game.



Game Object

This game play as a Las Vegas slot machine. Points are awarded to your score according to the winning bar combinations that appear on the lines you bet.

Game rule

- You can bet from 1 up to 3 lines per spin.

One Line:-

Line 1 (the middle row across).

Two Lines:-

Line 1 (middle row across) + Line 2 (The upper line across).

Three Lines:-

Line 1 (middle row across) + Line 2 (the upper

line across) + Line 3 (Lower row across)

- If You bet for all 3 lines, you can also win by the diagonals.
- After you press the SPIN key, "values" in all nine of the slot machine's windows will spin. When the spinning stops, one value will appear in each window include "7", "BAR", "Bell", "Orange", "Plum" and "Cherry".
- 3 in a row will not award to you unless you bet that line.

PLAYING THE GAME

- When the game start, you begin with 1000 dollars.
- The word "BET" is displayed, you can now place you bets.



- Then, press the line LINE key to determine how many lines you wish to play per spin. You can play 1, 2 or all 3 lines. Each press of the LINE button increases the number of lines you bet. If you play one line, you play the middle line across. If you

play two lines, you play the middle line across and the top line across. If you play three lines, you play all three lines across and you will also win on all diagonals.



- Press the BET key to determine how much money you wish to bet. Each press of the BET key increase the number of dollars you bet from \$1 to \$5.



- Whatever dollar amount you decide becomes the dollar amount for all the lines you bet. If you bet \$2 and choose 2 lines, then the total bet is \$4. You bet \$4 and choose all 3 lines, then the total bet is \$12.

Press the SPIN key to spin the slots. When the windows stop spinning, there will be a "7", "BAR", "Bell", "Orange", "Plum" and "Cherry" in each window. If

you match three windows across in a line you bet, you win money (The matched row flash in 2 Hz rate). The word "WIN" will be displayed and the money start to fall down with melody. If you bet all 3 lines, you also win if you match in row diagonally.



- You only win money for 3 in a row for a line you bet. If you bet only line 1 (middle row) and get 3 in a row across line 2 (the top row), you lose money. The money you win is shown as follow:-

3 X "7"	Pays 80 to 1
3 X "BAR"	Pays 50 to 1
3 X "BELL"	Pays 30 to 1
3 X "ORANGE"	Pays 10 to 1
3 X "PLUM"	Pays 5 to 1
3 X "CHERRY"	Pays 3 to 1



- If you run out of money, the game is over. Press SET /START key to run the game again with \$1000.



- You can press the SOUND key to play in silence. Press again to play the game with sound effect again.
- In Game Play mode, press & hold MODE key to return back to Normal Time mode.

DISPLAY ITEMS

"7"



BAR



ORANGE



PLUM



BELL



CHEERRIES



— End —

SLYTROMIC

WRISTWATCH
GAMES
DATABASE