
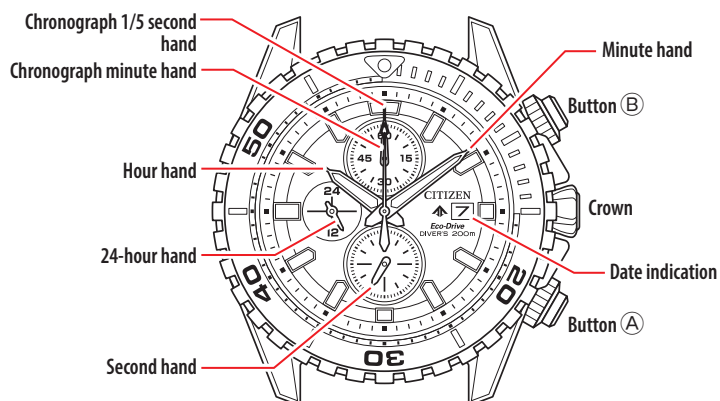
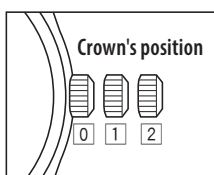


- When operating the watch, make sure that it is not wet.
- This watch is solar-powered. Expose the dial to light and use it sufficiently charged.
- To see details of charging time, specifications and operations, refer to the instruction manual:  B612 instruction manual

## Component identification



- Actual appearance may differ from the illustrations.
- The crown has two positions when pulling it out.



## Setting the time

- 1. Pull the crown out to position 2 when the second hand points 0 second.**  
The second hand stops.
- 2. Rotate the crown to set the time.**
  - The 24 hour hand also moves synchronously. Take care the time set is AM or PM.
  - Move the hands 4 or 5 minutes forward and move them back to the right time to set the time more precisely.
- 3. Push the crown in to position 0 in accordance with a reliable time source to finish the procedure.**

## Adjusting the calendar


Date indication adjustment is required on the first days of March, May, July, October and December.

- Do not adjust the date indication between 9:00 PM and 1:00 AM. Otherwise, the date indication may change incorrectly thereafter.

- 1. Pull the crown out to position 1.**
- 2. Rotate the crown counterclockwise to set the date indication.**
- 3. Push the crown in to position 0 to finish the procedure.**

## Using the chronograph

- 1. Push the crown in to position 0.**
  - If the chronograph minute hand does not point 00 before starting measurement, press and release the lower right button (A) to reset it.
- 2. Start/stop: press button (B).**
- 3. Reset: press button (A) while the chronograph is stopped.**

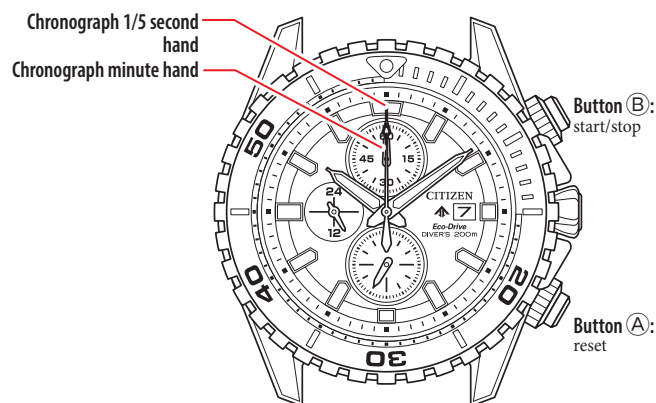

- The chronograph measures up to 60 minutes.
- You cannot use the chronograph while insufficient charge warning status (2-second interval movement).

## Adjusting the position of the chronograph 1/5 second hand

Adjust the position of the chronograph 1/5 second hand when it does not return to 0 seconds.

- 1. Pull the crown out to position 2.**
- 2. Press and hold the upper right button (B) for 3 seconds or more.**  
The chronograph 1/5 second hand becomes adjustable.
- 3. Press and release the upper right button (B) to set the position of the chronograph 1/5 second hand to 0 seconds.**
  - Each time you press the button, the chronograph 1/5 second hand moves by 1 step.
  - Pressing and holding the button moves the chronograph 1/5 second hand continuously.
  - The chronograph minute hand also moves synchronously with the chronograph 1/5 second hand.
- 4. Rotate the crown to set the time.**
- 5. Push the crown in to position 0.**
- 6. Press and release the lower right button (A) to finish the procedure.**
  - Pressing the button resets the chronograph minute hand.