


- This watch is solar-powered. Expose the dial to light and use it sufficiently charged.
- To see details of charging time, specifications and operations, refer to the instruction manual:


 B876 instruction manual  B877/B878 instruction manual

Component identification

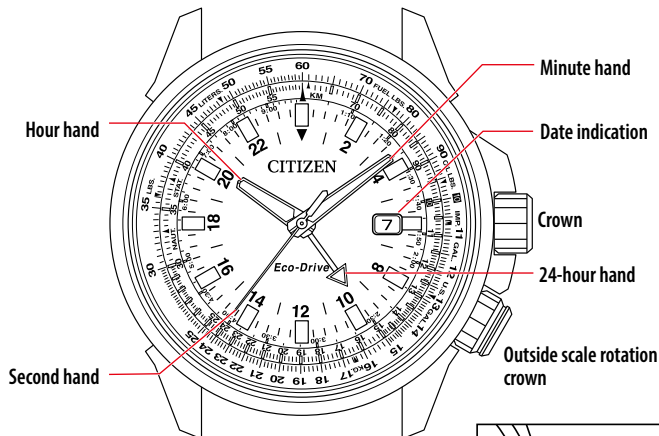

- Actual appearance may differ from the illustration.
- The crown has two positions when pulling it out.
- Refer also to our web page for detail of usage of the scale and bezel on the watch.

(<http://www.citizenwatch-global.com/support/pdf/enhanced/e.pdf>)

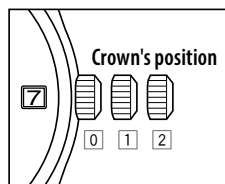

Setting the time

1. Pull the crown out to position **2** when the second hand points 0 second.

The second hand stops.

2. Rotate the crown to adjust the 24-hour hand and minute hand.

- Move the hands 4 or 5 minutes forward and move them back to the right time to set the time more precisely.
- The hour and 24-hour hands move synchronously.

3. Push the crown in to position **0** in accordance with a reliable time source.

The second hand starts moving.

4. Pull the crown out to position **1**.

5. Rotate the crown clockwise to set the hour hand.

- Rotate the crown to move the hour hand fully for each portion of hours.
- Change of date indication shows it just became AM. Take care the time set is AM or PM.

6. Push the crown in to position **0** to finish the procedure.

Setting the date

- Do not adjust the date indication while the watch shows 9:00 PM - 1:00 AM. Otherwise, the date indication may change incorrectly thereafter.
- Date indication adjustment is required on the first days of March, May, July, October and December.

1. Pull the crown out to position **1**.

2. Rotate the crown counterclockwise to set the date indication.

3. Push the crown in to position **0** to finish the procedure.

Using the local time

You can move the hour hand in the 1-hour increments to indicate a time different from that of the 24-hour hand.

1. Pull the crown out to position **1**.

2. Rotate the crown clockwise to set the hour hand.

- Rotate the crown to move the hour hand fully for each portion of hours.
- Change of date indication shows it just became AM. Take care the time set is AM or PM.
- Set the date after the adjustment if needed.
- The hour hand and date indication move synchronously. The indication may be conflicting with that of the 24-hour hand.

3. Push the crown in to position **0** to finish the procedure.

To set the hour hand back

Adjust the hour hand to the same time as that indicated by the 24-hour hand. Adjust the date indication following [Setting the date](#) after that.