


ManualsLib.com

ManualsLib.com



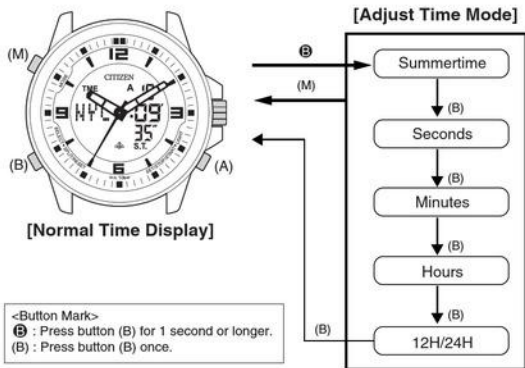


7. Setting the Calendar

- (1) Press button (M) and set to Calendar [CAL] mode.
- (2) Press button (B), or press button (A) while pressing button (B), and display the name of the city for adjustment. Press and hold button (B) to return to the adjustment mode.
- (3) When button (B) is pressed for 1 second or longer, the “Month” flashes and displays the Calendar adjustment mode.
- (4) Each time you press button (B), the adjustment position is switched. Display the adjustment position with flashing.
- (5) Press button (A) and adjust the flashing position.
 - Press and hold button (A) for rapid adjustment in each adjustment mode.
- (6) When adjusting “Year”, press button (B) to return to the normal Calendar display.




ManualsLib.com

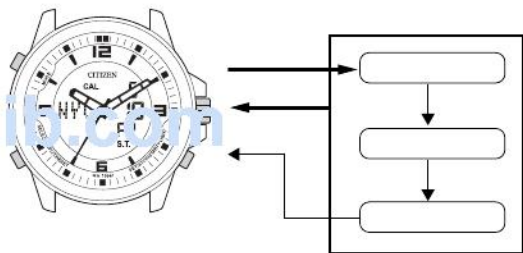

ManualsLib.com



[Normal Alarm Display]

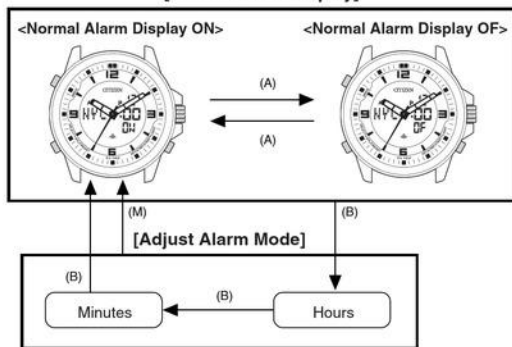

9. Using the Football Timer

Football Timer can be set from 45 to 5 minutes in the units of 5 minutes. When Football Timer is on, you can measure the loss time without interrupting the measurement.


[Normal Football Timer Display]



<How to Set Football Timer>

- (1) Press button (M) and set to Football Timer [F.B.] mode.
- (2) Pressing button (B) adjusts the time minus 5 minutes. Display the time you want to adjust.
 - Press and hold button (B) for rapid adjustment in minus 5 minutes.

45 → 40 → 35 → 10 → 5

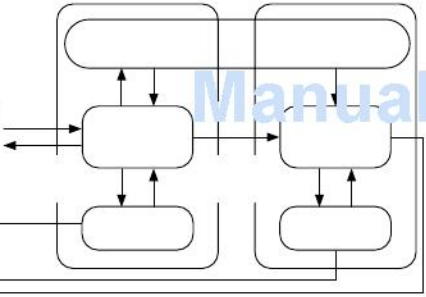


ManualsLib.com


ManualsLib.com




ManualsLib.com

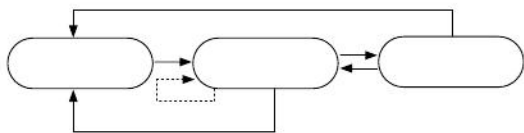

ManualsLib.com

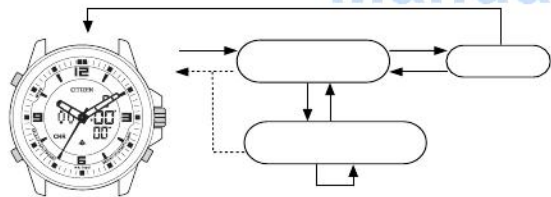

ManualsLib.com

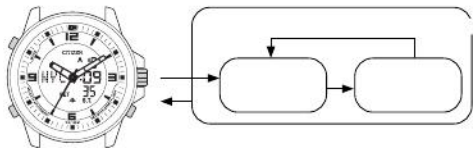

ManualsLib.com

ManualsLib.com



ManualsLib.com

ManualsLib.com

ManualsLib.com

ManualsLib.com