


- The operational procedures for Module 1698 and 1918 are identical. All of the illustrations in this manual show Module 1698.
- Press **M** to change from mode to mode. Each mode is explained in detail on the following pages.

-
- Diagram illustrating the mode transition flow:
- Module 1918** (Timekeeping Mode) and **Module 1698** (Timekeeping Mode) are the starting points.
 - Pressing **(M)** from either module leads to **Beat Counter Mode**.
 - Pressing **(M)** in **Beat Counter Mode** leads to **Alarm Mode**.
 - Pressing **(M)** in **Alarm Mode** leads to **Stopwatch Mode**.
 - Pressing **(M)** in **Stopwatch Mode** leads back to **Alarm Mode**.
 - Pressing **(M)** in **Alarm Mode** leads back to **Beat Counter Mode**.
 - Pressing **(M)** in **Beat Counter Mode** leads back to **Timekeeping Mode**.

Diagram of a digital stopwatch with labels A, B, and C pointing to specific features. A points to the start button, B points to the split button, and C points to the reset button. The display shows 57.88 in the top half and 00.000 in the bottom half. Labels 'Hours', 'Minutes', and 'Seconds' are positioned below the display.

ALARM MODE

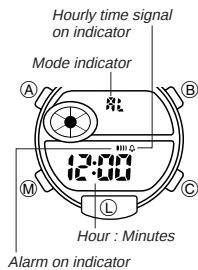

When the Daily Alarm is turned on, the alarm sounds for 20 seconds at the preset time each day. Press any button to stop the alarm after it starts to sound.
When the Hourly Time Signal is turned on, the watch beeps every hour on the hour.

To set the alarm time


1. Hold down (A) while in the Alarm Mode until the hour digits start to flash on the display. The hour digits flash because they are *selected*.
 - This operation automatically turns on the Daily Alarm.
2. Press (M) to change the selection in the following sequence.



3. Press (C) to increase the selected digits. Holding down (C) increases the selection at high speed.
 - The format (12-hour and 24-hour) of the alarm time matches the format you select for normal timekeeping.
 - When setting the alarm time using the 12-hour format, take care to set the time correctly as a.m. (no indicator) or p.m. (P indicator).
4. After you set the alarm time, press (A) to return to the Alarm Mode.

To turn the Daily Alarm and Hourly Time Signal on and off

Press (B) while in the Alarm Mode to change the status of the Daily Alarm and Hourly Time Signal in the following sequence.

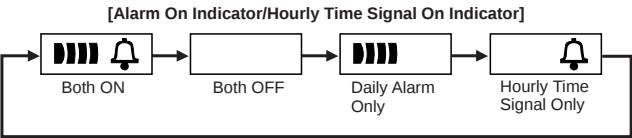

To test the alarm

Hold down (C) while in the Alarm Mode to sound the alarm.