


# Module No.1536/1636/1817

## GENERAL GUIDE


- Press **(C)** to change from mode to mode.
- After you perform an operation in any mode, pressing **(B)** returns to the Timekeeping Mode.

Operation of Module 1817 is identical to that of Modules 1536/1636. The only difference between these modules are the Module 1817 indicators, which are shown below. All illustrations in this User's Guide shows Modules 1536/1636 only.


PM indicator — PM 24 AL SIG SPL — Split indicator  
24-hour indicator — Alarm on indicator — Signal on indicator

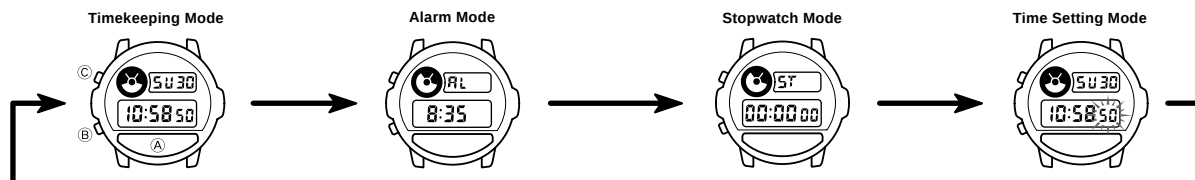


### TIMEKEEPING MODE

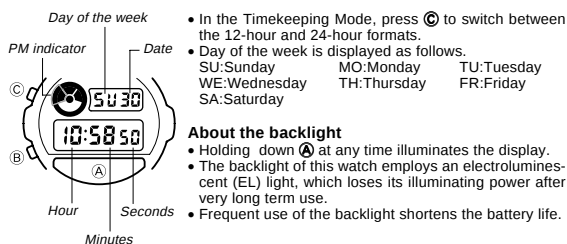

### STOPWATCH MODE

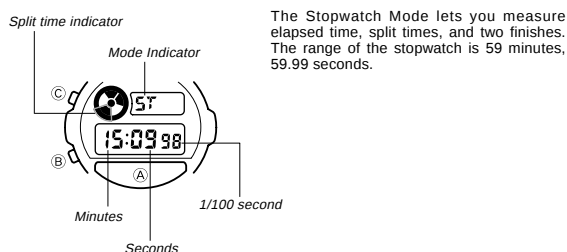

### ALARM MODE

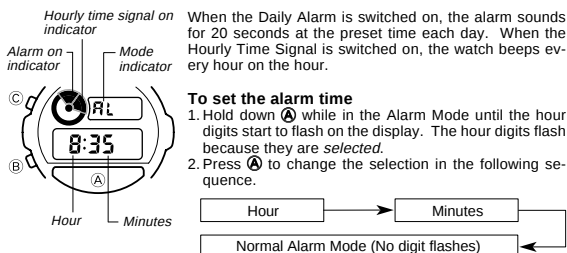

- Once you reach the normal Alarm Mode, you have to hold down **(A)** again until the hour digits start to flash.
- 3. Press **(C)** to increase the selected digits. Holding down **(C)** changes the number at high speed.
- The format (12-hour and 24-hour) of the alarm time matches the format you select for normal timekeeping.
- When setting the alarm time using the 12-hour format, take care to set the time correctly as morning or afternoon (PM).
- 4. After you set the alarm time, press **(A)** to return to the Alarm Mode. At this time the Daily Alarm is switched on automatically.

#### To stop the alarm

Press **(A)** to stop the alarm after it starts to sound.


#### To switch the Daily Alarm and Hourly Time Signal on and off

Press **(C)** while in the Alarm Mode to change the status of the Daily Alarm and Hourly Time Signal in the following sequence.



#### To test the alarm

Hold down **(C)** while in the Alarm Mode to sound the alarm.

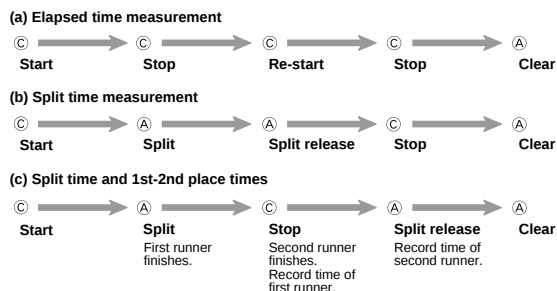

### TIME SETTING MODE

