



GENERAL GUIDE

- The configuration of this watch may differ somewhat from that shown in the illustration.
- Press **(C)** to change from mode to mode.
- In any mode, press **(D)** to illuminate the display for about two seconds.
- The animated figures perform a variety of different actions, depending on the mode the watch is in.

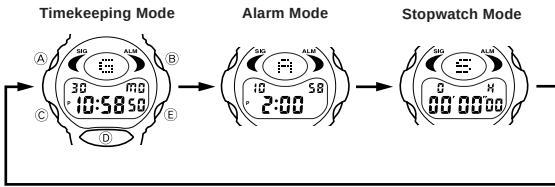

TIMEKEEPING MODE

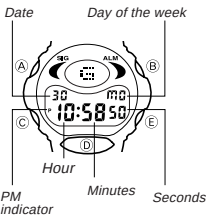


- Use **(E)** to switch the display between month/date and date/day of the week.
- Press **(B)** to play a melody for about 10 seconds. Pressing any key while a melody is playing stops the melody. The melody that plays depends on when you press **(B)**.

To set the time and date

1. Hold down **(A)** while in the Timekeeping Mode. The seconds digits flash on the display because they are *selected*.
2. Press **(C)** to change the selection in the following sequence.
3. While the seconds digits are selected (flashing), press **(E)** to reset the seconds to "00". If you press **(E)** while the seconds count is in the range of 30 to 59, it is reset to "00" and 1 is added to the minutes. If the seconds count is in the range of 00 to 29, the minutes count is unchanged.
4. While any other digits (besides seconds), are selected (flashing), press **(E)** to increase the number or **(B)** to decrease it. Holding down either button changes the current selection at high speed.
- While the day of the week is selected, pressing **(E)** advances to the next day, while pressing **(B)** returns to the previous day.
- While the 12/24-hour setting is selected, press **(E)** to switch between the two formats.
5. After you set the time and date, press **(A)** to return to the Timekeeping Mode.
- The date can be set within the range of January 1, 1995 to December 31, 2039.
- If you do not operate any button for a few minutes while a selection is flashing, the flashing stops and the watch goes back to the Timekeeping Mode automatically.

ABOUT THE BACKLIGHT

- Pressing **(D)** at any time illuminates the display for about two seconds and causes an animated figure to appear. The type of animation that appears depends upon when you press **(D)**.
- The backlight of this watch employs an electro-luminescent (EL) light, which loses its illuminating power after very long term use.
- The watch will emit an audible sound whenever the display is illuminated. This is caused by a transistor that vibrates when the EL panel lights up. It does not indicate malfunction of the watch.

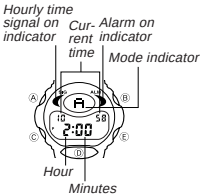

- See the MELODY LIST at the back of this manual for the names of melodies.
- When the Daily Alarm is switched on, the alarm sounds for about 20 seconds at the preset time each day. Press any button to stop the alarm after it starts to sound. When the Hourly Time Signal is switched on, the watch beeps every hour on the hour.


ALARM MODE

This watch includes three built-in melodies, which you can use in any of the following five settings to sound when an alarm time is reached.

Setting	Alarm Sound
0.	Random play of melodies 1, 2, and 3
1.	Melody 1
2.	Melody 2
3.	Melody 3
4.	Beeper

To set the alarm time


1. Hold down **(A)** while in the Alarm Mode. The hour digits flash on the display because they are *selected*.
- At this time the Daily Alarm is switched on automatically.
2. Press **(C)** to change the selection in the following sequence.



3. Press **(E)** to increase the selected digits and **(B)** to decrease them. Holding down either button changes the selection at high speed.
- The format (12-hour and 24-hour) of the alarm time matches the format you select for normal timekeeping.
- When setting the alarm time using the 12-hour format, take care to set the time correctly as morning or afternoon.
4. After you set the alarm time, press **(A)** to return to the Alarm Mode.
- If you do not operate any button for a few minutes while a selection is flashing, the flashing stops and the watch goes back to the Alarm Mode automatically.
- If you do not operate any button for a few minutes in the Alarm Mode, the watch goes back to the Timekeeping Mode automatically.

To switch the Daily Alarm and Hourly Time Signal on and off

Press **(E)** while in the Alarm Mode to change the status of the Daily Alarm and Hourly Time Signal in the following sequence.




ALM : Daily Alarm
SIG : Hourly Time Signal

To test the Alarm

- Pressing **(B)** sounds the currently selected alarm sound. It takes about 10 seconds for the alarm sound to finish. You can stop it manually by pressing any key.
- Note that if 0 is set as the alarm sound, pressing **(B)** randomly selects one of the melodies. The sound that is randomly selected when the next alarm time is reached will probably be different from the one that sounds when you press **(B)**.

STOPWATCH MODE

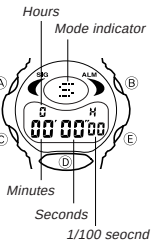

The Stopwatch Mode lets you measure elapsed time, split times, and two finishes. The range of the stopwatch is 23 hours, 59 minutes, 59.99 seconds.

- Animated figures appear on the display while the stopwatch is measuring an elapsed time.
- If you do not perform any key operation while in the Stopwatch Mode, the watch automatically returns to the Timekeeping Mode (except when an elapsed time measurement is in progress).

To measure elapsed time

1. Press **(E)** to start the stopwatch.
2. Press **(E)** to stop the stopwatch.
- You can resume the measurement operation by pressing **(E)** again.
3. Press **(B)** to clear the stopwatch to all zeros (0H00'00"00).

To record split times

1. Press **(E)** to start the stopwatch.
2. Press **(B)** to display the timing up to that point. Stopwatch timing continues internally.
3. Press **(B)** to clear the split time and to continue time measurement on the display.
- You can repeat steps 2 and 3 as many times as you want.
4. Press **(E)** to stop the time measurement.
5. Press **(B)** to clear the stopwatch to all zeros.

To time first and second place finishes

1. Press **(E)** to start the stopwatch.
2. Press **(B)** when the first finisher crosses the line, and record the time.
3. Press **(E)** when the seconds finisher crosses the line.
4. Press **(B)** to display the finishing time of the second finisher.
5. Press **(B)** to clear the stopwatch to all zeros.

MELODY LIST

1623

1	TECHNO
2	HAPPY HOUSE
3	JUNGLE

All of these are CASIO original melodies.

1667

1	No woman no cry
2	Get up, stand up
3	I shot the sheriff

T-9730266



1668

1	I love rock'n roll
2	Never
3	The wild one

T-9750085



1678

1	Best of my love
2	In the night
3	Take your time

T-9710138



1807

1	HIGHER AND HIGHER music by GTS
2	ruling!! music by BG-999
3	FAKE YOUR GAME music by groove treasurers feat.d-secrets!

All of these are CASIO original melodies.

1808

1	Gimme!Gimme!Gimme!
2	Another moment follows
3	Day after day

T-9750086



1809

1	Move over
2	Somebody to love
3	If it makes you happy

T-9750087



1852

1	Beach baby
2	Runaway
3	Sék' sé bon

T-9790187



1853

1	Young alien types
2	Popyura
3	Kandy pop

T-9790188



1854

1	Look into the past
2	Tombo in 7/4
3	Upa neguinho

T-97A0366



1855

1	SOUL YOUR SMILE
2	PIECES
3	Duck

T-97A0367



1891

1	La isla bonita
2	Bamboleo
3	Tú me amas

T-9790189



1932

1	Push it
2	Fly girl
3	Real love

T-9830006



1952

1	Desperado
2	Lotta love
3	Have you ever seen the rain?

T-9830005



1955

1	Take my breath away (love theme from TOP GUN)
2	Oh pretty woman (main theme from PRETTY WOMAN)
3	My heart will go on (love theme from TITANIC)

T-9830004



2142

1	Killing me softly with his song
2	Can't take my eyes off of you
3	Everything's gonna be alright

T-9960696

