

Operation Guide 3770 3771 4308 4309 CASIO®

Getting Acquainted

Congratulations upon your selection of this CASIO watch. To get the most out of your purchase, be sure to carefully read this manual and keep it on hand for later reference when necessary.

About This Manual

Modules 3770 and 4308




- The operational procedures for Modules 3770, 3771, 4308, and 4309 are identical. All of the illustrations in this manual show Modules 3770 and 4308.
- Button operations are indicated using the letters shown in the illustration.
- Most of the display examples in this manual show only the digital display, without the analog hands.
- Each section of this manual provides you with the information you need to perform operations in each mode. Further details and technical information can be found in the "Reference" section.

Modules 3771 and 4309



General Guide


- Press (C) to change from mode to mode.
- In any mode, press (B) to illuminate the face of the watch.

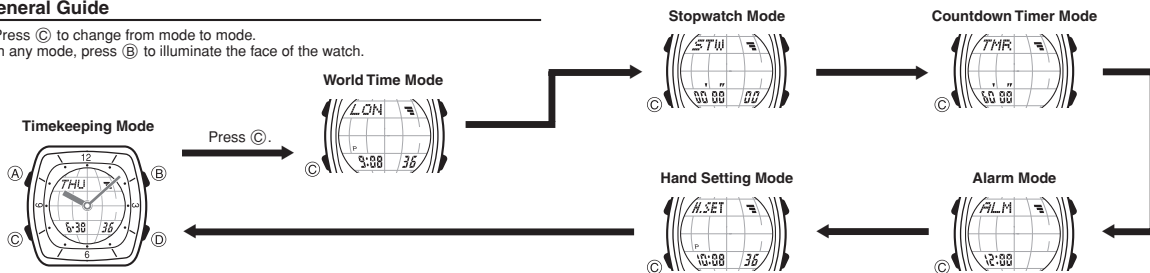

Radio-controlled Timekeeping

This watch receives a time calibration signal and updates its time setting accordingly. The time calibration signal includes both Standard Time and Daylight Saving Time (summer time) data.

- This watch is designed to pick up the time calibration signal transmitted from Rugby, England and the signal from Mainflingen, Germany.

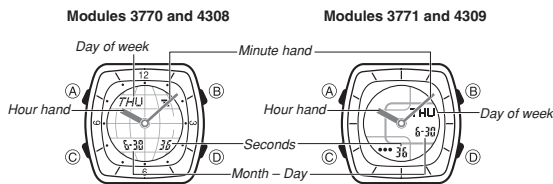


Current Time Setting

This watch automatically adjusts its time setting in accordance with a time calibration signal. You can also perform a manual procedure to set the time and date, when necessary.

- The first thing you should do after purchasing this watch is to set your Home City, which is the city where you will normally use the watch. For more information, see "To set your Home City" below.
- When using the watch outside the ranges of the time signal transmitters, you have to adjust the current time setting manually as required. See "Timekeeping" for more information about manual time setting.
- The analog time of this watch is synchronized with the digital time. Because of this, the analog time setting is automatically adjusted whenever you change the digital setting. See "Analog Timekeeping" for more information.

To set your Home City


Modules 3770 and 4308

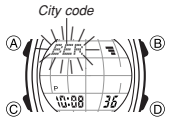

- In the Timekeeping Mode, hold down (A) until the city code starts to flash, which indicates the setting screen.
 - Use (D) (east) and (B) (west) to scroll through the city codes until the one you want to use as your Home City is displayed.
- The following are the city codes for major cities in the Western Europe time zones.

City Code	City	Other major cities in same time zone
LIS	Lisbon	
LON	London	Dublin, Casablanca, Dakar, Abidjan
BCN	Barcelona	
MAD	Madrid	
PAR	Paris	Amsterdam, Algiers, Hamburg, Frankfurt, Vienna
MIL	Milan	
ROM	Rome	
BER	Berlin	
STO	Stockholm	
ATH	Athens	Cairo, Jerusalem, Helsinki, Istanbul, Beirut, Damascus, Cape Town


Modules 3771 and 4309



- Press (A) to exit the setting screen.
- Normally, your watch should show the correct time as soon as you select your Home City Code. If it does not, it should adjust automatically after the next auto receive (in the middle of the night). You can also perform manual receive or you can set the time manually.
 - If you are in an area that does not use Daylight Saving Time (summer time), turn off the DST setting.

To display the digital time and last signal screen

- In the Timekeeping Mode, press (A) to cycle through the digital time screens as shown below.
- In the Timekeeping Mode, press (D) to display the last signal screen. The last signal screen shows the time and date of the last successful time calibration signal reception.

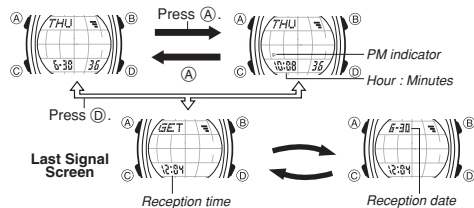


Time Calibration Signal Reception

There are two different methods you can use to receive the time calibration signal: auto receive and manual receive.

- Auto Receive**
With auto receive, the watch receives the time calibration signal automatically five or six times a day. When any auto receive is successful, the remaining auto receive operations are not performed. For more information, see "About Auto Receive".
- Manual Receive**
Manual receive lets you start a time calibration signal reception with the press of a button. For more information, see "To perform manual receive".

Important!

- When getting ready to receive the time calibration signal, position the watch as shown in the nearby illustration, with its 12 o'clock side facing towards a window. Make sure there are no metal objects nearby.

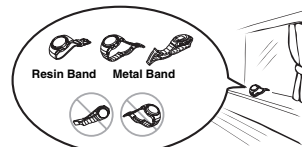

- The watch should not be on its side or facing the wrong way.
- Proper signal reception can be difficult or even impossible under the conditions listed below.



Operation Guide 3770 3771 4308 4309 CASIO®

- Signal reception is normally better at night than during the day.
- Time calibration signal reception takes from two to seven minutes, but in some cases it can take as long as 14 minutes. Take care that you do not perform any button operations or move the watch during this time.



- This watch is designed to receive the time calibration signal transmitted from Rugby, England and the signal from Mainflingen, Germany. Signal reception is possible within the area represented by a circle with a radius of about 1,500 kilometers.
- At distances further than about 500 kilometers from a transmitter, signal reception may not be possible during certain times of year or times of day. Radio interference may also cause problems with reception.
- See the information under "Signal Reception Troubleshooting" if you experience problems with time calibration signal reception.

About Auto Receive

With auto receive, the watch receives the time calibration signal automatically five or six times a day. When any auto receive is successful, the remaining auto receive operations are not performed. The reception schedule (calibration times) depends on your currently selected Home City Code, and whether standard time or Daylight Saving Time is selected for your Home City Code.

Your City Code		Auto Receive Start Times					
		1	2	3	4	5	6
LIS, LON (GMT +0)	Standard Time	1:00 am	2:00 am	3:00 am	4:00 am	5:00 am	Midnight
	Daylight Saving Time	2:00 am	3:00 am	4:00 am	5:00 am	Midnight	1:00 am next day
BCN, MAD, PAR, MIL, ROM, BER, STO (GMT +1)	Standard Time	2:00 am	3:00 am	4:00 am	5:00 am	Midnight	1:00 am next day
	Daylight Saving Time	3:00 am	4:00 am	5:00 am	Midnight	1:00 am next day	2:00 am next day
ATH (GMT +2)	Standard Time	3:00 am	4:00 am	5:00 am	Midnight	1:00 am next day	2:00 am next day
	Daylight Saving Time	4:00 am	5:00 am	Midnight	1:00 am next day	2:00 am next day	3:00 am next day

Note

- Auto receive is performed only if the watch is in the Timekeeping Mode or World Time Mode when one of the calibration times is reached. It is not performed if a calibration time is reached while an alarm is sounding, or while you are configuring settings (while settings are flashing on the display).
- Auto receipt of the calibration signal is designed to be performed early in the morning, while you sleep (provided that the Timekeeping Mode time is set correctly). Before going to bed for the night, remove the watch from your wrist, and put it in a location where it can easily receive the signal.
- When auto receive is turned on, the watch receives the calibration signal for two to seven minutes everyday when the time in the Timekeeping Mode reaches each of the five calibration times. Do not perform any button operation within seven minutes before or after any of the five calibration times. Doing so can interfere with correct calibration.
- Remember that reception of the calibration signal depends on the time kept in the digital display. Reception will be performed whenever the display shows one of the five calibration times, regardless of whether or not the displayed time is actually the correct time.
- Calibration signal reception is disabled while a countdown timer operation is in progress.


About the Receiving Indicator

The receiving indicator shows the strength of the calibration signal being received. For best reception, be sure to keep the watch in a location where signal strength is strongest.

Modules 3770 and 4308




Modules 3771 and 4309



- Even in an area where signal strength is strong, it takes about 10 seconds for signal reception to stabilize enough for the receiving indicator to indicate signal strength.
- Use the receiving indicator as a guide for checking signal strength and for finding the best location for the watch during signal reception.
- The Level 3 receiving indicator remains on the display in all modes following reception of the time calibration signal and calibration of the watch's time setting. The Level 3 receiving indicator is not displayed if signal reception was unsuccessful or after manual adjustment of the current time setting.
- The Level 3 receiving indicator indicates that at least one of the six calibration signal receive operations was successful. Note, however, that the indicator is cleared from the display at the next successful reception each day.

To perform manual receive




1. Place the watch on a stable surface so its top (12 o'clock side) is facing towards a window.
 2. In the Timekeeping Mode, hold down (D) for about two seconds until the watch beeps.
 3. After you release (D) the display will show the current time and the letters RC!. This indicates that signal reception is in progress.
- Time calibration signal reception normally takes from two to seven minutes. Take care that you do not perform any button operations or move the watch during this time.
 - After signal reception is complete, the display of the watch changes to the last signal screen.

Note

- To interrupt a reception and return to the Timekeeping Mode, press (D).
- If reception is unsuccessful, the message ERR appears on the display for one or two minutes. After that, the watch returns to the Timekeeping Mode.
- You can also change from the last signal or ERR screen to the normal timekeeping screen by pressing (D).
- Calibration signal reception is disabled while a countdown timer operation is in progress.

To turn auto receive on and off



1. In the Timekeeping Mode, press (D) to display the last signal screen.
 - The watch will automatically return to the Timekeeping Mode if you do not perform any button operation for one or two minutes after displaying the last signal screen.
2. Hold down (A) until the current auto receive setting flashes on the display. This is the setting screen.
 - If the auto receive setting does not appear when you hold down (A), it means that the city code currently selected for the Home City is for an area that does not support calibration signal reception. You cannot turn auto receive on or off in this case.
3. Use (D) to turn auto receive on (ON) or off (OFF).

Signal Reception Troubleshooting


Check the following points whenever you experience problems with signal reception.

Problem	Probable Cause	What you should do
Cannot perform manual receive.	<ul style="list-style-type: none"> • The watch is not in the Timekeeping Mode. • Your current Home City is not one of the following city codes: LIS, LON, BCN, MAD, PAR, MIL, ROM, BER, STO, or ATH. • A countdown timer operation is in progress. 	<ul style="list-style-type: none"> • Enter the Timekeeping Mode and try again. • Select LIS, LON, BCN, MAD, PAR, MIL, ROM, BER, STO, or ATH as your Home City. • Stop the countdown timer operation.
Auto receive is turned on, but the Level 3 receiving indicator does not appear on the display.	<ul style="list-style-type: none"> • You changed the time setting manually. • You were performing some button operation during the auto receive. • Even if reception is successful, the Level 3 receiving indicator disappears at the next successful reception each day. 	<ul style="list-style-type: none"> • Perform manual receive or wait until the next auto signal receive is performed. • Check to make sure the watch is in a location where it can receive the signal.
Time setting is incorrect following signal reception.	<ul style="list-style-type: none"> • If the time is one hour off, the DST setting may be incorrect. • The Home City code setting is not correct for the area where you are using the watch. 	<ul style="list-style-type: none"> • Change the DST setting to Auto DST. • Select the correct Home City code.

- For further information, see "Important!" under "Time Calibration Signal Reception" and "Radio-controlled Timekeeping Precautions".

World Time

Modules 3770 and 4308



Current time in selected city

Modules 3771 and 4309



Current time in selected city

To view the time in another city


While in the World Time Mode, press (D) to scroll through the city codes (time zones) to the east.

- For full information on city codes, see the "City Code Table".

Operation Guide 3770 3771 4308 4309 CASIO®


To toggle a city code time between Standard Time and Daylight Saving Time

Modules 3770 and 4308



DST indicator

Modules 3771 and 4309




DST indicator

- In the World Time Mode, use (D) to display the city code (time zone) whose Standard Time/Daylight Saving Time setting you want to change.
 - Hold down (A) to toggle Daylight Saving Time (DST indicator displayed) and Standard Time (DST indicator not displayed).
- Note that you cannot use the World Time Mode to change the DST setting of the Home City code you currently have selected in the Timekeeping Mode. See "To change the Daylight Saving Time (summer time) setting" for information about turning the Home City code DST setting on and off.
 - The DST indicator will appear on the display whenever you display a city code for which Daylight Saving Time is turned on.
 - Note that the DST/Standard Time setting affects only the currently displayed city code. Other city codes are not affected.


Stopwatch

Modules 3770 and 4308



Minutes | 1/100 second

Modules 3771 and 4309




1/100 second | Seconds


- The stopwatch lets you measure elapsed time, split times, and two finishes.
- The display range of the stopwatch is 59 minutes, 59.99 seconds.
 - The stopwatch continues to run, restarting from zero after it reaches its limit, until you stop it.
 - Exiting the Stopwatch Mode while a split time is frozen on the display clears the split time and returns to elapsed time measurement.
 - The stopwatch measurement operation continues even if you exit the Stopwatch Mode.
 - All of the operations in this section are performed in the Stopwatch Mode, which you enter by pressing (C).

To measure times with the stopwatch

Elapsed Time



Split Time




Two Finishes




Countdown Timer

Modules 3770 and 4308



Minutes Seconds

Modules 3771 and 4309



Minutes Seconds

- You can set the countdown timer within a range of one to 60 minutes. An alarm sounds when the countdown reaches zero.
- Calibration signal reception (both auto and manual) is disabled while a countdown timer operation is in progress.
 - All of the operations in this section are performed in the Countdown Timer Mode, which you enter by pressing (C).

To set the countdown start time

- While the countdown start time is on the display in the Countdown Timer Mode, hold down (A) until the current countdown start time starts to flash, which indicates the setting screen.
 - If the countdown start time is not displayed, use the procedure under "To use the countdown timer" to display it.
- While a setting is flashing, use (D) (+) and (B) (-) to change it.
- Press (A) to exit the setting screen.

To use the countdown timer


- Press (D) while in the Countdown Timer Mode to start the countdown timer.
- When the end of the countdown is reached, the alarm sounds for 10 seconds or until you stop it by pressing any button. The countdown time is automatically reset to its starting value after the alarm stops.
 - Press (D) while a countdown operation is in progress to pause it. Press (D) again to resume the countdown.
 - To completely stop a countdown operation, first pause it (by pressing (D)), and then press (A). This returns the countdown time to its starting value.

Alarm

When the alarm is turned on, the alarm sounds when the alarm time is reached. You can also turn on an Hourly Time Signal, which will cause the watch to beep twice every hour on the hour.


- All of the operations in this section are performed in the Alarm Mode, which you enter by pressing (C).

Modules 3770 and 4308

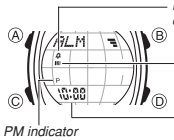

Alarm time (Hour : Minutes)

Modules 3771 and 4309

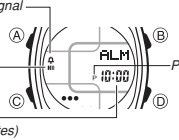

PM indicator

To set the alarm time

- In the Alarm Mode, hold down (A) until the hour setting of the alarm time starts to flash, which indicates the setting screen.
 - This operation automatically turns on the alarm.
- Press (C) to move the flashing between the hour and minute settings.
- While a setting is flashing, use (D) (+) and (B) (-) to change it.
 - When setting the alarm time using the 12-hour format, take care to set the time correctly as a.m. (no indicator) or p.m. (P indicator).
- Press (A) to exit the setting screen.

Alarm Operation

The alarm sounds at the preset time for about 10 seconds, regardless of the mode the watch is in.

- To stop the alarm tone after it starts to sound, press any button.


To test the alarm

In the Alarm Mode, hold down (D) to sound the alarm.

To turn the Daily alarm and the Hourly Time Signal on and off

In the Alarm Mode, press (D) to cycle through the settings shown below.


Alarm On Indicator / Hourly Time Signal On Indicator

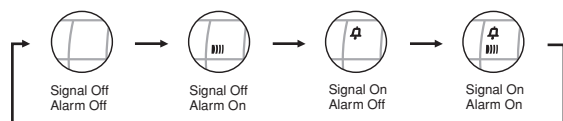

- The alarm on indicator and the Hourly Time Signal on indicator are shown on the display in all modes while these functions are turned on.

Illumination

Modules 3770 and 4308




An LED (light-emitting diode) and light guide panel illuminate the digital display for easy reading in the dark.

- See "Illumination Precautions" for other important information.

To turn on illumination

- In any mode, press (B) to illuminate the display.
- You can specify 1.5 seconds or 2.5 seconds as the illumination duration. See "To set the current digital time and date manually" for more information.


Modules 3771 and 4309



Timekeeping

Use the Timekeeping Mode to set and view the current time and date. This section also explains how to manually set the current date and time.

- When setting the time, you can also configure settings for the illumination duration and the 12/24-hour format.
- All of the operations in this section are performed in the Timekeeping Mode, which you can enter by pressing (C).

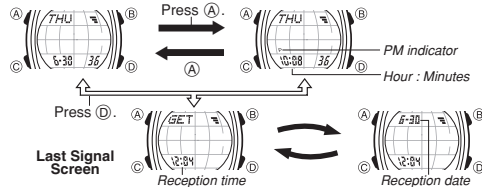


Setting the Digital Time and Date Manually

Make sure you select your Home City code before you change the current time and date settings. World Time Mode times are all displayed in accordance with the Timekeeping Mode settings. Because of this, World Time Mode times will not be correct if you do not select the proper Home City code before setting the time and date in the Timekeeping Mode.

Operation Guide 3770 3771 4308 4309 CASIO®

To set the current digital time and date manually

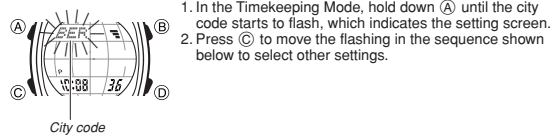

- In the Timekeeping Mode, hold down (A) until the city code starts to flash, which indicates the setting screen.
- Press (C) to move the flashing in the sequence shown below to select other settings.

3. When the setting you want to change is flashing, use (B) and/or (D) to change it as described below.

Screen:	To do this:	Do this:
BER	Change the city code	Use (D) (east) and (B) (west).
AUTO	Cycle between Daylight Saving Time (ON), Standard Time (OFF), and Auto DST (AUT)	Press (D).
12H	Toggle between 12-hour (12H) and 24-hour (24H) timekeeping	Press (D).
00	Reset the seconds to 00	Press (D).
36	Toggle the illumination duration setting between 1.5 seconds (1.5) and 2.5 seconds (2.5)	Press (B).
10:08	Change the hour or minutes	Use (D) (+) and (B) (-).
2005	Change the year	
TU	Change the month or day	

- See "City Code Table" for a complete list of available city codes.
- For information about settings other than the time and date, see the following.

Illumination duration: Illuminatio

- Press (A) to exit the setting screen.
- When you exit the setting screen, the analog hands are adjusted automatically to match the digital time. See "Analog Timekeeping" for more information.

Note

- Auto DST (AUT) can be selected only while LIS, LON, ECH, MAD, PAR, MIL, ROM, BER, STO, or ATH is selected as the Home City code. For more information, see "Daylight Saving Time (DST)" below.

Daylight Saving Time (DST)


Daylight Saving Time (summer time) advances the digital time setting by one hour from Standard Time. Remember that not all countries or even local areas use Daylight Saving Time.

The time calibration signals transmitted from Rugby and Mainflingen includes both Standard Time and DST data. When the Auto DST setting is turned on, the watch switches between Standard Time and DST (summer time) automatically in accordance with the Rugby and Mainflingen signals.

- The default DST setting is Auto DST (AUT) whenever you select LIS, LON, ECH, MAD, PAR, MIL, ROM, BER, STO, or ATH as your Home City code.
- If you experience problems receiving the time calibration signal in your area, it is probably best to switch between Standard Time and Daylight Saving Time (summer time) manually.

To change the Daylight Saving Time (summer time) setting

- In the Timekeeping Mode, hold down (A) until the city code starts to flash, which indicates the setting screen.
- Press (C) once and the DST setting screen appears.
- Use (D) to cycle through the DST settings in the sequence shown below.



- When the setting you want is selected, press (A) to exit the setting screen.
- The DST indicator appears on the display to indicate that Daylight Saving Time is turned on.

Analog Timekeeping

The analog time of this watch is synchronized with the digital time. The analog time setting is adjusted automatically whenever you change the digital time.

Note

- The hands for the analog timepiece move to adjust to a new setting whenever any of the following occurs.

When you change the digital time setting manually

When the digital time setting is changed by time calibration signal reception

When you change the Home City code and/or DST setting

- If the analog time does not match the digital time for any reason, use the procedure described under "To adjust the analog time" to match the analog setting to the digital setting.
- Whenever you need to adjust both the digital and the analog time settings manually, make sure you adjust the digital setting first.
- Depending on how much the hands have to move in order to adjust to the digital time, it may take some time before they stop moving.

To adjust the analog time

Modules 3770 and 4308



- In the Timekeeping Mode, press (C) five times to enter the Hand Setting Mode.
- Hold down (A) until the current digital time starts to flash, which indicates the setting screen.
- Use (D) and (B) to adjust the analog setting as described below.

Modules 3771 and 4309



When you want to do this:	Perform this button operation:
Move the hand setting forward 20 seconds	• Press (D).
Move the hand setting a short way forward at high speed	• Hold down (D). • Release (D) when the hands reach the setting you want.
Move the hand setting a long way forward at high speed	• While holding down (D) to move the hands at high speed, press (B) to lock the high-speed hand movement. • To stop the hand movement, press any button. • Hand movement stops automatically if the hour hand makes one full (12-hour) revolution.

4. Press (A) to exit the setting screen.

- The minute hand will be adjusted slightly to match the seconds when you exit the setting screen.

To return to the Timekeeping Mode, press (C).

Reference

This section contains more detailed and technical information about watch operation. It also contains important precautions and notes about the various features and functions of this watch.

Auto Display



Auto Display continually changes the contents of the digital display.

To turn off Auto Display

Press any button to turn off Auto Display. This returns to the Timekeeping Mode.

To turn on Auto Display

In the Timekeeping Mode, hold down (C) for about three seconds until the watch beeps.

Note

- Calibration signal reception is disabled while Auto Display is being performed.
- Auto Display cannot be performed while a setting screen is on the display.

Auto Return Features

- If you leave the watch in the Alarm or Hand Setting Mode for two or three minutes without performing any operation, it automatically returns to the Timekeeping Mode.
- If you leave the watch with a flashing setting on the display for two or three minutes without performing any operation, the watch automatically exits the setting screen.

Scrolling

The (B) and (D) buttons are used in various modes and setting screens to scroll through data on the display. In most cases, holding down these buttons during a scroll operation scrolls through the data at high speed.

Initial Screens

When you enter the World Time Mode, the data you were viewing when you last exited the mode appears first.

Radio-controlled Timekeeping Precautions

- Strong electrostatic charge can result in the wrong time being set.
- Even when the watch is within the reception range of the transmitter, signal reception will be impossible if the signal is blocked by mountains or other geological formations between the watch and signal source.
- Signal reception is affected by weather, atmospheric conditions, and seasonal changes.
- The time calibration signal bounces off the ionosphere. Because of this, such factors as changes in the reflectivity of the ionosphere, as well as movement of the ionosphere to higher altitudes due to seasonal atmospheric changes or the time of day may change the reception range of the signal and make reception temporarily impossible.
- Even if the time calibration signal is received properly, certain conditions can cause the time setting to be off by up to one second.
- The current time setting in accordance with the time calibration signal takes priority over any time settings you make manually.
- The watch is designed to automatically update the date and day of the week for the period January 1, 2000 to December 31, 2099. Setting of the date by the time calibration signal cannot be performed starting from January 1, 2100.
- This watch can receive signals that differentiate between leap years and non-leap years.
- If you are in an area where proper time calibration signal reception is impossible, the watch keeps time within ± 15 seconds a month at normal temperature.
- If you have problems with proper time calibration signal reception or if the time setting is wrong after signal reception, check your current city code, DST (summer time), and auto receive settings. The following are the initial factory defaults for these settings.

Setting	Initial Factory Default
City code	LON (London) (Modules 4308 and 4309) BER (Berlin) (Modules 3770 and 3771)
DST (summer time)	AUT (Auto switching)
Auto receive	ON (Auto receive)

Operation Guide 3770 3771 4308 4309 CASIO®

Transmitters


This watch is designed to receive the time calibration signal transmitted from Rugby, England and the signal from Mainflingen, Germany. You can configure the watch to automatically select the transmitter that has the strongest signal.

Modules 4308 and 4309

In this case:	The watch does this:
The first signal auto search operation after factory default settings are in effect, or after the city code has been changed	1. Checks the Rugby signal first. 2. If the Rugby signal cannot be received, checks the Mainflingen signal.
Any case other than the above.	1. Checks the last successfully received signal first. 2. If the last successfully received signal cannot be received, checks the other signal.

Modules 3770 and 3771

In this case:	The watch does this:
The first signal auto search operation after factory default settings are in effect, or after the city code has been changed	1. Checks the Mainflingen signal first. 2. If the Mainflingen signal cannot be received, checks the Rugby signal.
Any case other than the above.	1. Checks the last successfully received signal first. 2. If the last successfully received signal cannot be received, checks the other signal.



- To find out the module number of your watch, look at its back cover. The Module number (3770, 3771, 4308, or 4309) will be engraved inside the box on the back cover.

Timekeeping

- Resetting the seconds to **00** while the current count is in the range of 30 to 59 causes the minutes to be increased by 1. In the range of 00 to 29, the seconds are reset to **00** without changing the minutes.
- The day of the week is automatically displayed in accordance with the date (year, month, and day) settings.
- The year can be set in the range of 2000 to 2099.
- The watch's built-in full automatic calendar makes allowances for different month lengths and leap years. Once you set the date, there should be no reason to change it except after you have the watch's battery replaced.
- The current time for all city codes in the Timekeeping Mode and World Time Mode is calculated in accordance with the Greenwich Mean Time (GMT) differential for each city, based on your Home City time setting.
- GMT differential is calculated by this watch based on Universal Time Coordinated (UTC*) data.
- UTC is the world-wide scientific standard of timekeeping. It is based upon carefully maintained atomic (cesium) clocks that keep time accurately to within microseconds. Leap seconds are added or subtracted as necessary to keep UTC in sync with the Earth's rotation. The reference point for UTC is Greenwich, England.*

12-hour/24-hour Timekeeping Formats

- The 12-hour/24-hour timekeeping format you select in the Timekeeping Mode is also applied in all other modes.
- With the 12-hour format, the PM indicator (P) appears on the display for times in the range of noon to 11:59 p.m. and no indicator appears for times in the range of midnight to 11:59 a.m.
 - With the 24-hour format, times are displayed in the range of 0:00 to 23:59, without any indicator.

Illumination Precautions

- Illumination may be hard to see when viewed under direct sunlight.
- Illumination automatically turns off whenever an alarm sounds.
- Frequent use of illumination runs down the battery.

City Code Table

City Code	City	GMT Differential	Other major cities in same time zone
PPG	Pago Pago	-11.0	
HNL	Honolulu	-10.0	Papeete
ANC	Anchorage	-09.0	Nome
YVR	Vancouver		San Francisco, Las Vegas, Seattle/Tacoma, Dawson City
LAX	Los Angeles	-08.0	
YEA	Edmonton		
DEN	Denver	-07.0	El Paso
MEX	Mexico City		
WVG	Winnipeg	-06.0	Houston, Dallas/Fort Worth, New Orleans
CHI	Chicago		
MIA	Miami		
YTO	Toronto	-05.0	Montreal, Detroit, Boston, Panama City, Havana, Lima, Bogota
NYC	New York		
CCS	Caracas	-04.0	La Paz, Santiago, Port Of Spain
YHZ	Halifax	-03.5	
YTT	St. Johns	-03.5	
RIO	Rio De Janeiro	-03.0	Sao Paulo, Buenos Aires, Brasilia, Montevideo
RAI	Praia	-01.0	
LIS	Lisbon	+00.0	Dublin, Casablanca, Dakar, Abidjan
LON	London		
BCN	Barcelona		
MAD	Madrid		
PAR	Paris	+01.0	Amsterdam, Algiers, Hamburg, Frankfurt, Vienna
MIL	Milan		
ROM	Rome		
BER	Berlin		
STO	Stockholm		
ATH	Athens		
CAI	Cairo	+02.0	Helsinki, Istanbul, Beirut, Damascus, Cape Town
JRS	Jerusalem		
MOW	Moscow	+03.0	Kuwait, Riyadh, Aden, Addis Ababa, Nairobi
JED	Jeddah		
THR	Tehran	+03.5	Shiraz
DXB	Dubai	+04.0	Abu Dhabi, Muscat
KBL	Kabul	+04.5	
KHI	Karachi	+05.0	Male
DEL	Delhi	+05.5	Mumbai, Kolkata
DAC	Dhaka	+06.0	Colombo
RGN	Yangon	+06.5	
BKK	Bangkok	+07.0	Jakarta, Phnom Penh, Hanoi, Vientiane
HKG	Hong Kong	+08.0	Singapore, Kuala Lumpur, Beijing, Taipei, Manila, Perth, Ulaanbaatar
SEL	Seoul	+09.0	Pyongyang
TYO	Tokyo		
ADL	Adelaide	+09.5	Darwin
GUM	Guam		
SYD	Sydney	+10.0	Melbourne, Rabaul
NOU	Noumea	+11.0	Port Vila
WLG	Wellington	+12.0	Christchurch, Nadi, Nauru Island

- * Based on data as of December 2004.