
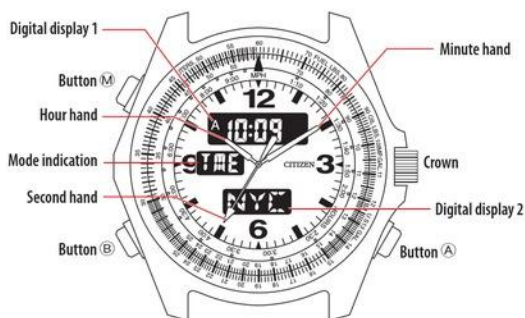


- To see details of specifications and operations, refer to the instruction manual:  C460 instruction manual

Component identification



- Actual appearance may differ from the illustration.
- Refer also to our web page for detail of usage of the scale and bezel on the watch. (<http://www.citizenwatch-global.com/support/pdf/enhanced/e.pdf>)

Using EL lights

- The EL lights are turned on when you press button **A** while the crown is pushed in and the mode is [TME], [CAL] or [SET].
- The lights are also turned on when pressing button **A** or **B** during time measurement using the chronograph.


Setting the time

Setting the time of the analog section

- Pull out the crown when the second hand points 0 second.**
The second hand stops.
- Rotate the crown to set the time.**
 - Move the hands 4 or 5 minutes forward and move them back to the right time to set the time more precisely.
- Push in the crown in accordance with a reliable time source to finish the procedure.**
The second hand starts moving.

Setting the time of the digital section

- Press button **M** to cancel setting of the time of the digital section.
 - The setting is automatically canceled in about 2 minutes without any operation during the setting.
- Press and release the upper left button **M** repeatedly to change the mode to [TME].**
 - Press and release the lower left button **B** repeatedly to indicate an area name you want on the digital display 2.**
 - For area names, refer to the table on "Using the world time".
 - Pressing and releasing button **A** while Pressing and holding button **B** also change the area name indication.
 - Press and hold the lower left button **B** for about 2 seconds.**
[S.T.] and [ON] or [OFF] starts blinking and the time becomes adjustable.
The blinking part is the target to adjust.
 - Press and release the lower left button **B** repeatedly to change the target to be set.**
 - Each time you press button **B**, the target changes as follows:

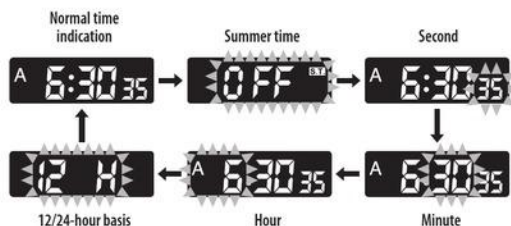

- Press and release the lower right button **A** to adjust the target.**
 - Press button **A** in accordance with a reliable time source when setting the second.
 - Pressing and holding button **A** changes indication continuously when setting the minute and the hour.
 - "A" or "P" is displayed to indicate AM or PM in 12-hour basis indication.
- Repeat steps 4 and 5 to set other targets.**
- Press and release the upper left button **M** to finish the procedure.**



Setting the calendar

The calendar of this watch does not have to be adjusted manually until Thursday, December 31, 2099 including leap years. (perpetual calendar)

- Press button **M** to cancel setting of the calendar.
- The setting is automatically canceled in about 2 minutes without any operation during the setting.

1. Press and release the upper left button **M** repeatedly to change the mode to [CAL].

2. Press and release the lower left button **B** repeatedly to indicate an area name you want on the digital display 2.


- Press and hold the lower right button **A** for about 2 seconds to switch indication to an area name if the day of week is indicated.
- For area names, refer to the table on "Using the world time".
- Pressing and releasing button **A** while Pressing and holding button **B** also change the area name indication.

3. Press and hold the lower left button **B** for about 2 seconds.

- The month indication starts blinking and the calendar becomes adjustable.
- The blinking part is the target to adjust.

4. Press and release the lower left button **B** repeatedly to change the target to be set.

- Each time you press button **B**, the target changes as follows:

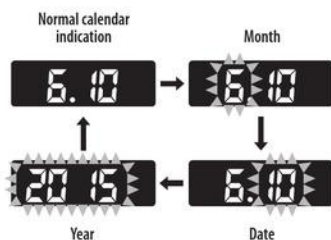

5. Press and release the lower right button **A** to adjust the target.

- Pressing and holding button **A** changes indication continuously.

6. Repeat steps 4 and 5 to set other targets.

7. Press and release the upper left button **M** to finish the procedure.

- The day of week is set automatically.

Using the world time

1. Press and release the upper left button **M** repeatedly to change the mode to [TME].

- Choose [CAL] to see calendar.

2. Press and release the lower left button **B** repeatedly to choose an area name on the digital display 2.

- The time or calendar of the chosen area is indicated on the digital display 1.
- Pressing and releasing button **A** while Pressing and holding button **B** also change the area name indication.

Table of time zones and representative areas

- The time zone in the table is based on UTC (Coordinated Universal Time).
- Countries or regions may change time zones for various reasons.

| Time zone | Area name | Representative area | Time zone | Area name | Representative area |
|-----------|-----------|----------------------------|-----------|-----------|---------------------|
| 0 | UTC | Coordinated Universal Time | +9 | TYO | Tokyo |
| | LON | London | +10 | SYD | Sydney |
| | PAR | Paris | +11 | NOU | Noumea |
| +1 | ROM | Rome | +12 | AKL | Auckland |
| | CAI | Cairo | -10 | HNL | Honolulu |
| +2 | IST | Istanbul | -9 | ANC | Anchorage |
| | MOW | Moscow | -8 | LAX | Los Angeles |
| +3 | KWI | Kuwait | -7 | DEN | Denver |
| | DXB | Dubai | -6 | CHI | Chicago |
| +4 | KHI | Karachi | | MEX | Mexico City |
| +5 | DEL | New Delhi | -5 | NYC | New York |
| +6 | DAC | Dhaka | | YUL | Montreal |
| +7 | BKK | Bangkok | -4 | CCS | Caracas |
| | SIN | Singapore | | -3 | RIO |
| +8 | HKG | Hong Kong | BUE | | Buenos Aires |
| | BJS | Beijing | | | |



Using the zone-set function

You can hide unnecessary ones in the 30 areas and UTC, which the watch can indicate the time of; you can also activate/deactivate summer time for those areas separately.

- Press button **M** to cancel setting.
- The setting is automatically canceled in about 2 minutes without any operation during the setting.

- 1. Press and release the upper left button **M** repeatedly to change the mode to [SET].**
- 2. Press and release the lower left button **B** repeatedly to choose an area name on the digital display 2.**
 - Pressing and releasing button **A** while Pressing and holding button **B** also change the area name indication.
- 3. Press and hold the lower left button **B** for about 1 second.**

"ON" or "OFF" and the area name starts blinking and display/hide of the area becomes adjustable.
- 4. Press and release the lower right button **A** to select "ON" (display) or "OFF" (hide) of the area.**
- 5. Press and release the lower left button **B**.**

"ON" or "OFF" and "S.T." (summer time) starts blinking and the summer time setting becomes adjustable.
- 6. Press and release the lower right button **A** to set the summer time.**
- 7. Repeat steps 2 to 6 to set other areas.**
- 8. Press and release the upper left button **M** to finish the procedure.**

Resetting the watch — All Reset

- 1. Pull out the crown.**
- 2. Press and release buttons **A**, **B** and **M** at the same time.**

All the digital indication lights up.
- 3. Push in the crown.**

The alarm sounds and the digital indication is turned off.

After All Reset

After All Reset, set the time and calendar and other settings. Set also the alarm.

